


2012 - Mazda6 - Suspension

REAR SUSPENSION LOCATION INDEX

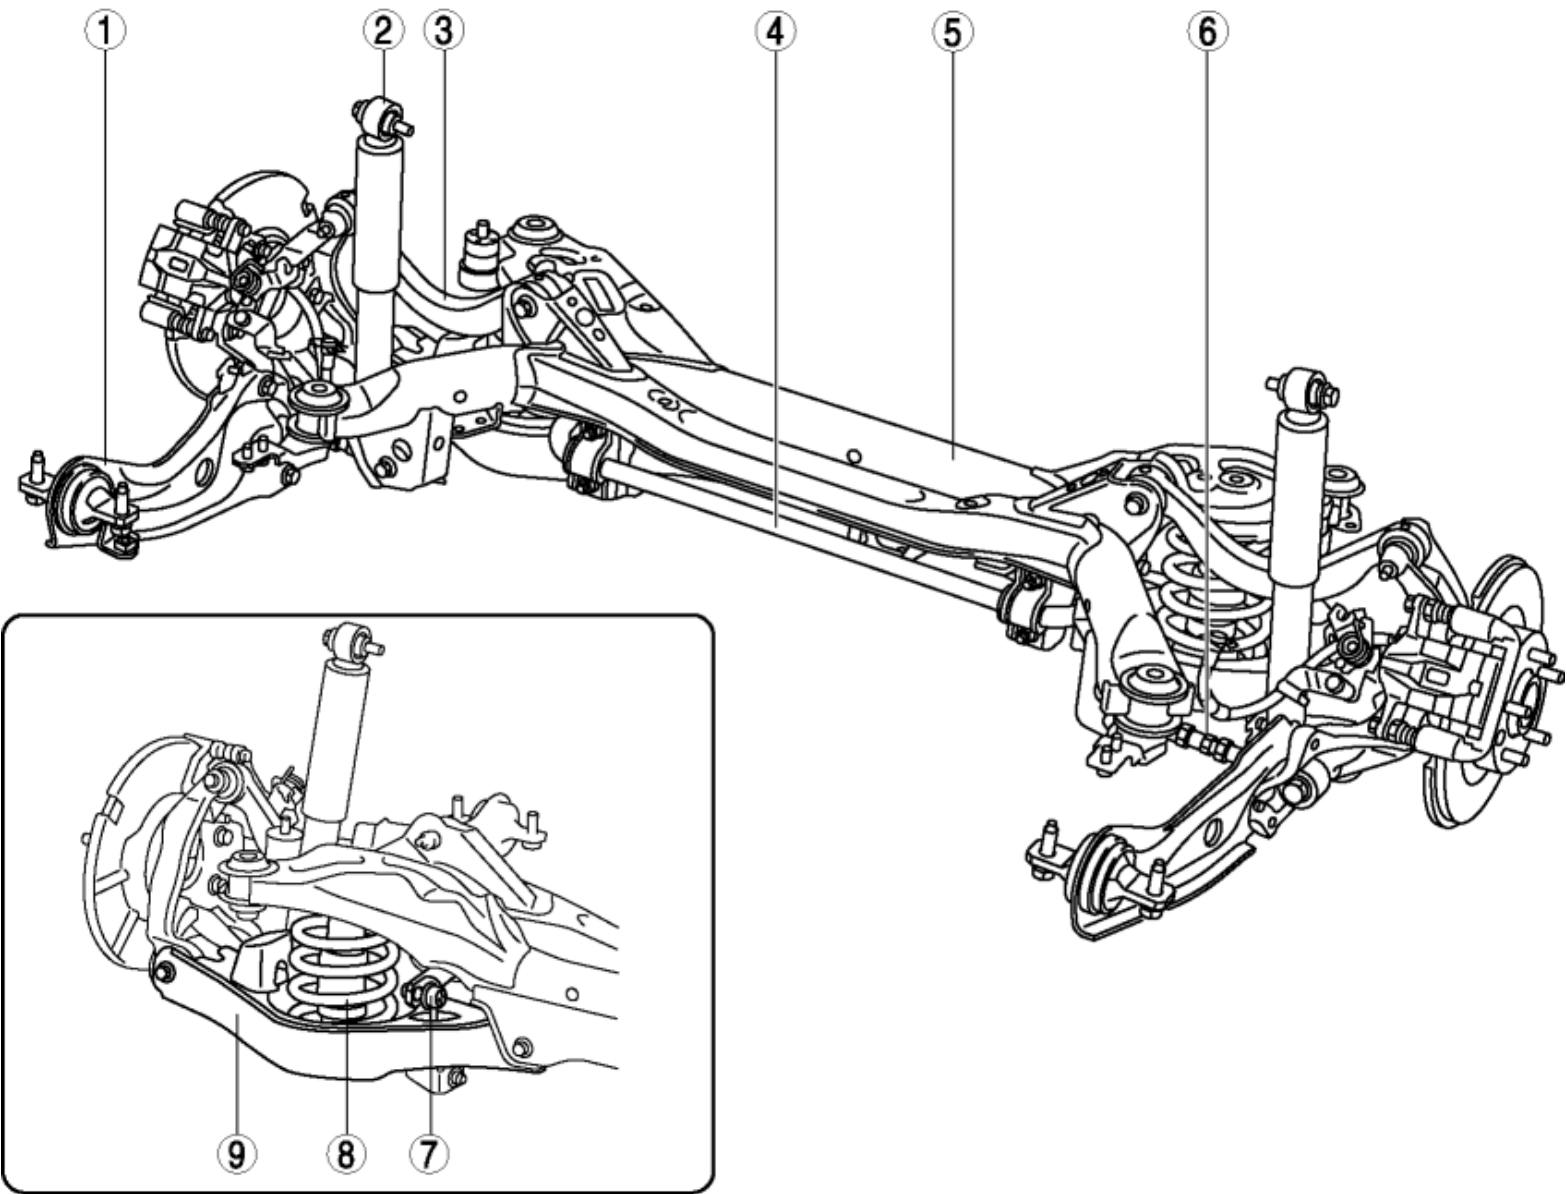


1	Trailing link (See REAR TRAILING LINK REMOVAL/ INSTALLATION.)
2	Rear shock absorber (See REAR SHOCK ABSORBER REMOVAL/ INSTALLATION.) (See REAR SHOCK ABSORBER INSPECTION.) (See REAR SHOCK ABSORBER DISPOSAL.)

3	Rear upper arm (See REAR UPPER ARM REMOVAL/ INSTALLATION.)
4	Rear stabilizer (See REAR STABILIZER REMOVAL/ INSTALLATION.)
5	Rear crossmember (See REAR CROSSMEMBER REMOVAL/ INSTALLATION.)
6	Rear lateral link (See REAR LATERAL LINK REMOVAL/ INSTALLATION.)
7	Stabilizer control link (See REAR STABILIZER CONTROL LINK INSPECTION.)
8	Rear coil spring (See REAR COIL SPRING REMOVAL/ INSTALLATION.)
9	Rear lower arm (See REAR LOWER ARM REMOVAL/ INSTALLATION.)

[< Previous](#) [Next >](#)

2012 - Mazda6 - Suspension

REAR SUSPENSION LOCATION INDEX

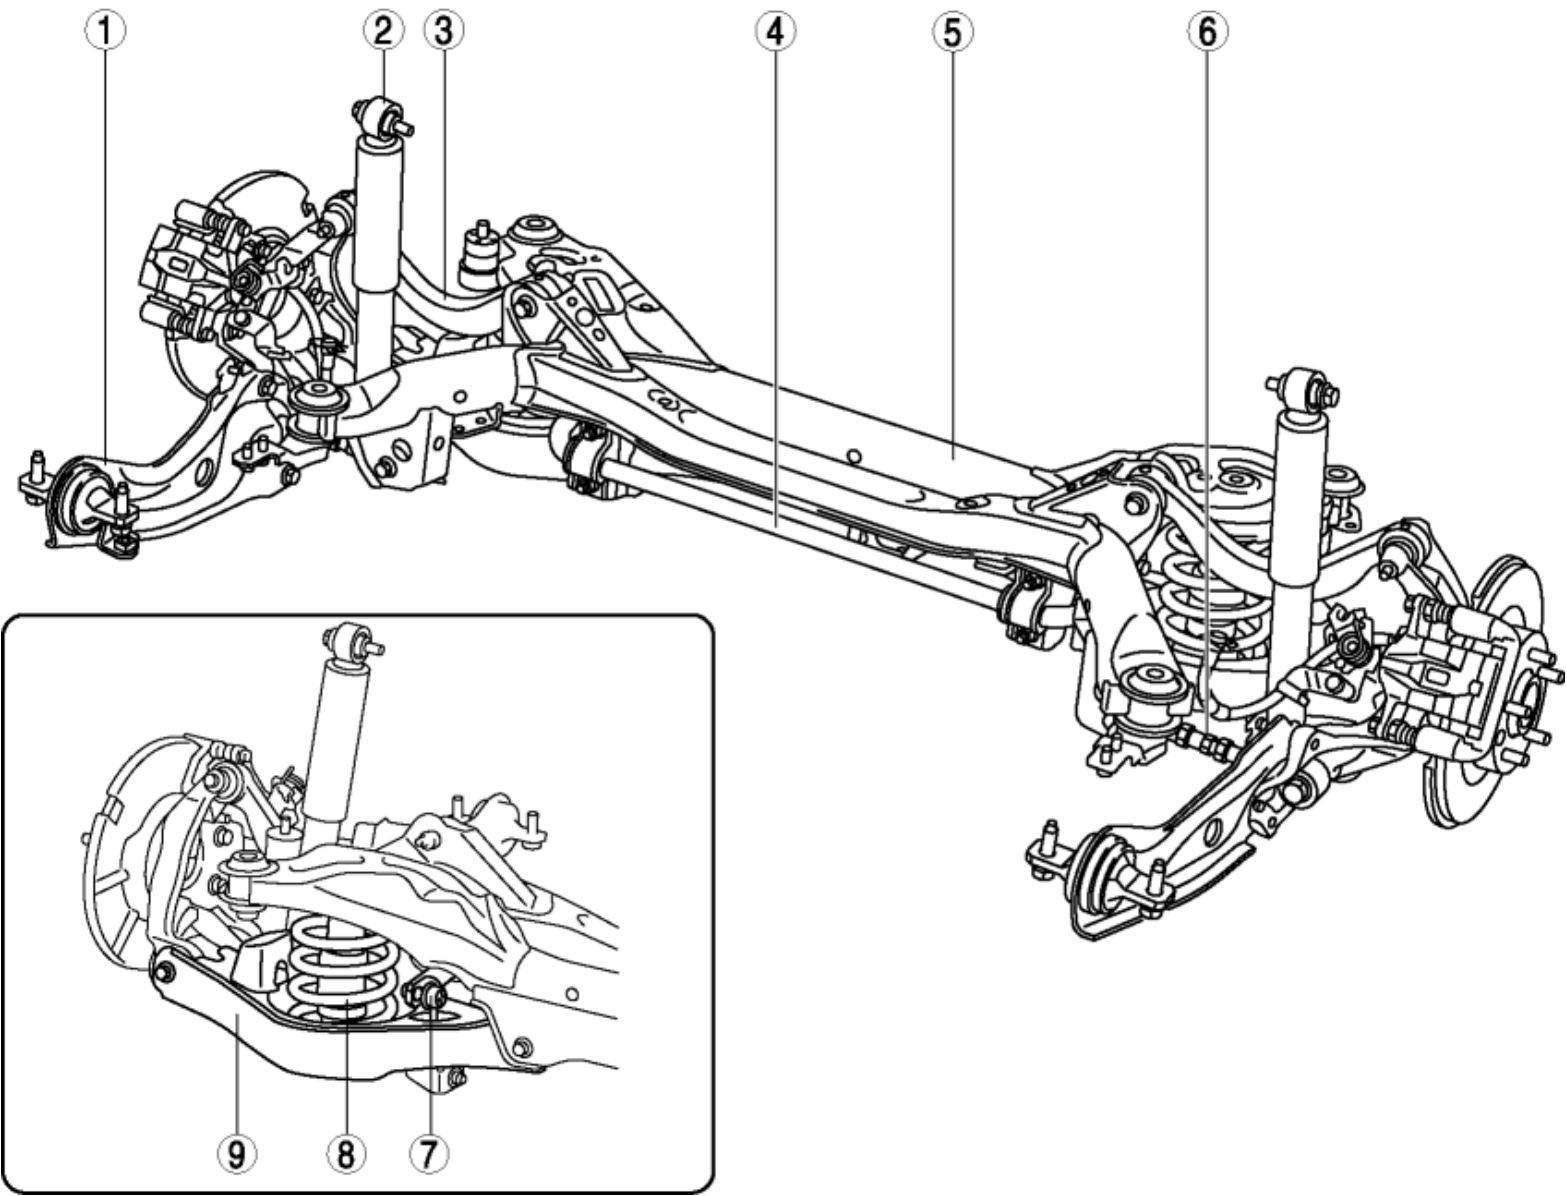

1	Trailing link (See REAR TRAILING LINK REMOVAL/ INSTALLATION.)
2	Rear shock absorber (See REAR SHOCK ABSORBER REMOVAL/ INSTALLATION.) (See REAR SHOCK ABSORBER INSPECTION.) (See REAR SHOCK ABSORBER DISPOSAL.)

3	Rear upper arm (See REAR UPPER ARM REMOVAL/ INSTALLATION.)
4	Rear stabilizer (See REAR STABILIZER REMOVAL/ INSTALLATION.)
5	Rear crossmember (See REAR CROSSMEMBER REMOVAL/ INSTALLATION.)
6	Rear lateral link (See REAR LATERAL LINK REMOVAL/ INSTALLATION.)
7	Stabilizer control link (See REAR STABILIZER CONTROL LINK INSPECTION.)
8	Rear coil spring (See REAR COIL SPRING REMOVAL/ INSTALLATION.)
9	Rear lower arm (See REAR LOWER ARM REMOVAL/ INSTALLATION.)

[< Previous](#) [Next >](#)