


2012 - Mazda6 - Suspension

REAR STABILIZER REMOVAL/ INSTALLATION

- 1. Remove in the order indicated in the table.
- 2. Install in the reverse order of removal.

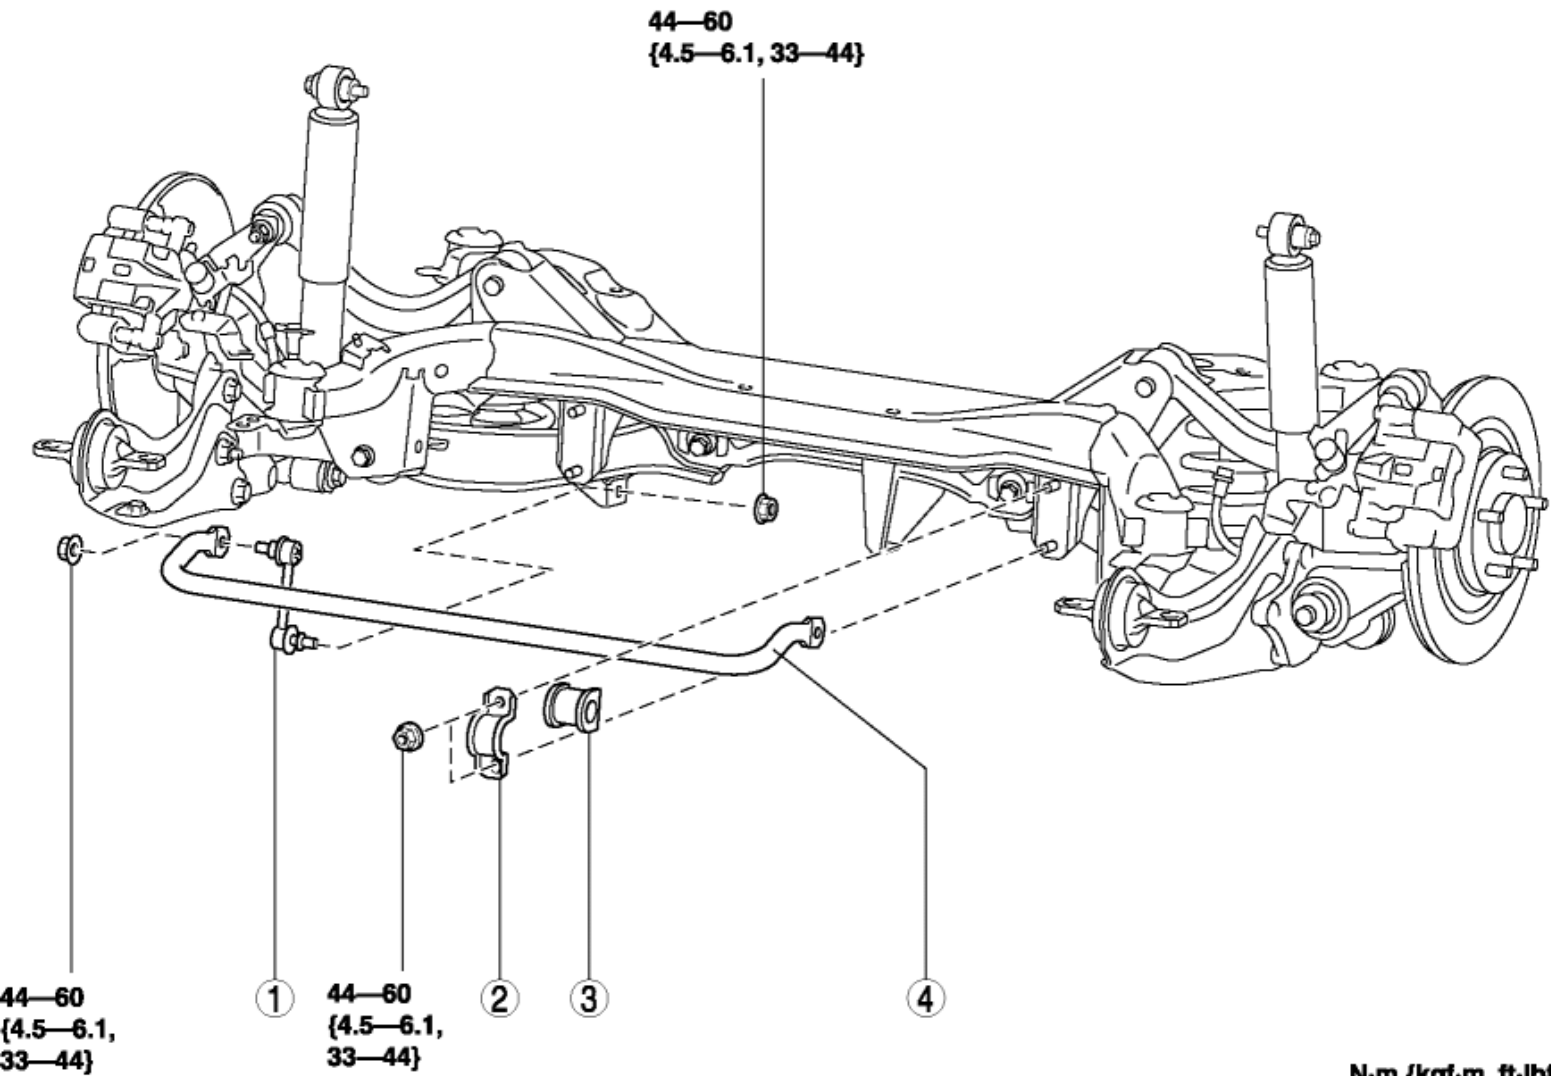

N·m {kgf·m, ft·lbf}


1	Stabilizer control link
2	Stabilizer bracket
	(See Bushings and Stabilizer Bracket Installation Note .)
3	Bushing
	(See Bushings and Stabilizer Bracket Installation Note .)

4Rear stabilizer

(See [Rear Stabilizer Installation Note.](#))


Rear Stabilizer Installation Note

1. Install the rear stabilizer so that the identification mark faces to the right side of the vehicle.

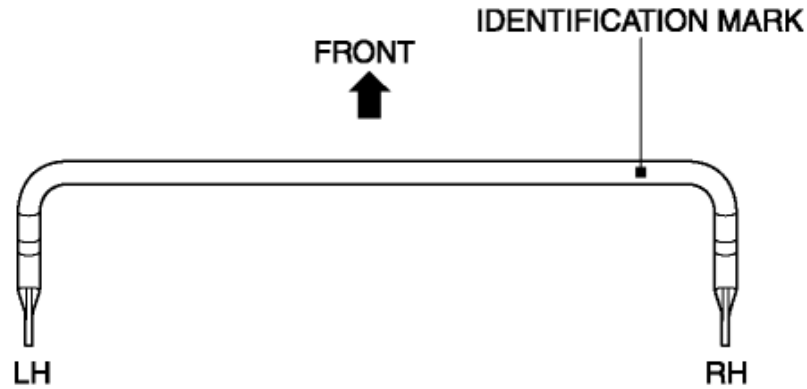


Bushing and Stabilizer Bracket Installation Note

1. Install the bushing and stabilizer bracket with the outer side of the identification mark.

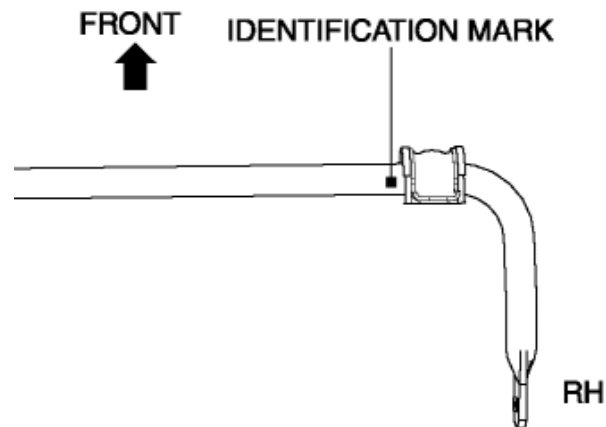


2. Tighten the nuts in order indicated in the figure.

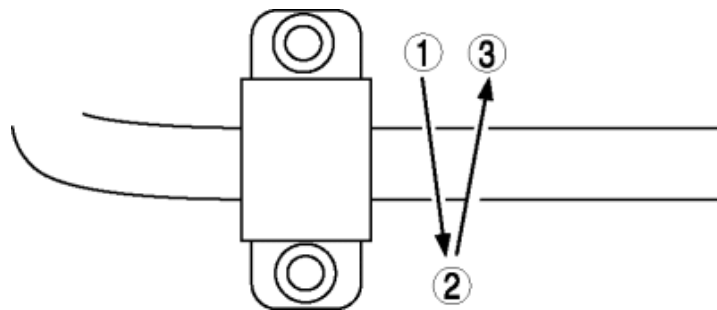

2012 - Mazda6 - Suspension

REAR STABILIZER REMOVAL/ INSTALLATION

- 1. Remove in the order indicated in the table.
- 2. Install in the reverse order of removal.

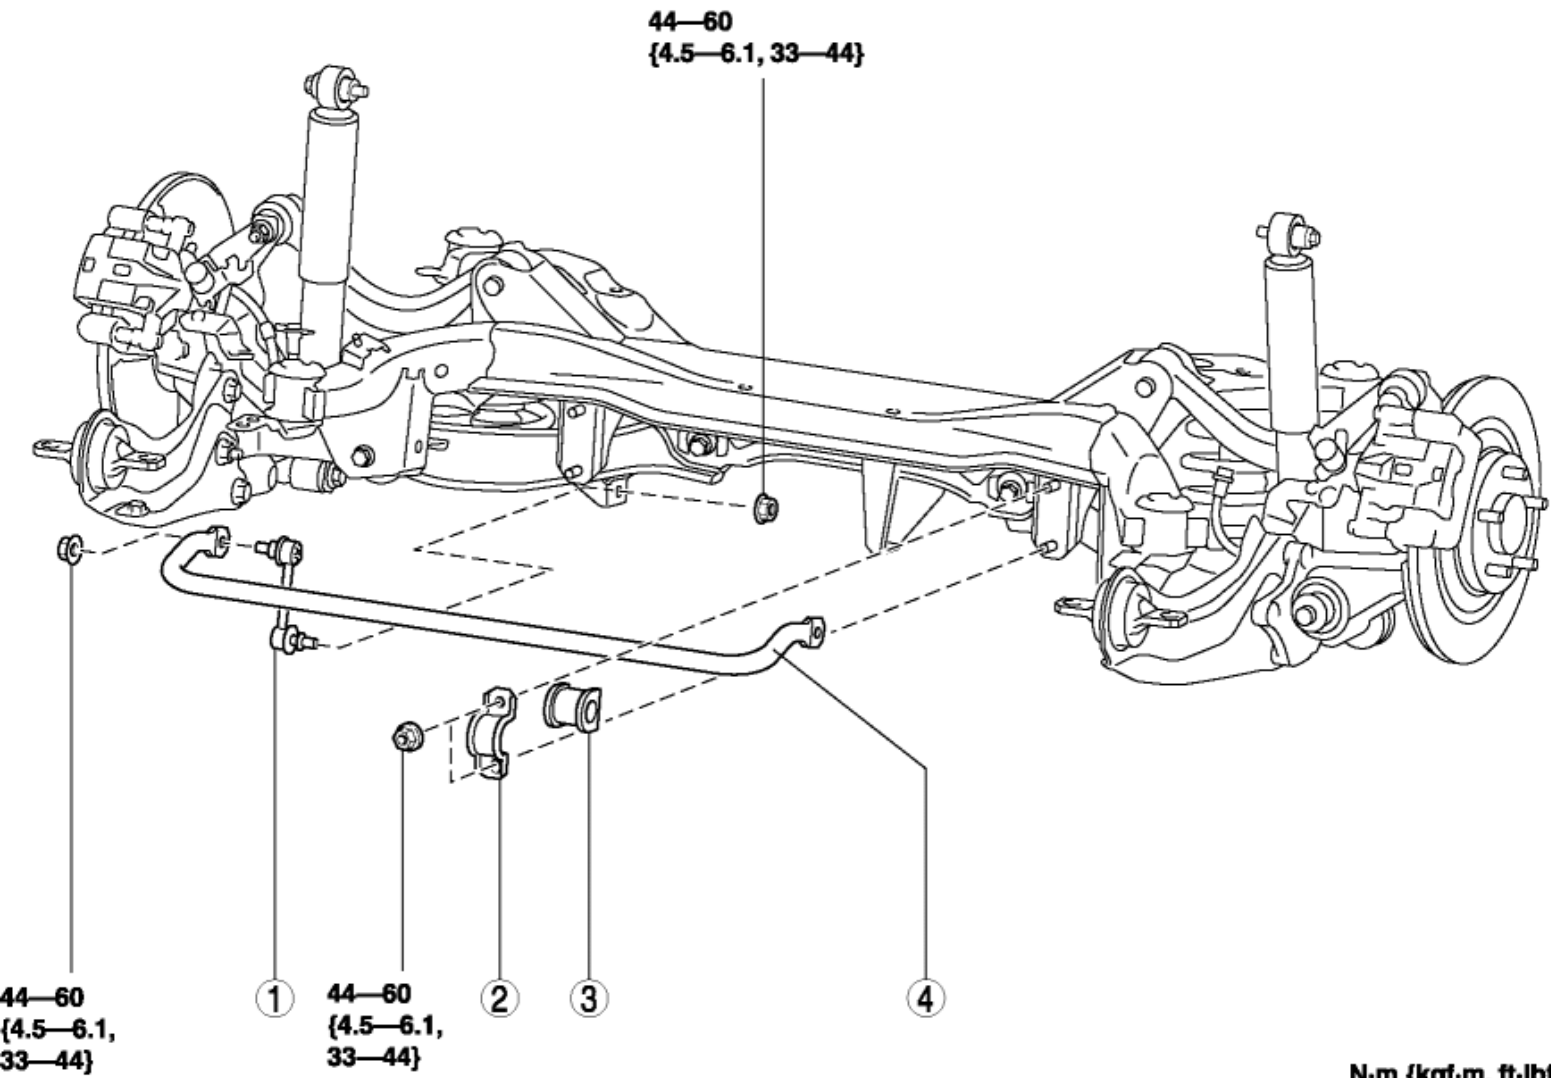


1	Stabilizer control link
2	Stabilizer bracket (See Bushings and Stabilizer Bracket Installation Note.)
3	Bushing (See Bushings and Stabilizer Bracket Installation Note.)

4Rear stabilizer

(See [Rear Stabilizer Installation Note.](#))


Rear Stabilizer Installation Note

1. Install the rear stabilizer so that the identification mark faces to the right side of the vehicle.

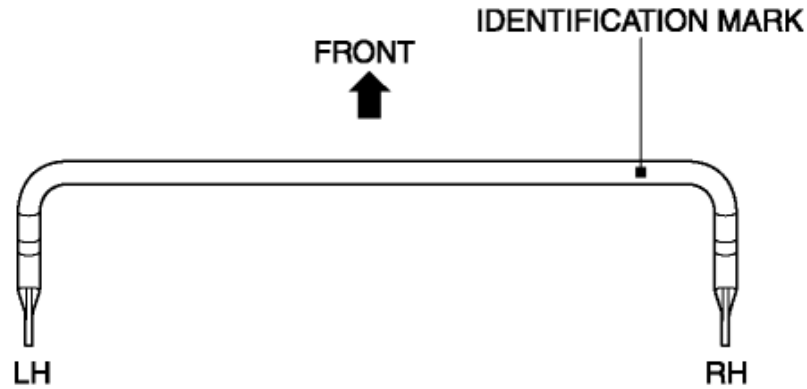

Bushing and Stabilizer Bracket Installation Note

1. Install the bushing and stabilizer bracket with the outer side of the identification mark.

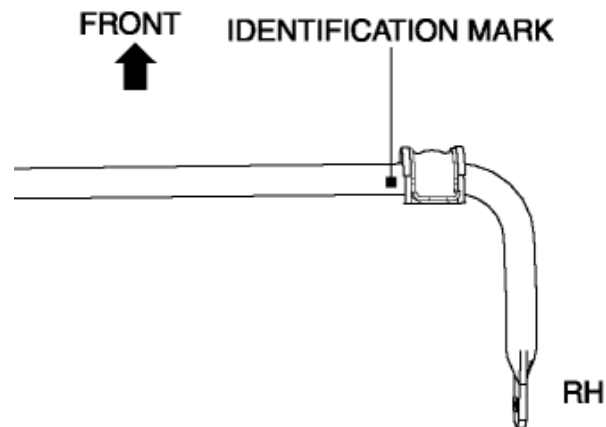

2. Tighten the nuts in order indicated in the figure.

