


2012 - Mazda6 - Suspension

REAR LOWER ARM REMOVAL/ INSTALLATION

1. Remove the rear coil spring. (See [REAR COIL SPRING REMOVAL/ INSTALLATION.](#))
2. Remove the rear lower arm.

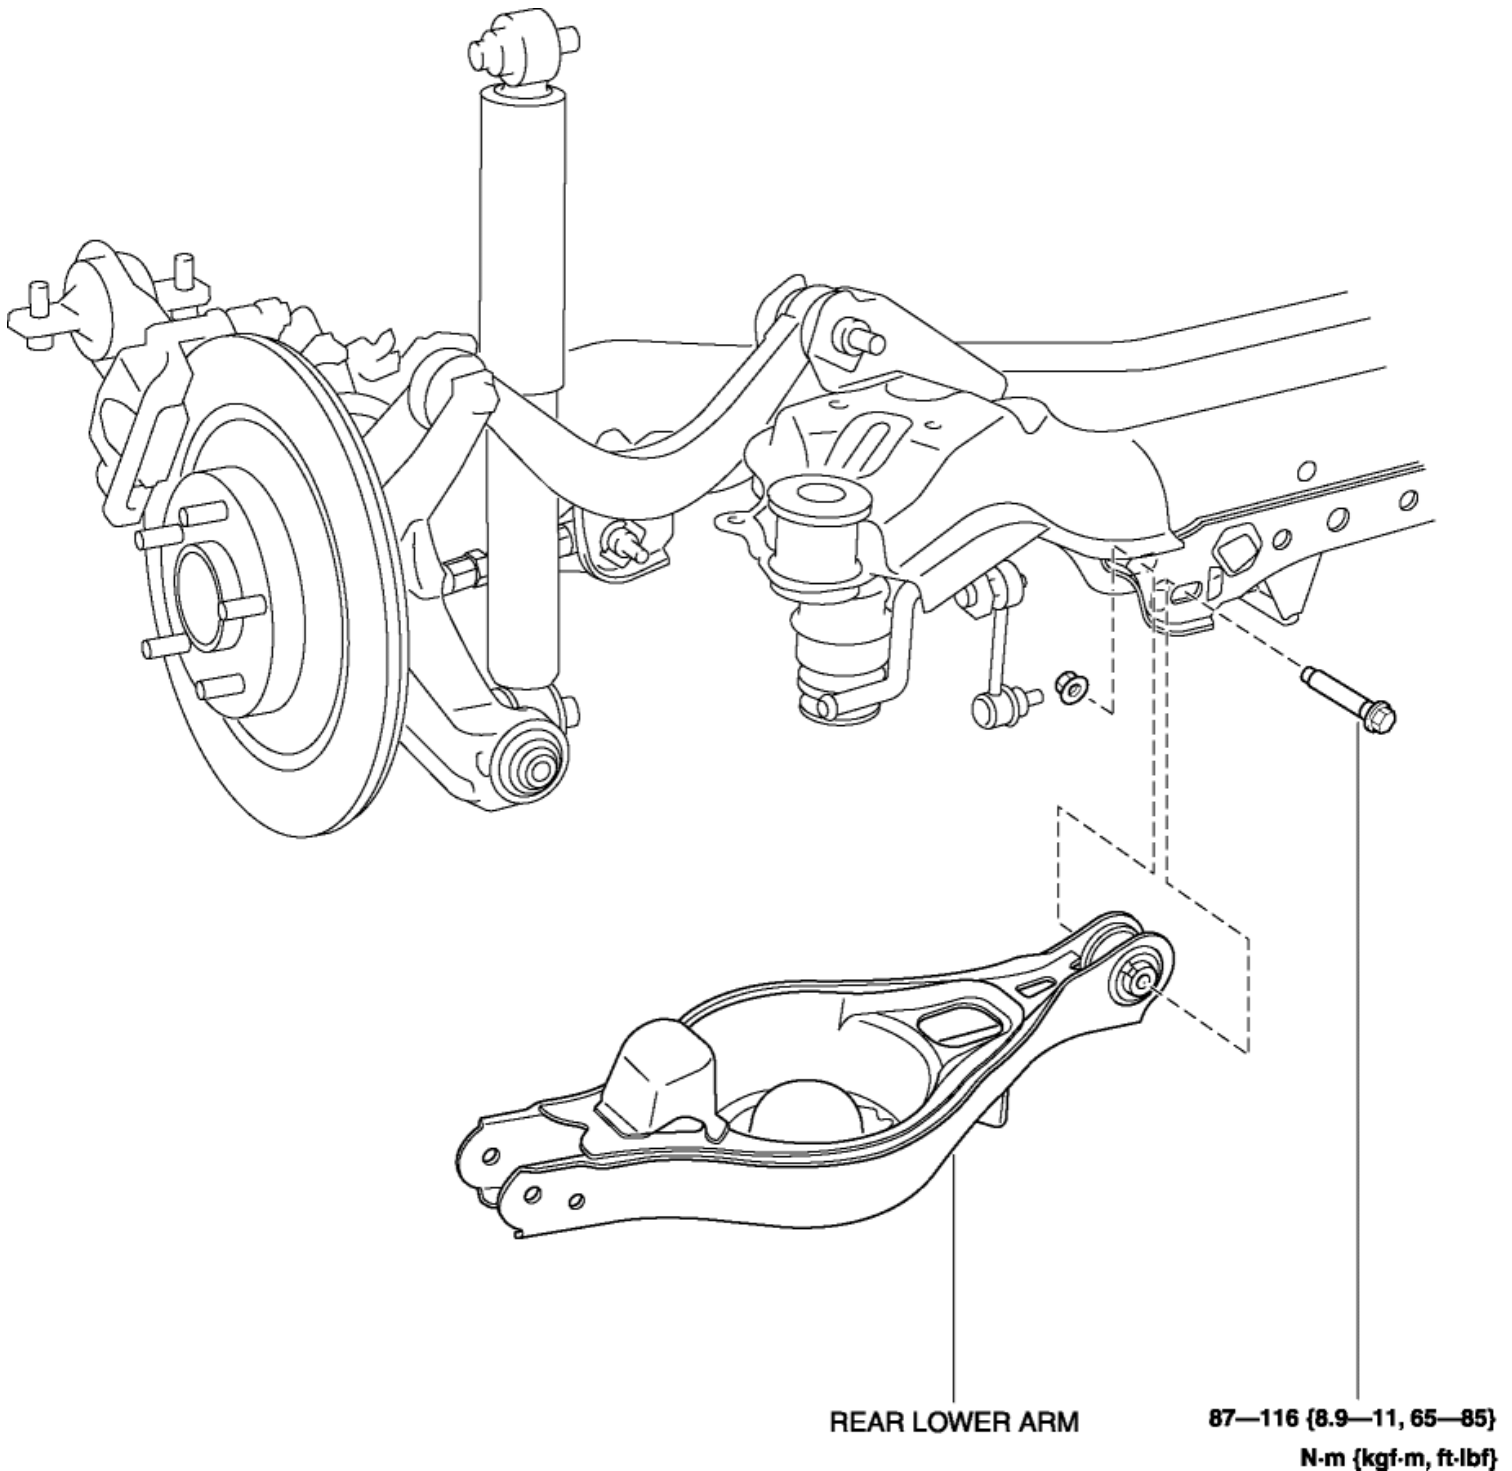

3. Install the rear coil spring. (See [REAR COIL SPRING REMOVAL/ INSTALLATION.](#))
4. Install the rear lower arm.

5. Inspect the rear wheel alignment. (See [REAR WHEEL ALIGNMENT](#).)

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Suspension

REAR LOWER ARM REMOVAL/ INSTALLATION

1. Remove the rear coil spring. (See [REAR COIL SPRING REMOVAL/ INSTALLATION.](#))
2. Remove the rear lower arm.

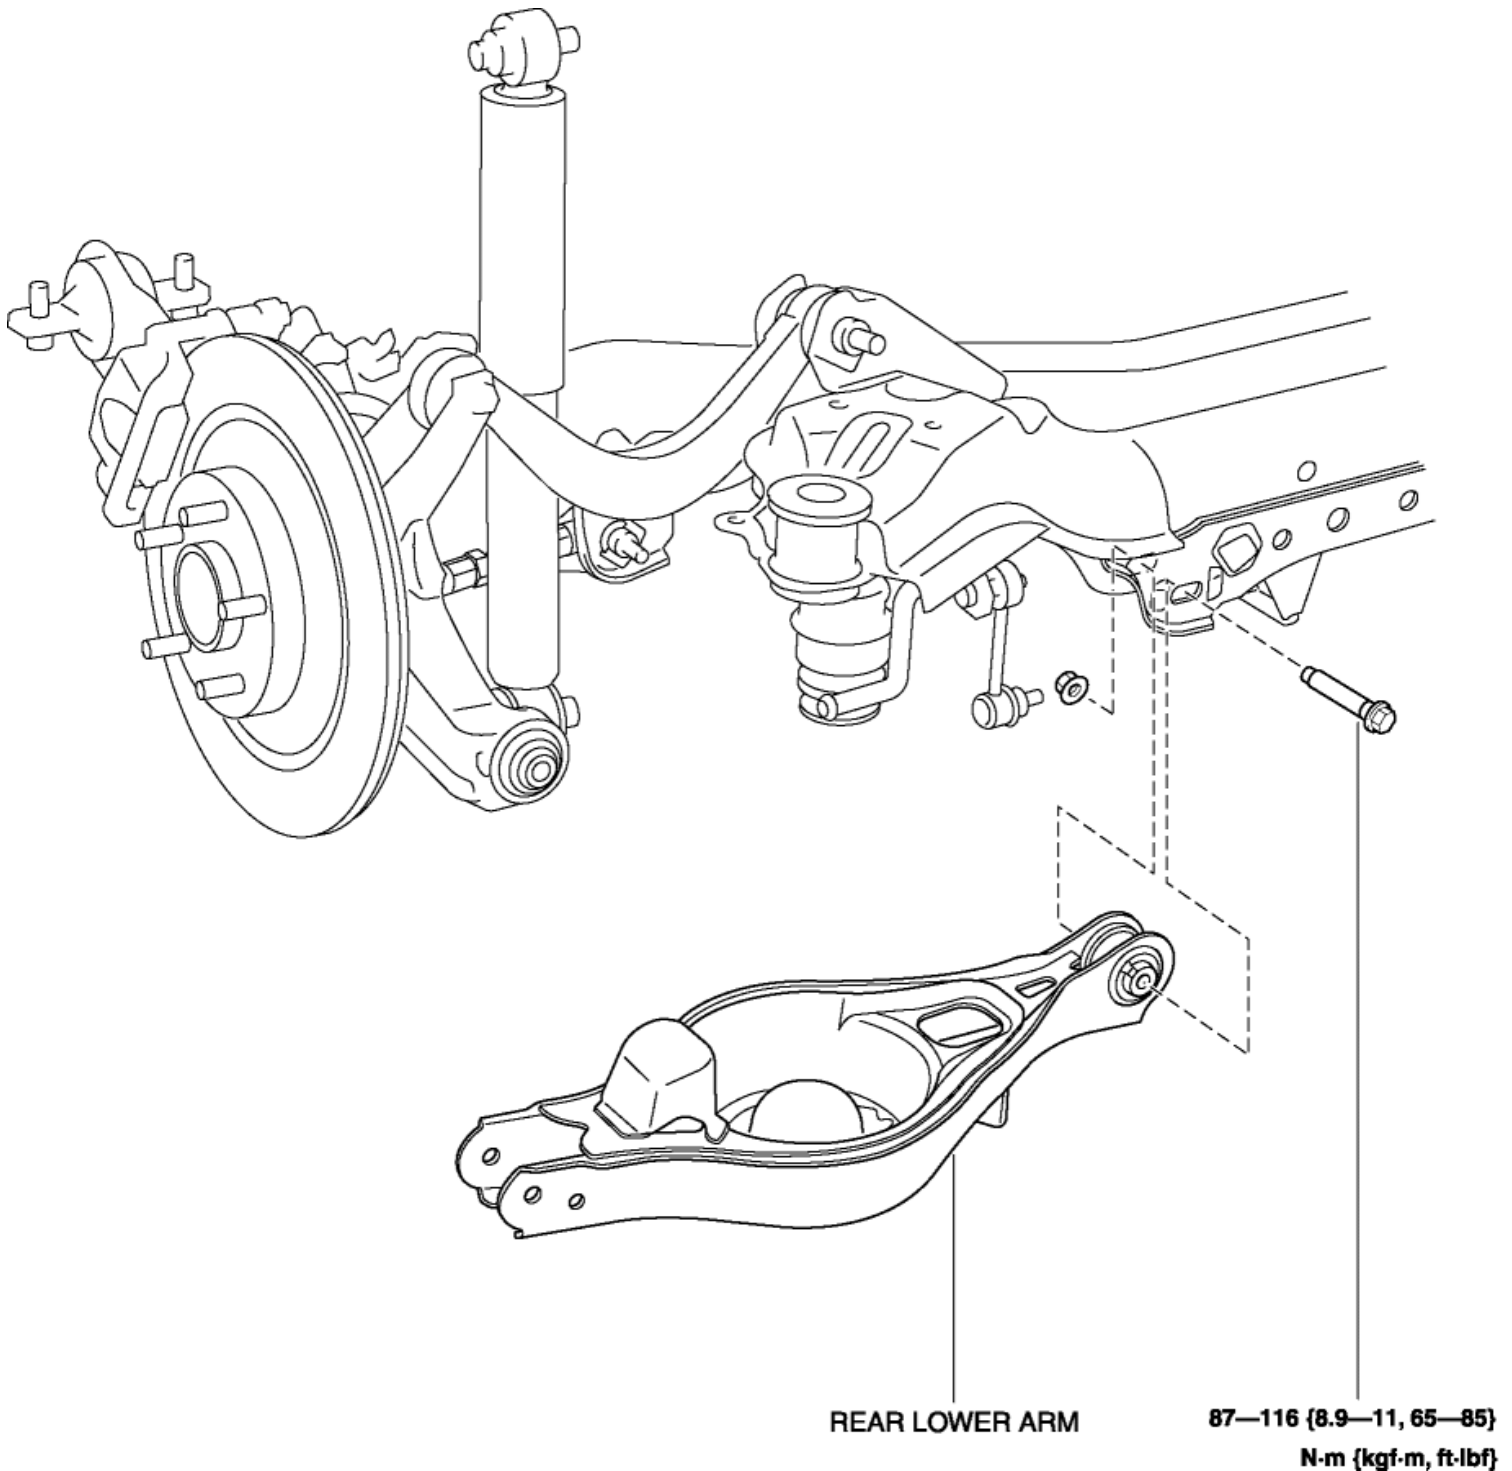

3. Install the rear coil spring. (See [REAR COIL SPRING REMOVAL/ INSTALLATION.](#))
4. Install the rear lower arm.

5. Inspect the rear wheel alignment. (See [REAR WHEEL ALIGNMENT](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.