


2012 - Mazda6 - DriveLine/ Axle

FRONT AXLE LOCATION INDEX

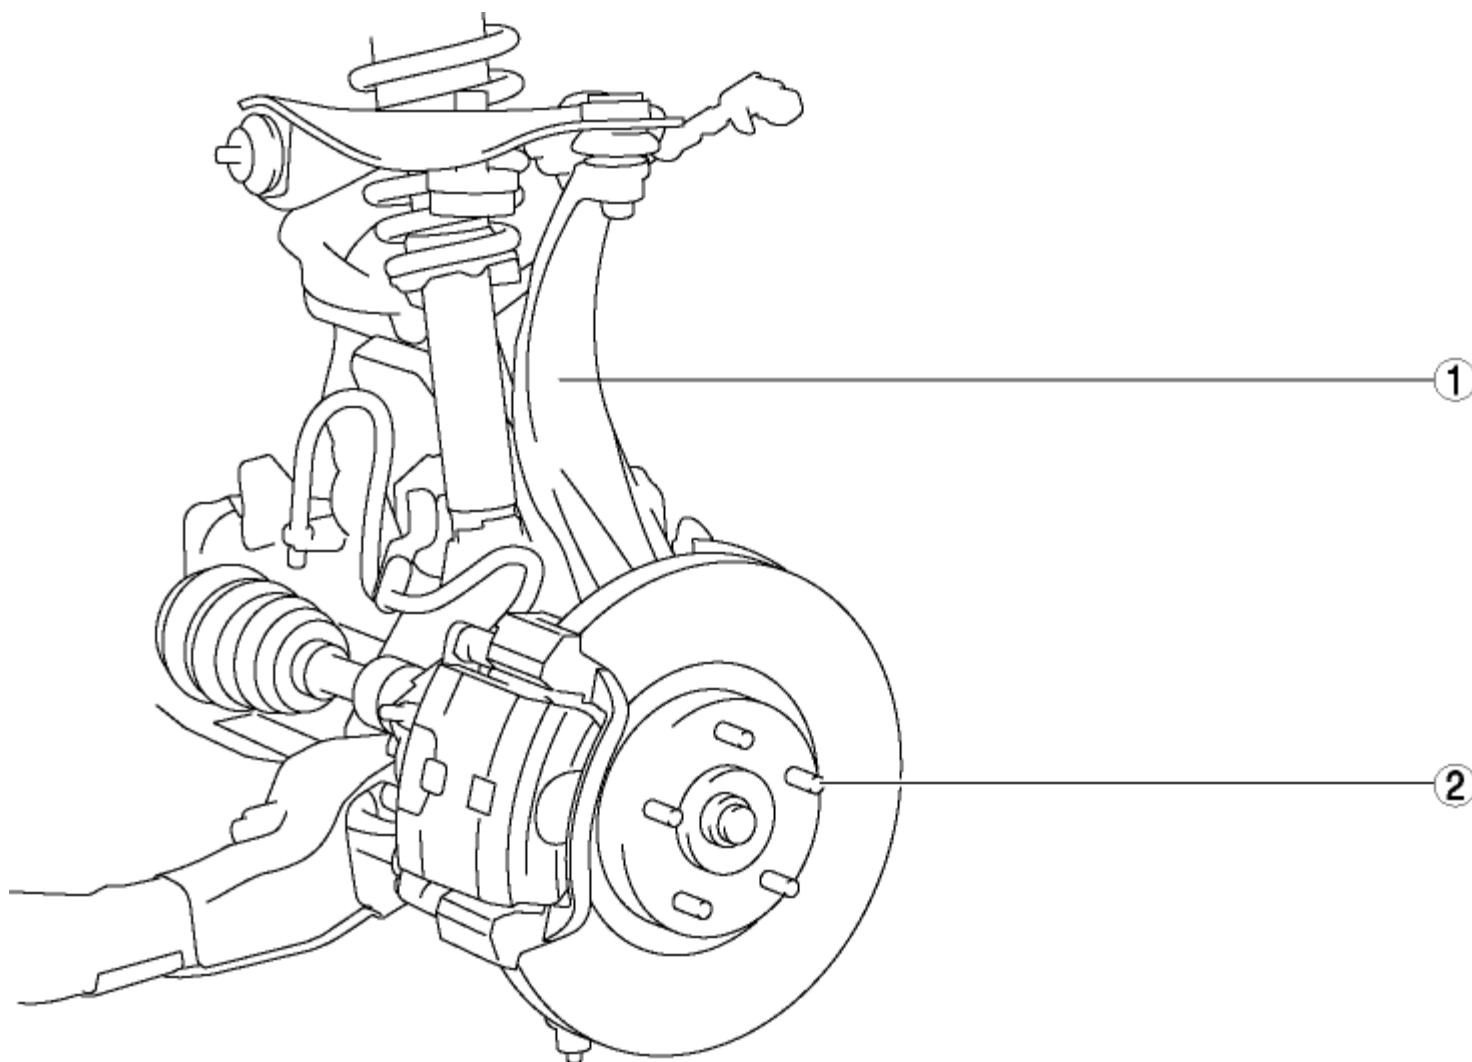

1 Wheel hub, steering knuckle

(See [WHEEL HUB, STEERING KNUCKLE INSPECTION.](#))

(See [WHEEL HUB, STEERING KNUCKLE REMOVAL/ INSTALLATION.](#))


(See [WHEEL HUB, STEERING KNUCKLE DISASSEMBLY/ ASSEMBLY.](#))

2 Hub bolt

(See [FRONT WHEEL HUB BOLT REPLACEMENT.](#))

2012 - Mazda6 - DriveLine/ Axle

FRONT AXLE LOCATION INDEX

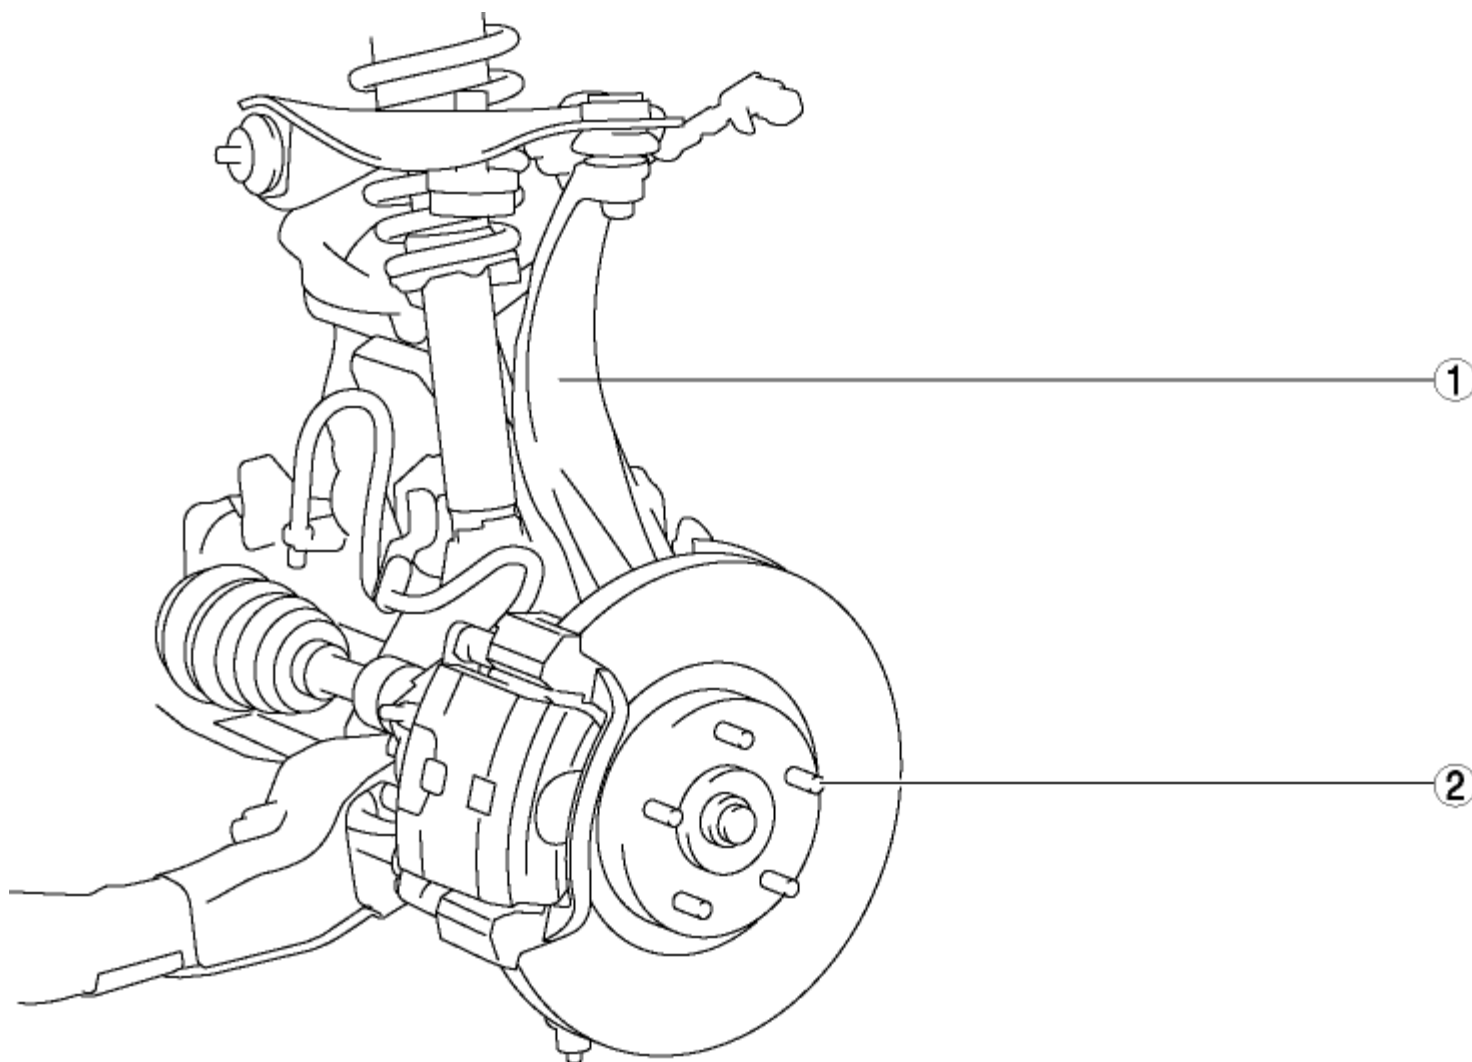

1 Wheel hub, steering knuckle

(See [WHEEL HUB, STEERING KNUCKLE INSPECTION.](#))

(See [WHEEL HUB, STEERING KNUCKLE REMOVAL/ INSTALLATION.](#))

(See [WHEEL HUB, STEERING KNUCKLE DISASSEMBLY/ ASSEMBLY.](#))

2 Hub bolt

(See [FRONT WHEEL HUB BOLT REPLACEMENT.](#))

