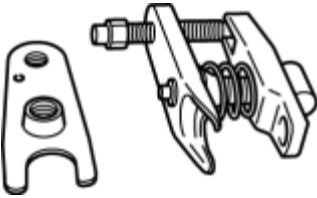
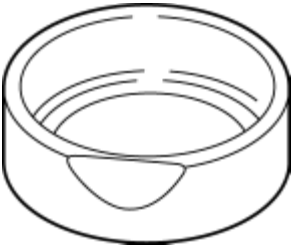
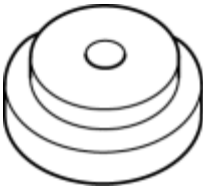
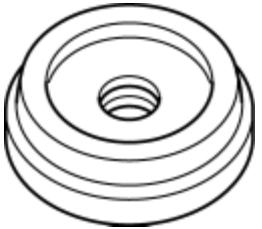
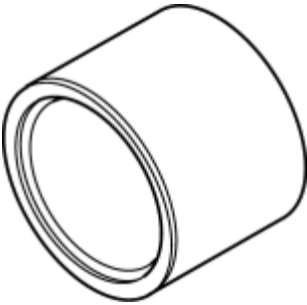
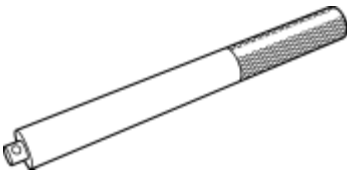
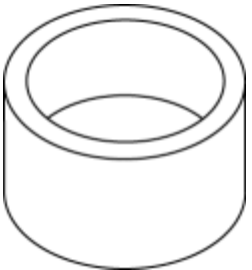
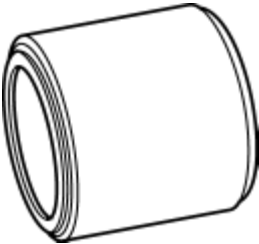
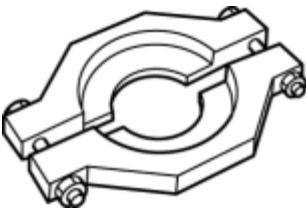
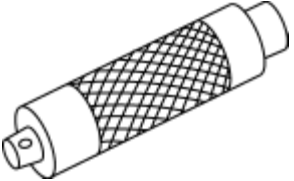
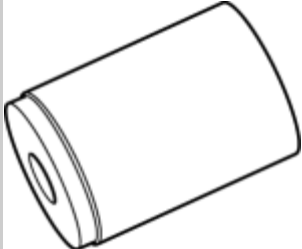


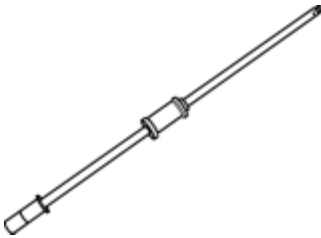
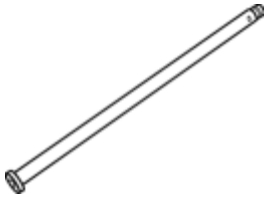
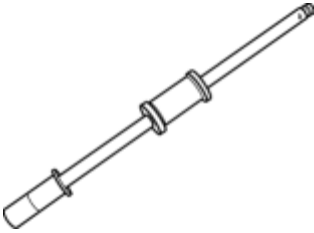
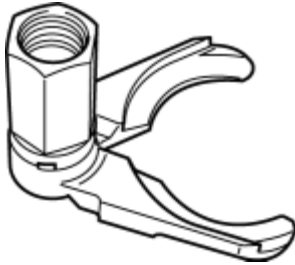
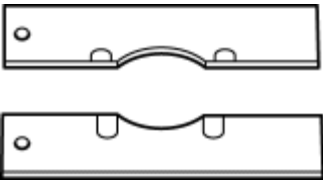
 
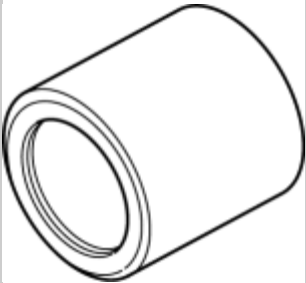
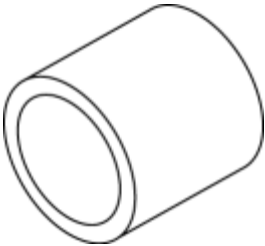
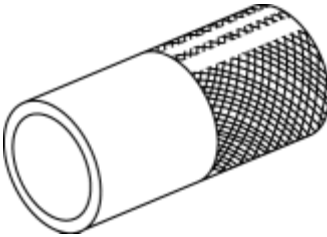
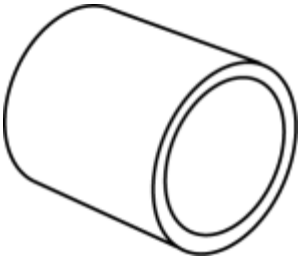
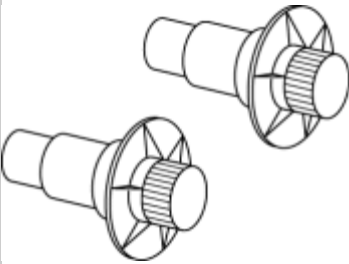
[< Previous](#)

2012 - Mazda6 - DriveLine/ Axle

DRIVELINE/ AXLE SST

Front and Rear Axle

49 T028 3A0 Ball joint puller set		49 G033 102 Handle		49 G033 105 Attachment	
49 G033 107A Dust cover installer		49 G033 106 Attachment		49 F027 004 Attachment ø80	
49 G026 103 Support block		49 F027 003 Handle		49 B034 212 Rubber bush replacer	
49 B014 001 Oil seal installer		49 H027 002 Bearing remover		49 G030 797 Handle (Part of 49 G030 795)	
49 B025 004 Dust seal installer		49 F027 005 Attachment ø62		49 W034 301 Support block	

49 W027 003 Bearing installer		49 B025 017 Sliding hammer (Part of 49 B025 0A1)		49 B025 016 Extension (Part of 49 B025 0A2)	
49 0223 630B Rear shaft puller body		49 B025 010 Attachment		49 F401 336B Attachment (Part of 49 F401 330B)	
49 F026 103 Wheel hub puller		49 T025 001 Boot clamp crimpers		49 G028 201 Support block	
49 U027 003 Oil seal installer		49 W026 001 Oil seal installer		49 G028 203 Support block	
49 G030 455 Differential side gear holder (G66M-R, FS5A-EL)			—		—

[< Previous](#)

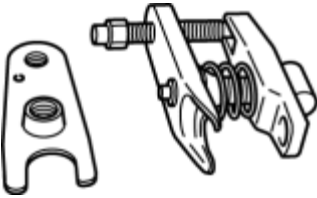
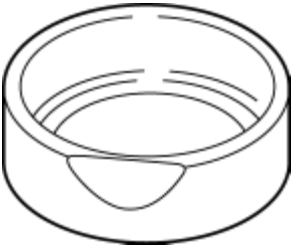
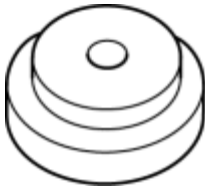
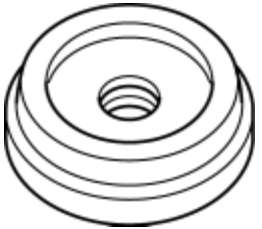
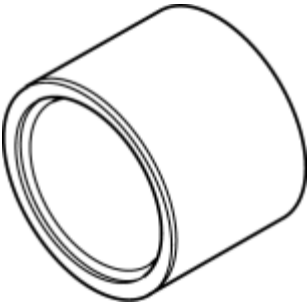
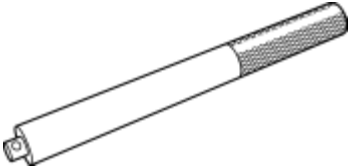
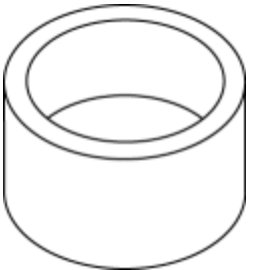
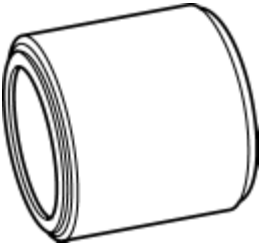
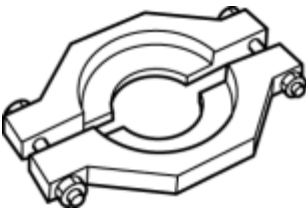
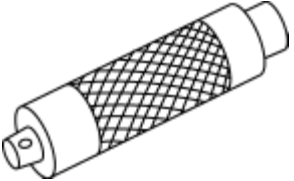
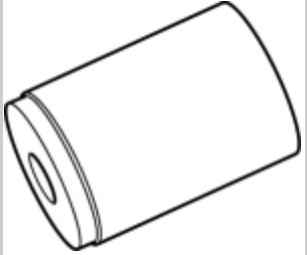
[Back to Top](#)

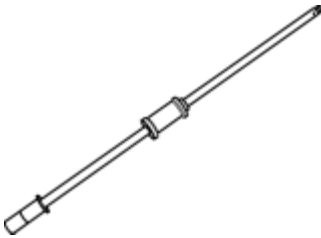
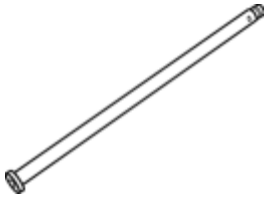
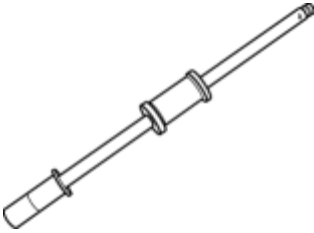
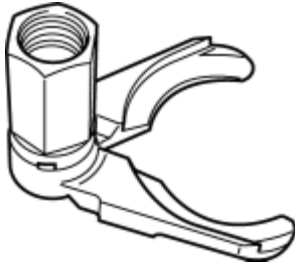
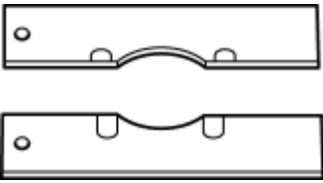
 
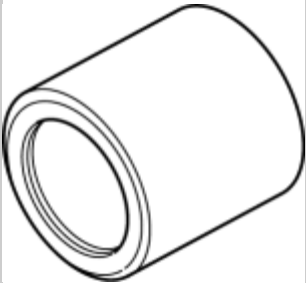
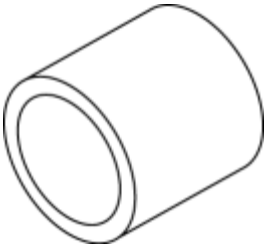
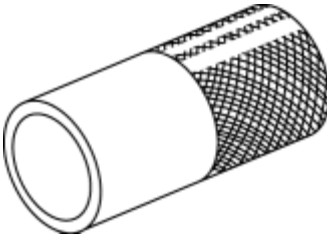
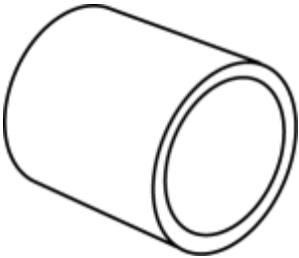
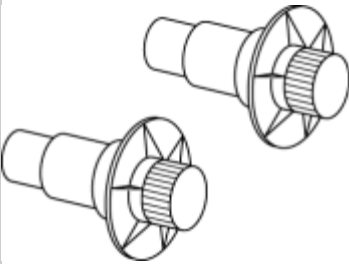
[< Previous](#)

2012 - Mazda6 - DriveLine/ Axle

DRIVELINE/ AXLE SST

Front and Rear Axle

49 T028 3A0 Ball joint puller set		49 G033 102 Handle		49 G033 105 Attachment	
49 G033 107A Dust cover installer		49 G033 106 Attachment		49 F027 004 Attachment ø80	
49 G026 103 Support block		49 F027 003 Handle		49 B034 212 Rubber bush replacer	
49 B014 001 Oil seal installer		49 H027 002 Bearing remover		49 G030 797 Handle (Part of 49 G030 795)	
49 B025 004 Dust seal installer		49 F027 005 Attachment ø62		49 W034 301 Support block	

49 W027 003 Bearing installer		49 B025 017 Sliding hammer (Part of 49 B025 0A1)		49 B025 016 Extension (Part of 49 B025 0A2)	
49 0223 630B Rear shaft puller body		49 B025 010 Attachment		49 F401 336B Attachment (Part of 49 F401 330B)	
49 F026 103 Wheel hub puller		49 T025 001 Boot clamp crimpers		49 G028 201 Support block	
49 U027 003 Oil seal installer		49 W026 001 Oil seal installer		49 G028 203 Support block	
49 G030 455 Differential side gear holder (G66M-R, FS5A-EL)			—		—

[< Previous](#)

[Back to Top](#)