

2012 - Mazda6 - Brakes


MASTER CYLINDER REMOVAL/ INSTALLATION

CAUTION:

- When removing/installing the master cylinder, avoid touching the primary piston with your hand when not necessary. Otherwise, it could damage the master cylinder.

- Remove the battery and battery tray. (MZI 3.7 V6) (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- Remove in the order indicated in the table.
- Install in the reverse order of removal.
- Add brake fluid, bleed the brakes, and inspect for leakage after the installation has been completed. (See [BRAKE FLUID AIR BLEEDING](#).)


MZR 2.5

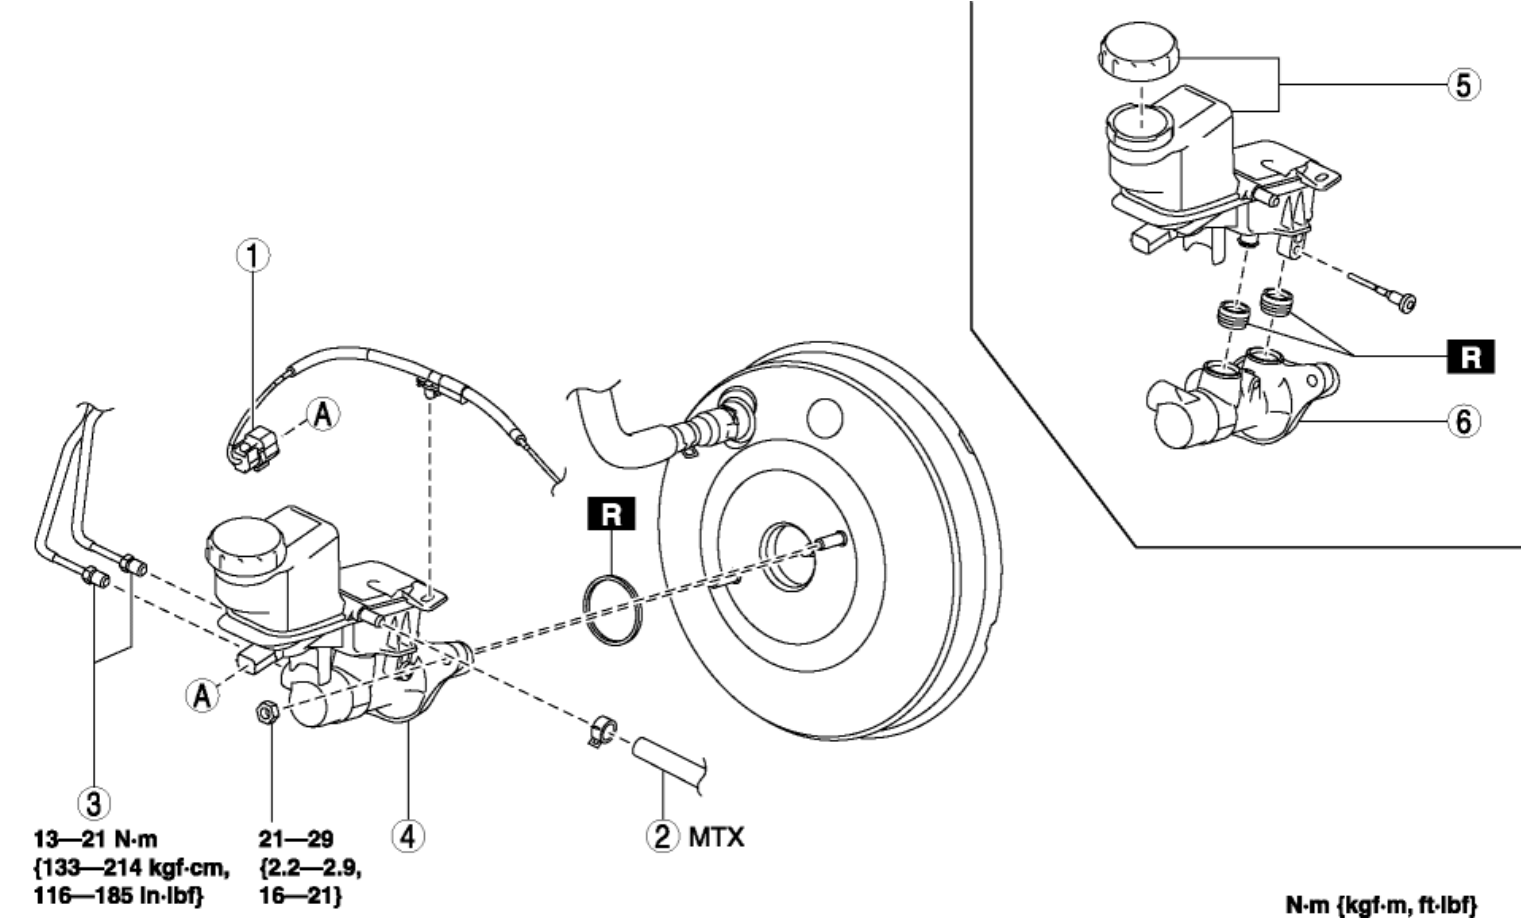

1	Brake fluid level sensor connector
2	Reserve tank hose
3	Brake pipe
4	Master cylinder component

5	Reserve tank, cap
6	Cylinder component

MZI 3.7 V6

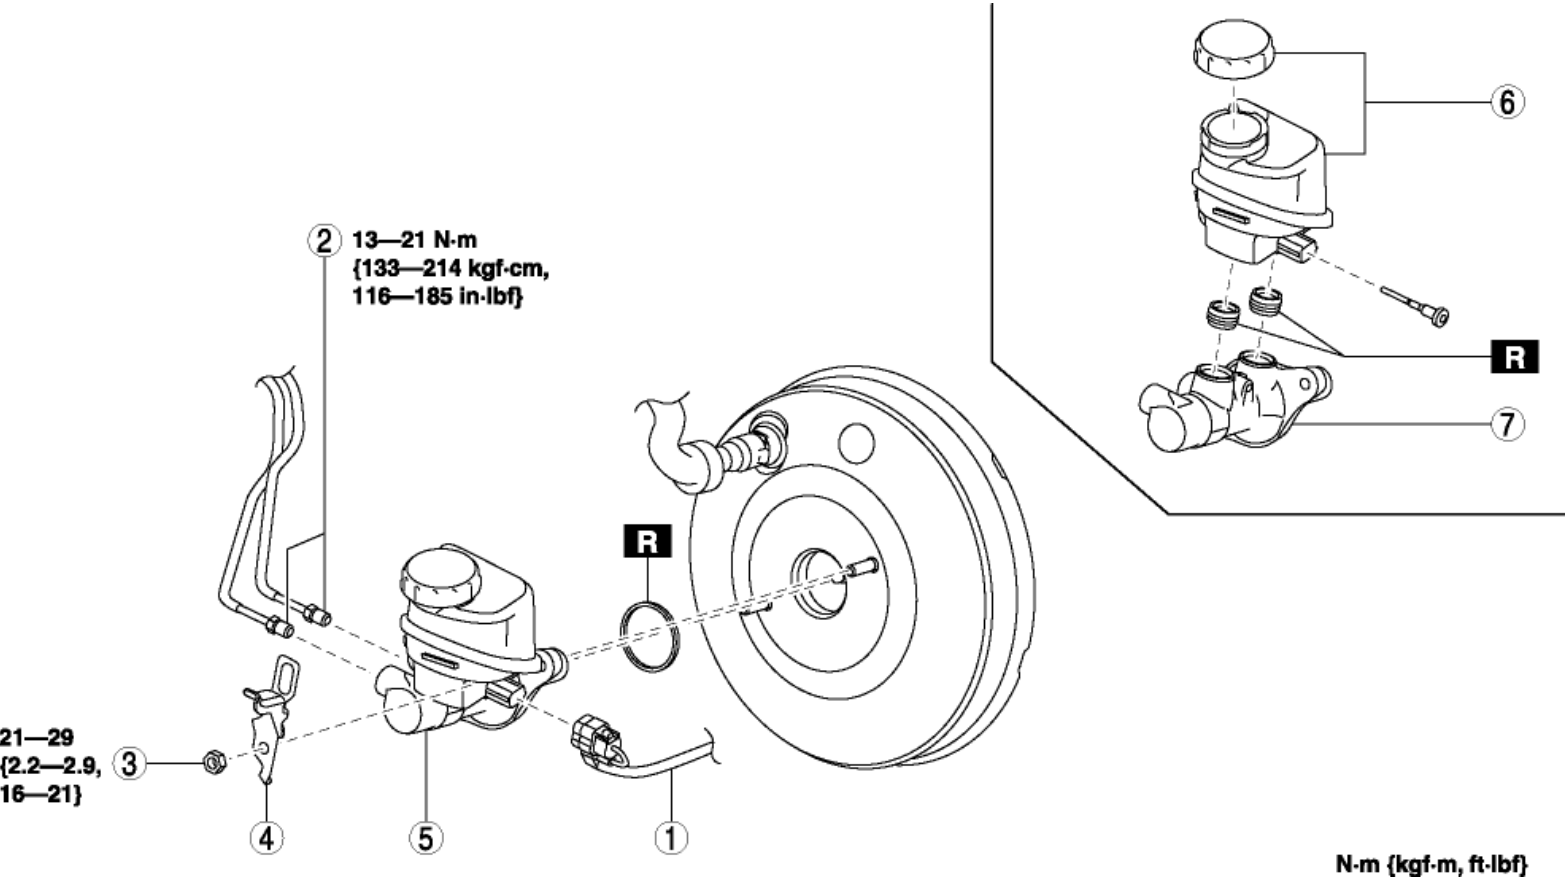

1	Brake fluid level sensor connector
2	Brake pipe
3	Nut
4	Bracket
5	Master cylinder component
6	Reserve tank, cap
7	Cylinder component

2012 - Mazda6 - Brakes


MASTER CYLINDER REMOVAL/ INSTALLATION

CAUTION:

- When removing/installing the master cylinder, avoid touching the primary piston with your hand when not necessary. Otherwise, it could damage the master cylinder.

- Remove the battery and battery tray. (MZI 3.7 V6) (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- Remove in the order indicated in the table.
- Install in the reverse order of removal.
- Add brake fluid, bleed the brakes, and inspect for leakage after the installation has been completed. (See [BRAKE FLUID AIR BLEEDING](#).)


MZR 2.5

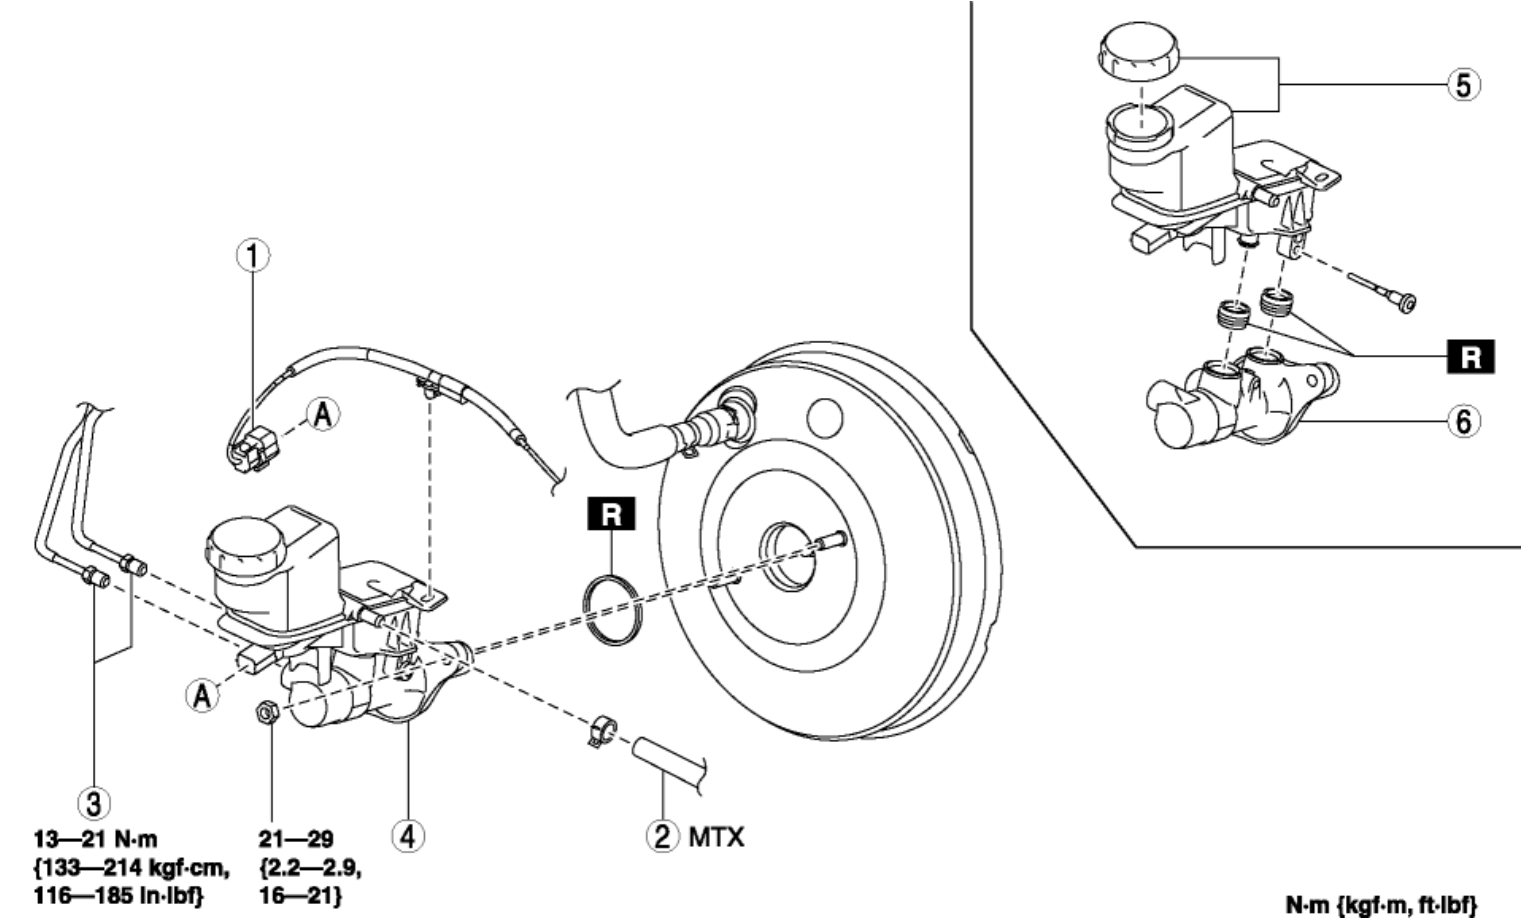

1	Brake fluid level sensor connector
2	Reserve tank hose
3	Brake pipe
4	Master cylinder component

5	Reserve tank, cap
6	Cylinder component

MZI 3.7 V6

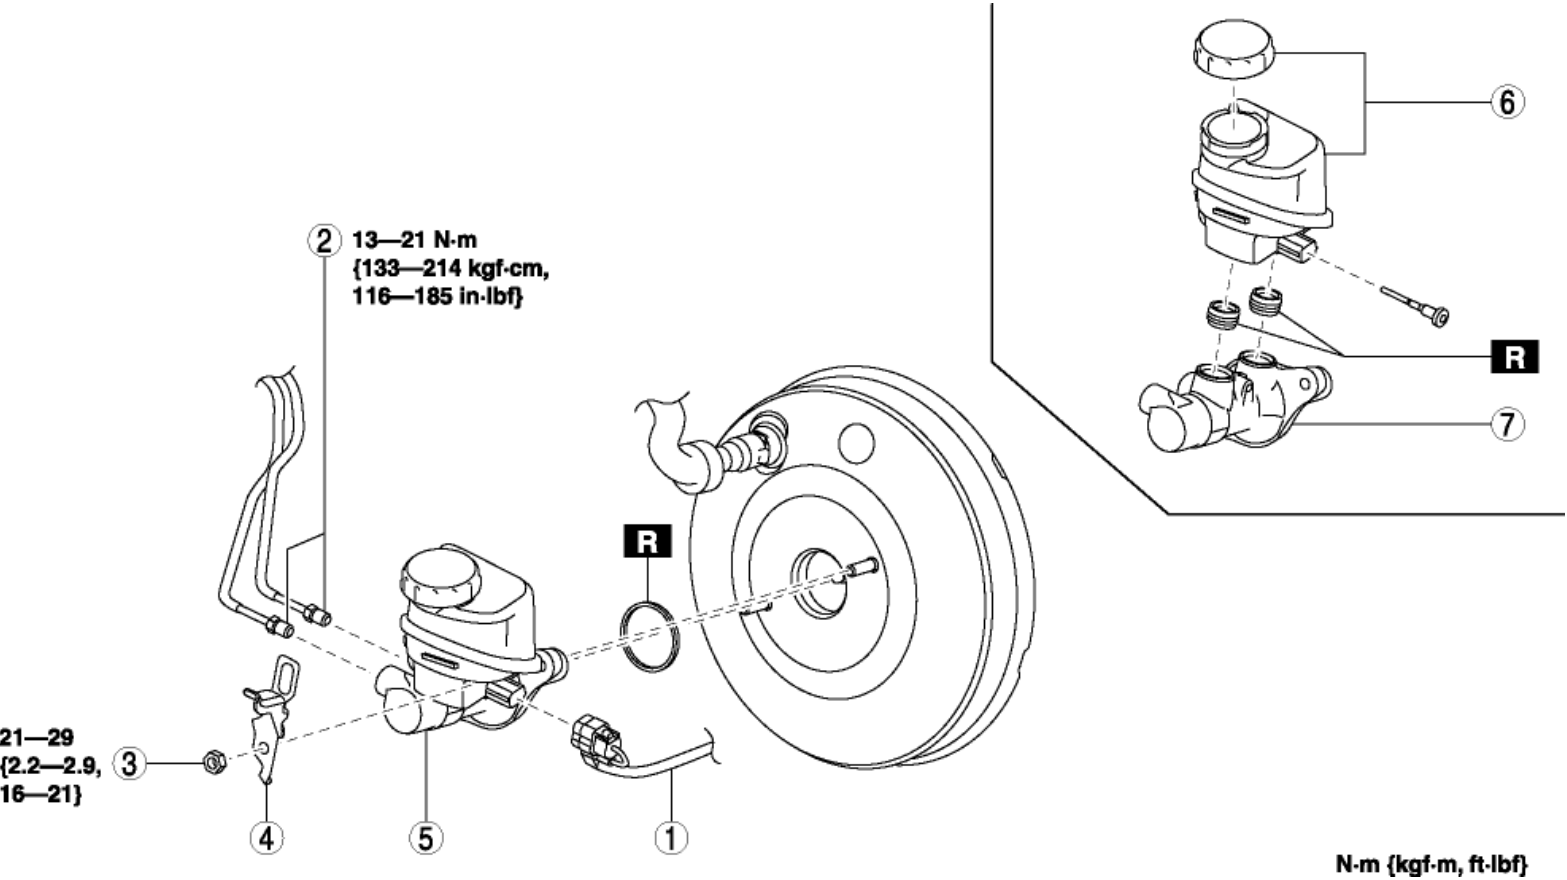

1	Brake fluid level sensor connector
2	Brake pipe
3	Nut
4	Bracket
5	Master cylinder component
6	Reserve tank, cap
7	Cylinder component