


2012 - Mazda6 - Brakes

BRAKE SWITCH INSPECTION

CAUTION:

- Inspect the brake switch with it installed to the brake pedal, otherwise the brake switch may not operate normally. If the brake switch is removed from the brake pedal, replace the brake switch with a new one.
- Disconnect the brake switch connector.
 - Verify that the continuity is as indicated in the table.

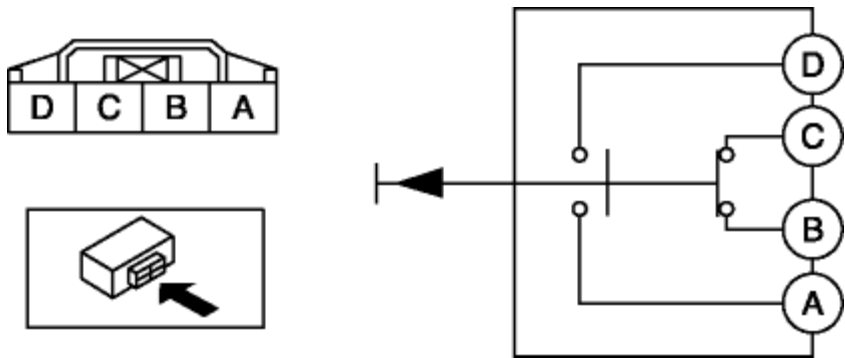

- If not as indicated in the table, replace the brake switch. (See [BRAKE PEDAL REMOVAL/ INSTALLATION](#).)

○—○ : Continuity


Condition	Terminal			
	A	B	C	D
When the brake pedal is depressed	○			○
When the brake pedal is not depressed		○	○	

2012 - Mazda6 - Brakes

BRAKE SWITCH INSPECTION

CAUTION:

- Inspect the brake switch with it installed to the brake pedal, otherwise the brake switch may not operate normally. If the brake switch is removed from the brake pedal, replace the brake switch with a new one.
- Disconnect the brake switch connector.
 - Verify that the continuity is as indicated in the table.

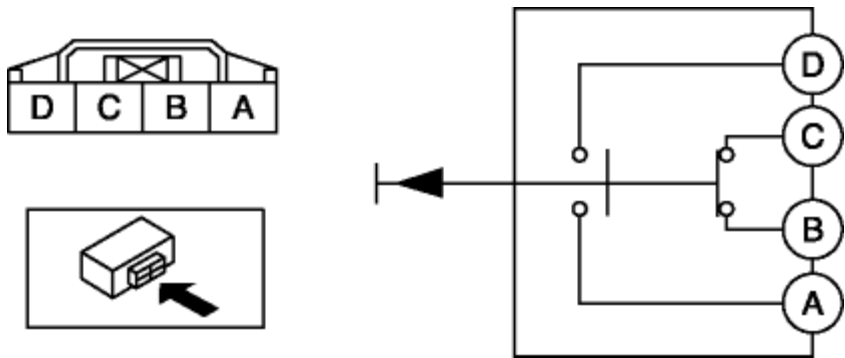

- If not as indicated in the table, replace the brake switch. (See [BRAKE PEDAL REMOVAL/ INSTALLATION](#).)

○—○ : Continuity

Condition	Terminal			
	A	B	C	D
When the brake pedal is depressed	○—○			○—○
When the brake pedal is not depressed		○—○		