


2012 - Mazda6 - Brakes

CONVENTIONAL BRAKE SYSTEM LOCATION INDEX

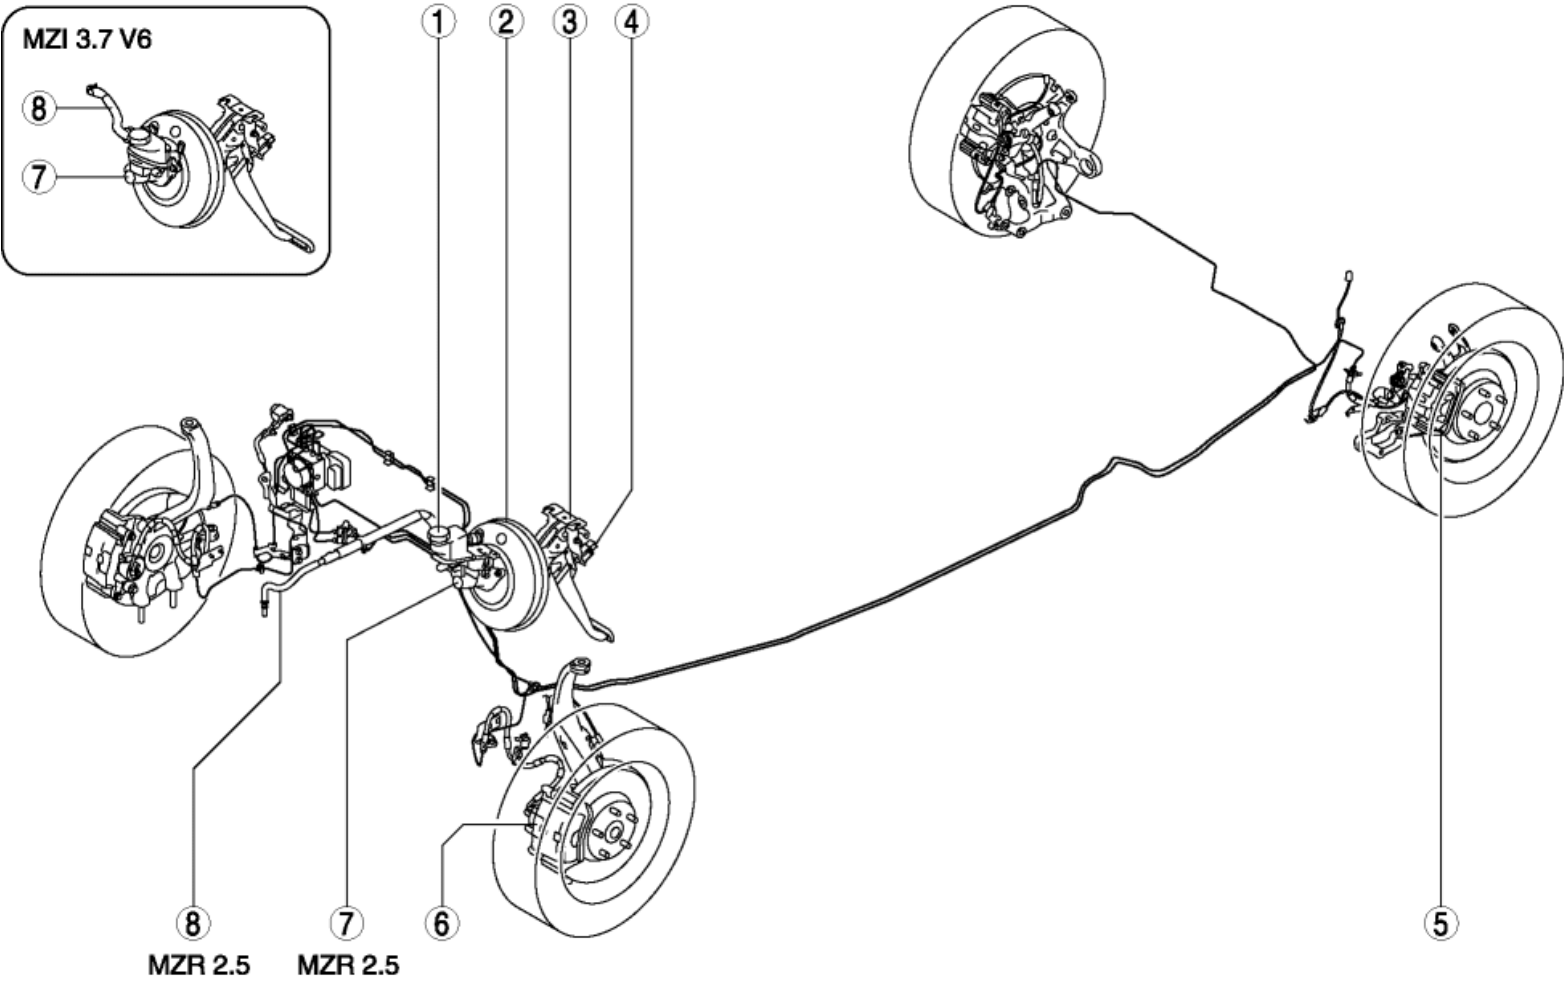


1	Brake fluid (See BRAKE FLUID INSPECTION .) (See BRAKE FLUID AIR BLEEDING .)
2	Power brake unit (See POWER BRAKE UNIT INSPECTION) (See POWER BRAKE UNIT REMOVAL/ INSTALLATION)
3	Brake pedal (See BRAKE PEDAL INSPECTION) (See BRAKE PEDAL REMOVAL/ INSTALLATION)
4	Brake switch (See BRAKE SWITCH INSPECTION)

5	Rear brake (disc) (See REAR BRAKE (DISC) INSPECTION) (See REAR BRAKE (DISC) REMOVAL/ INSTALLATION) (See DISC PAD (REAR) REPLACEMENT) (See CALIPER (REAR) DISASSEMBLY/ ASSEMBLY)
6	Front brake (disc) (See FRONT BRAKE (DISC) INSPECTION) (See FRONT BRAKE (DISC) REMOVAL/ INSTALLATION) (See DISC PAD (FRONT) REPLACEMENT) (See CALIPER (FRONT) DISASSEMBLY/ ASSEMBLY)
7	Master cylinder (See MASTER CYLINDER REMOVAL/ INSTALLATION) (See BRAKE FLUID LEVEL SENSOR INSPECTION.)
8	Vacuum line (See VACUUM LINE INSPECTION.) (See VACUUM HOSE REMOVAL/ INSTALLATION.)

2012 - Mazda6 - Brakes

CONVENTIONAL BRAKE SYSTEM LOCATION INDEX

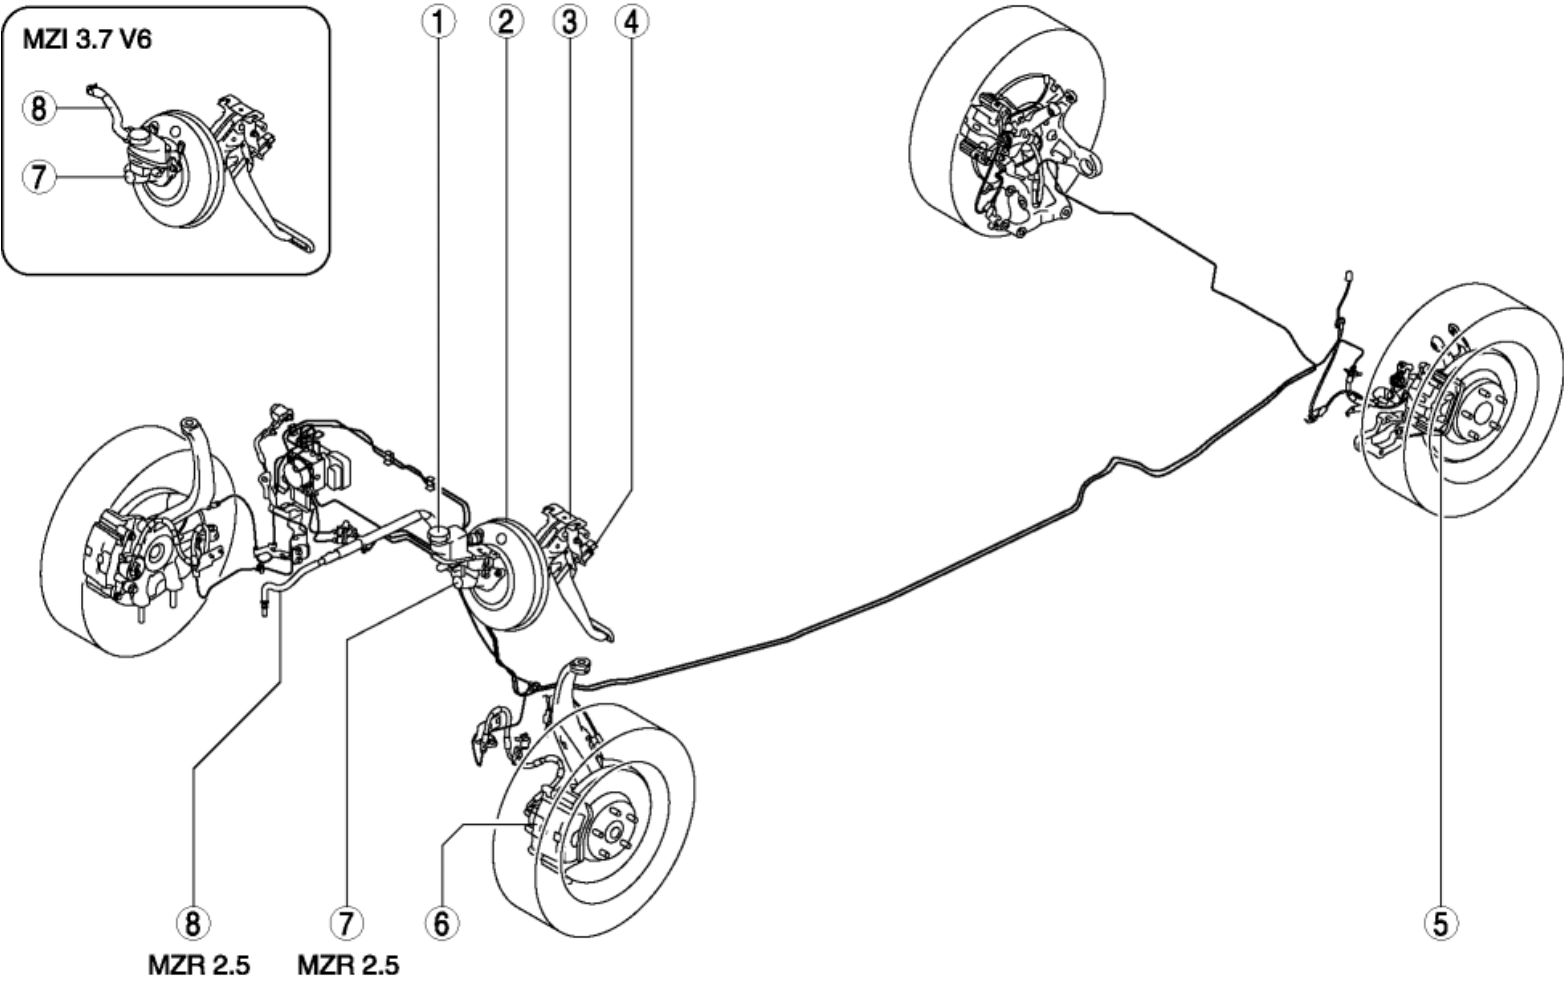

1	Brake fluid (See BRAKE FLUID INSPECTION .) (See BRAKE FLUID AIR BLEEDING .)
2	Power brake unit (See POWER BRAKE UNIT INSPECTION) (See POWER BRAKE UNIT REMOVAL/ INSTALLATION)
3	Brake pedal (See BRAKE PEDAL INSPECTION) (See BRAKE PEDAL REMOVAL/ INSTALLATION)
4	Brake switch (See BRAKE SWITCH INSPECTION)

5	Rear brake (disc) (See REAR BRAKE (DISC) INSPECTION) (See REAR BRAKE (DISC) REMOVAL/ INSTALLATION) (See DISC PAD (REAR) REPLACEMENT) (See CALIPER (REAR) DISASSEMBLY/ ASSEMBLY)
6	Front brake (disc) (See FRONT BRAKE (DISC) INSPECTION) (See FRONT BRAKE (DISC) REMOVAL/ INSTALLATION) (See DISC PAD (FRONT) REPLACEMENT) (See CALIPER (FRONT) DISASSEMBLY/ ASSEMBLY)
7	Master cylinder (See MASTER CYLINDER REMOVAL/ INSTALLATION) (See BRAKE FLUID LEVEL SENSOR INSPECTION.)
8	Vacuum line (See VACUUM LINE INSPECTION.) (See VACUUM HOSE REMOVAL/ INSTALLATION.)