


2012 - Mazda6 - Brakes

CALIPER (REAR) DISASSEMBLY/ ASSEMBLY

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

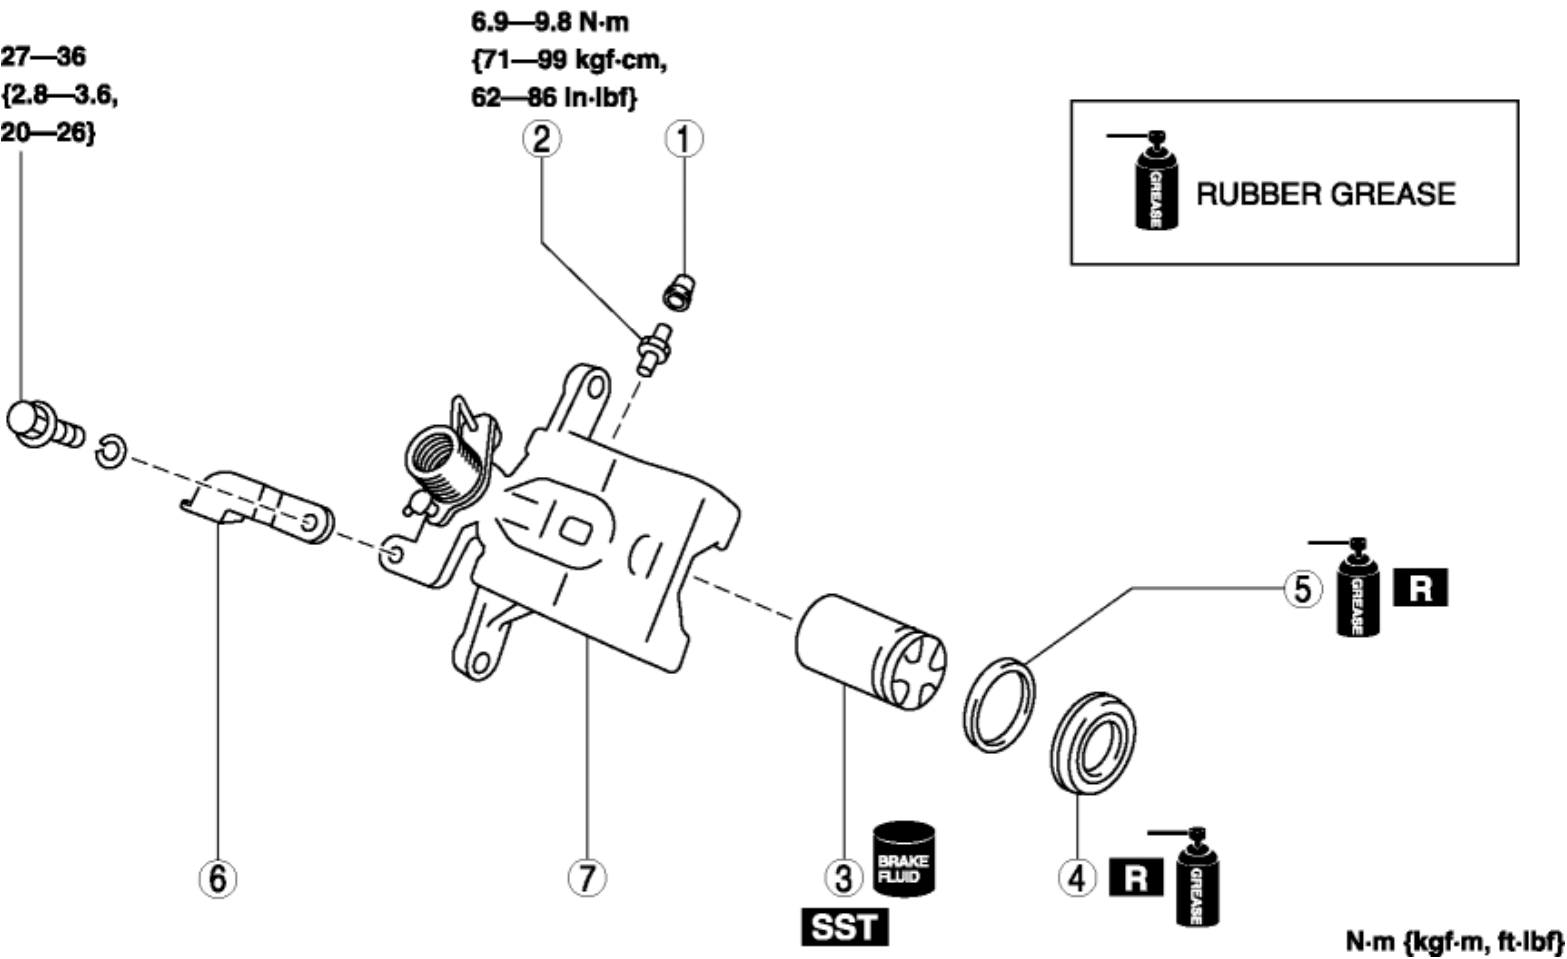


1	Bleeder cap
2	Breeder screw
3	Piston
	(See Piston Disassembly Note.)
	(See Piston Assembly Note.)
4	Piston boot
5	Piston seal

6	Bracket
7	Caliper body


Piston Disassembly Note

1. Rotate the piston counterclockwise using the **SST** and remove it from the caliper body.

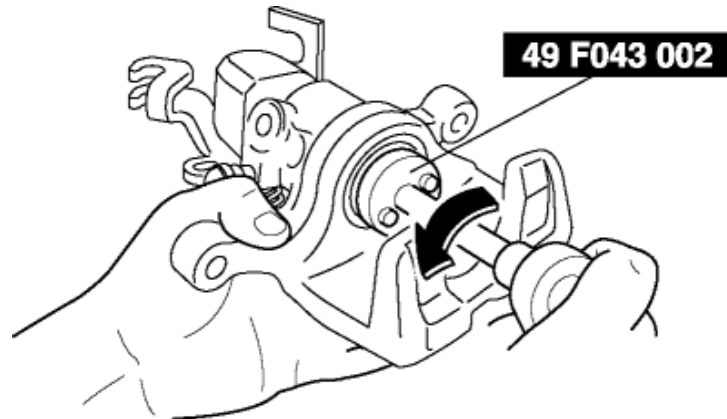

Piston Assembly Note

1. Rotate the piston clockwise slowly using the **SST** and press the piston into the caliper body completely.

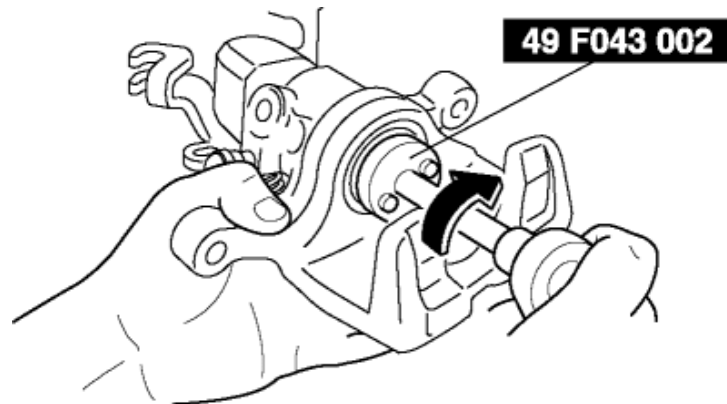


[< Previous](#) [Next >](#)

[Back to Top](#)

2012 - Mazda6 - Brakes

CALIPER (REAR) DISASSEMBLY/ ASSEMBLY

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

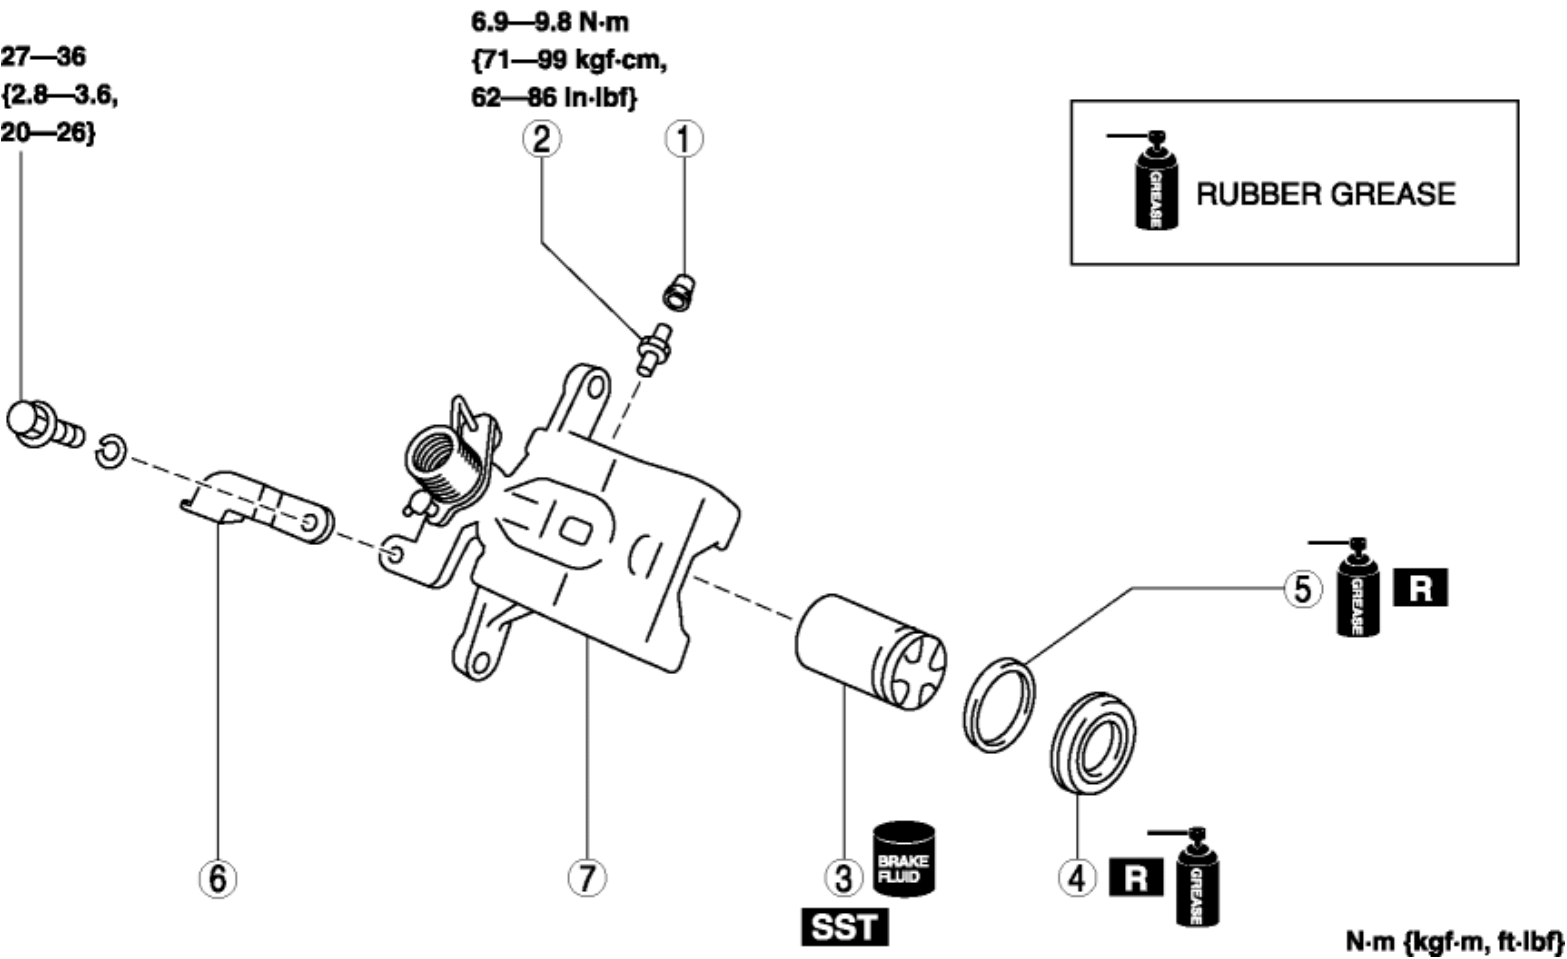


1	Bleeder cap
2	Breeder screw
3	Piston
	(See Piston Disassembly Note.)
	(See Piston Assembly Note.)
4	Piston boot
5	Piston seal

6	Bracket
7	Caliper body


Piston Disassembly Note

1. Rotate the piston counterclockwise using the **SST** and remove it from the caliper body.

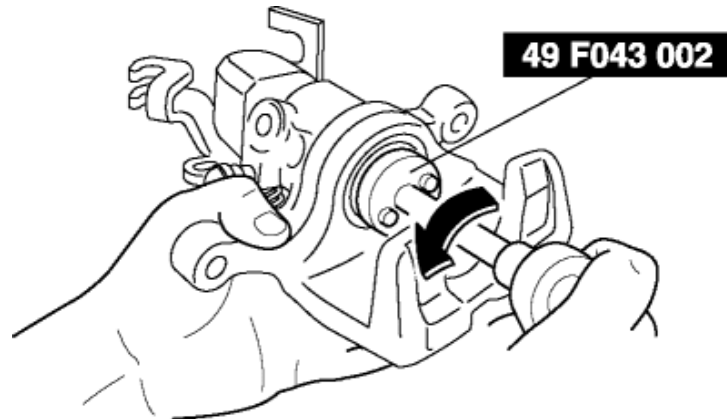

Piston Assembly Note

1. Rotate the piston clockwise slowly using the **SST** and press the piston into the caliper body completely.

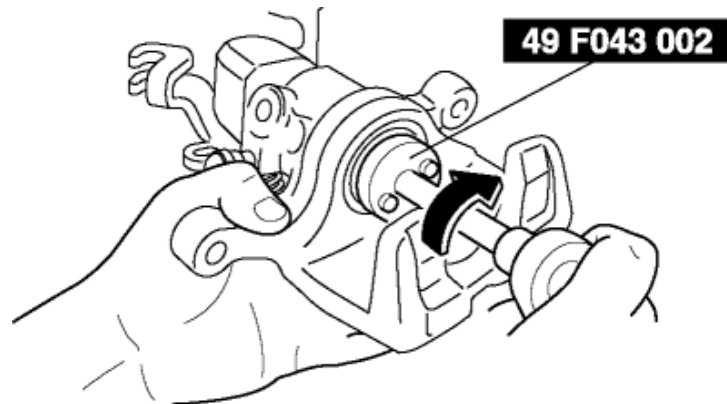

[< Previous](#) [Next >](#)

[Back to Top](#)