


2012 - Mazda6 - Brakes

CALI PER (FRONT) DI SASSEMBLY/ ASSEMBLY

1. Disassemble in the order indicated in the table.

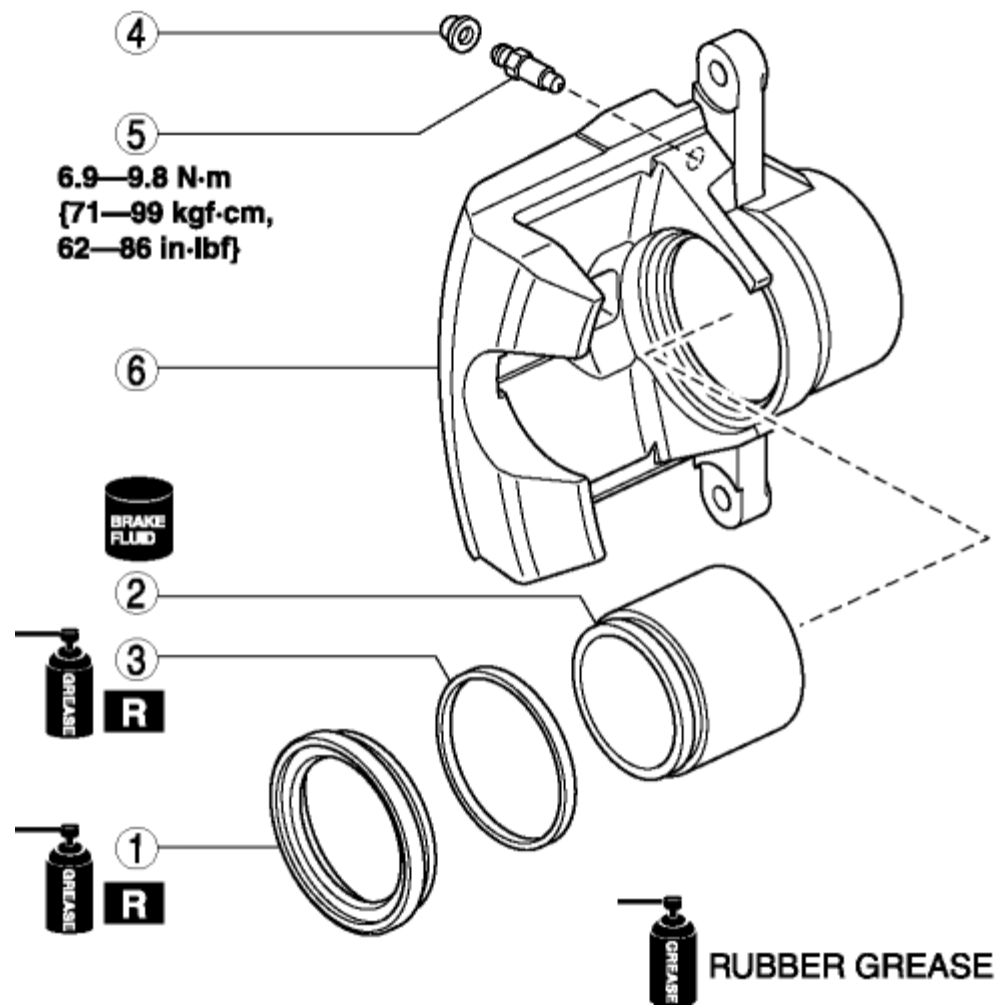

1	Dust seal
2	Piston (See Piston Disassembly Note)
3	Piston seal
4	Bleeder cap

5	Bleeder screw
6	Caliper body


2. Assemble in the reverse order of removal.

Piston Disassembly Note

CAUTION:

- The piston could be damaged if it is blown out with great force. Blow compressed air slowly to prevent the piston from suddenly popping out.

1. Place a piece of wood in the caliper, then blow compressed air through the hole to force the piston out of the caliper.

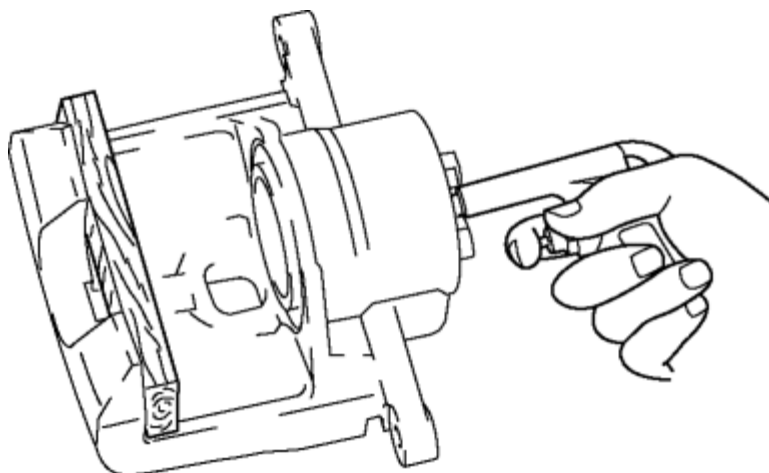

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Brakes

CALI PER (FRONT) DI SASSEMBLY/ ASSEMBLY

1. Disassemble in the order indicated in the table.

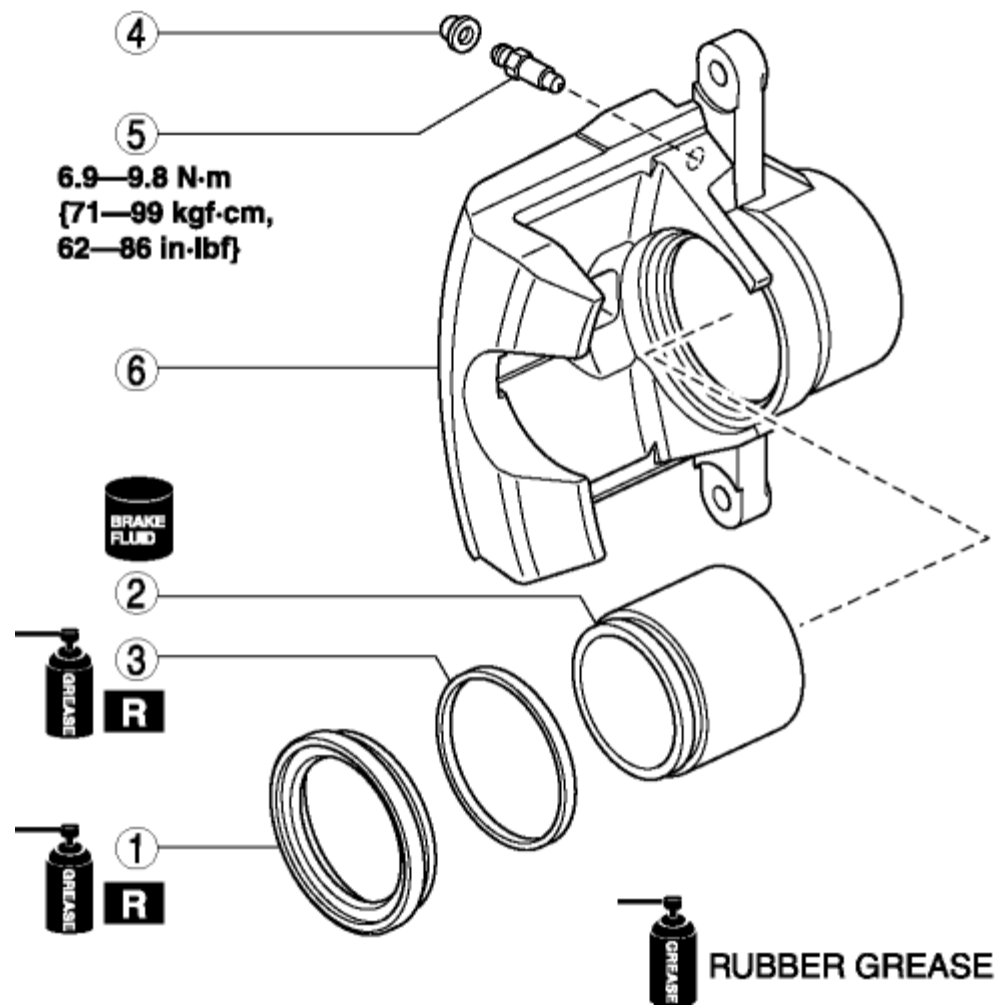

1	Dust seal
2	Piston (See Piston Disassembly Note)
3	Piston seal
4	Bleeder cap

5	Bleeder screw
6	Caliper body


2. Assemble in the reverse order of removal.

Piston Disassembly Note

CAUTION:

- The piston could be damaged if it is blown out with great force. Blow compressed air slowly to prevent the piston from suddenly popping out.

1. Place a piece of wood in the caliper, then blow compressed air through the hole to force the piston out of the caliper.

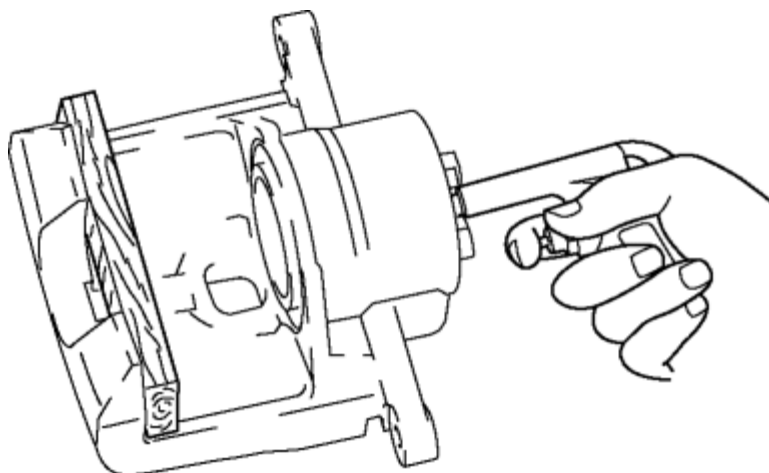

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.