


2012 - Mazda6 - Brakes

BRAKE FLUID LEVEL SENSOR INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Disconnect the sensor connector.
- 3. Inspect for continuity between terminals of fluid level sensor.
 - If not as specified, replace the fluid level sensor.

○—○ : Continuity

Fluid level	A	B
Above approx. 3 mm {0.1 in} above MIN line		
Below approx. 3 mm {0.1 in} above MIN line	○—○	○—○

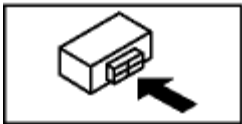

2012 - Mazda6 - Brakes

BRAKE FLUID LEVEL SENSOR INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Disconnect the sensor connector.
- 3. Inspect for continuity between terminals of fluid level sensor.
 - If not as specified, replace the fluid level sensor.

○—○ : Continuity

Fluid level	A	B
Above approx. 3 mm {0.1 in} above MIN line		
Below approx. 3 mm {0.1 in} above MIN line	○—○	○—○

