

2012 - Mazda6 - Brakes

PARKING BRAKE LEVER REMOVAL/ INSTALLATION

1. Remove the following parts:
- a. Upper panel (See UPPER PANEL REMOVAL/ INSTALLATION.)


b. Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.)

c. Shift panel (See SHIFT PANEL REMOVAL/ INSTALLATION.)

d. Decoration panel (SeeDECORATION PANEL REMOVAL/ INSTALLATION.)

e. Center panel lower (See CENTER PANEL LOWER REMOVAL/ INSTALLATION.)

f. Rear console (See REAR CONSOLE REMOVAL/ INSTALLATION.)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.
4. After installation, inspect the parking brake stroke and adjust if necessary. (See PARKING BRAKE LEVER INSPECTI ON.)

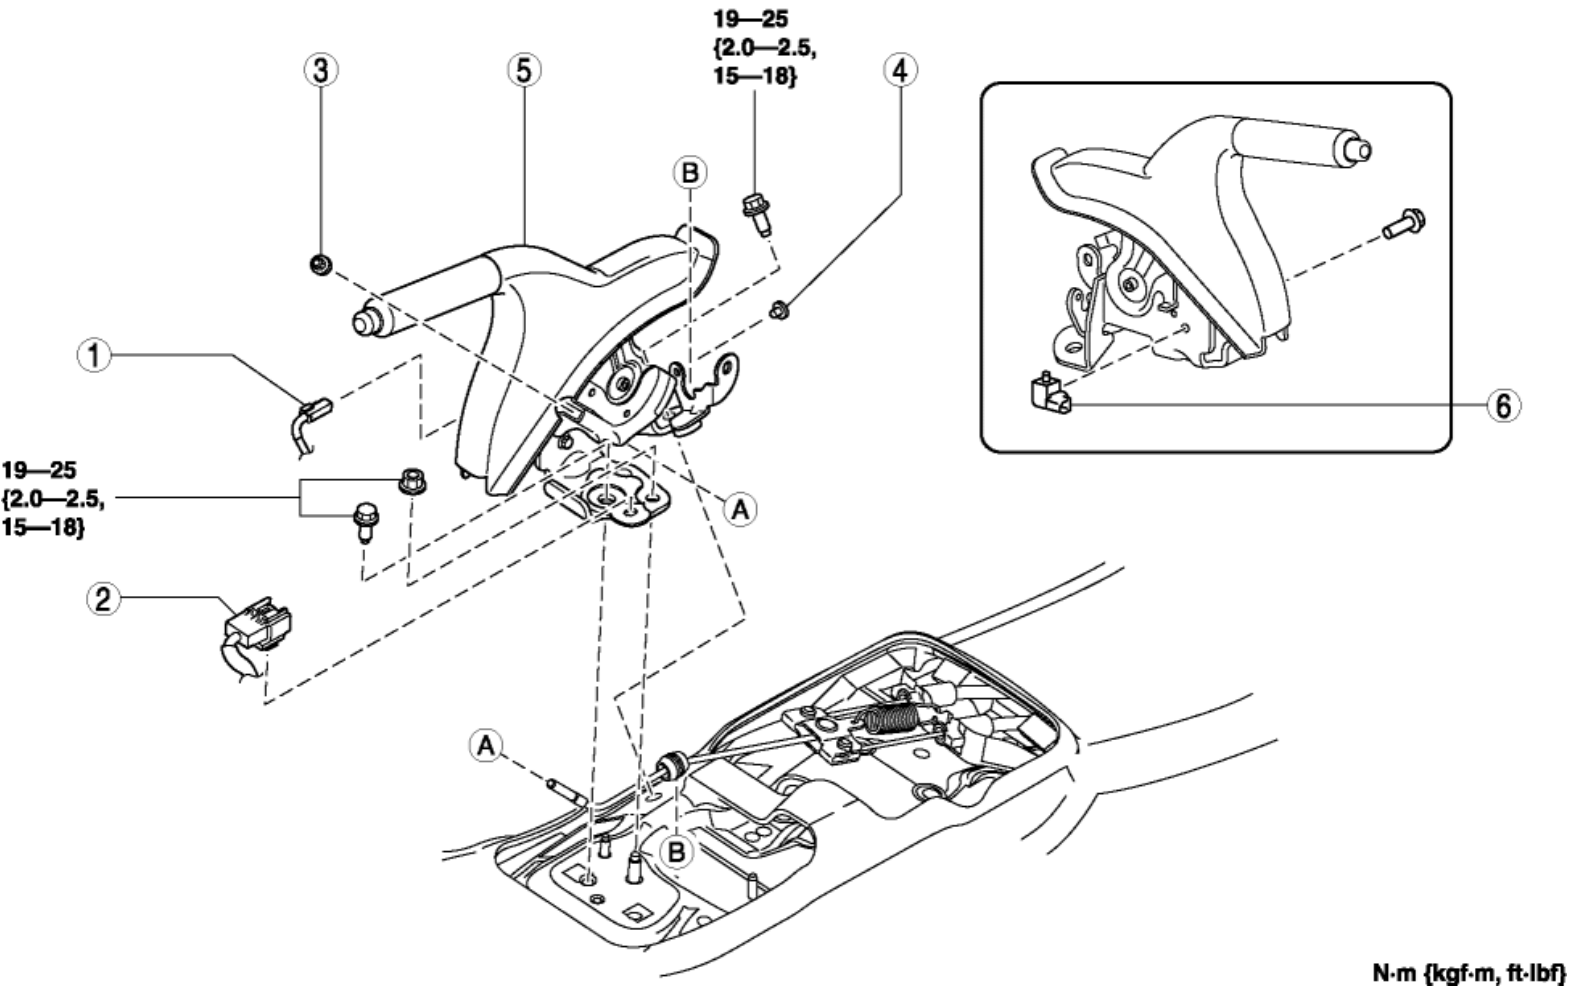

N·m {kgf·m, ft·lbf}

|   |                                |
|---|--------------------------------|
| 1 | Parking brake switch connector |
| 2 | Wiring harness                 |

|   |                      |
|---|----------------------|
| 3 | Adjusting nut        |
| 4 | Clip                 |
| 5 | Parking brake lever  |
| 6 | Parking brake switch |

[< Previous](#)   [Next >](#)

[Back to Top](#)

2012 - Mazda6 - Brakes

PARKING BRAKE LEVER REMOVAL/ INSTALLATION

1. Remove the following parts:
- a. Upper panel (See UPPER PANEL REMOVAL/ INSTALLATION.)


b. Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.)

c. Shift panel (See SHIFT PANEL REMOVAL/ INSTALLATION.)

d. Decoration panel (SeeDECORATION PANEL REMOVAL/ INSTALLATION.)

e. Center panel lower (See CENTER PANEL LOWER REMOVAL/ INSTALLATION.)

f. Rear console (See REAR CONSOLE REMOVAL/ INSTALLATION.)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.
4. After installation, inspect the parking brake stroke and adjust if necessary. (See PARKING BRAKE LEVER INSPECTI ON.)

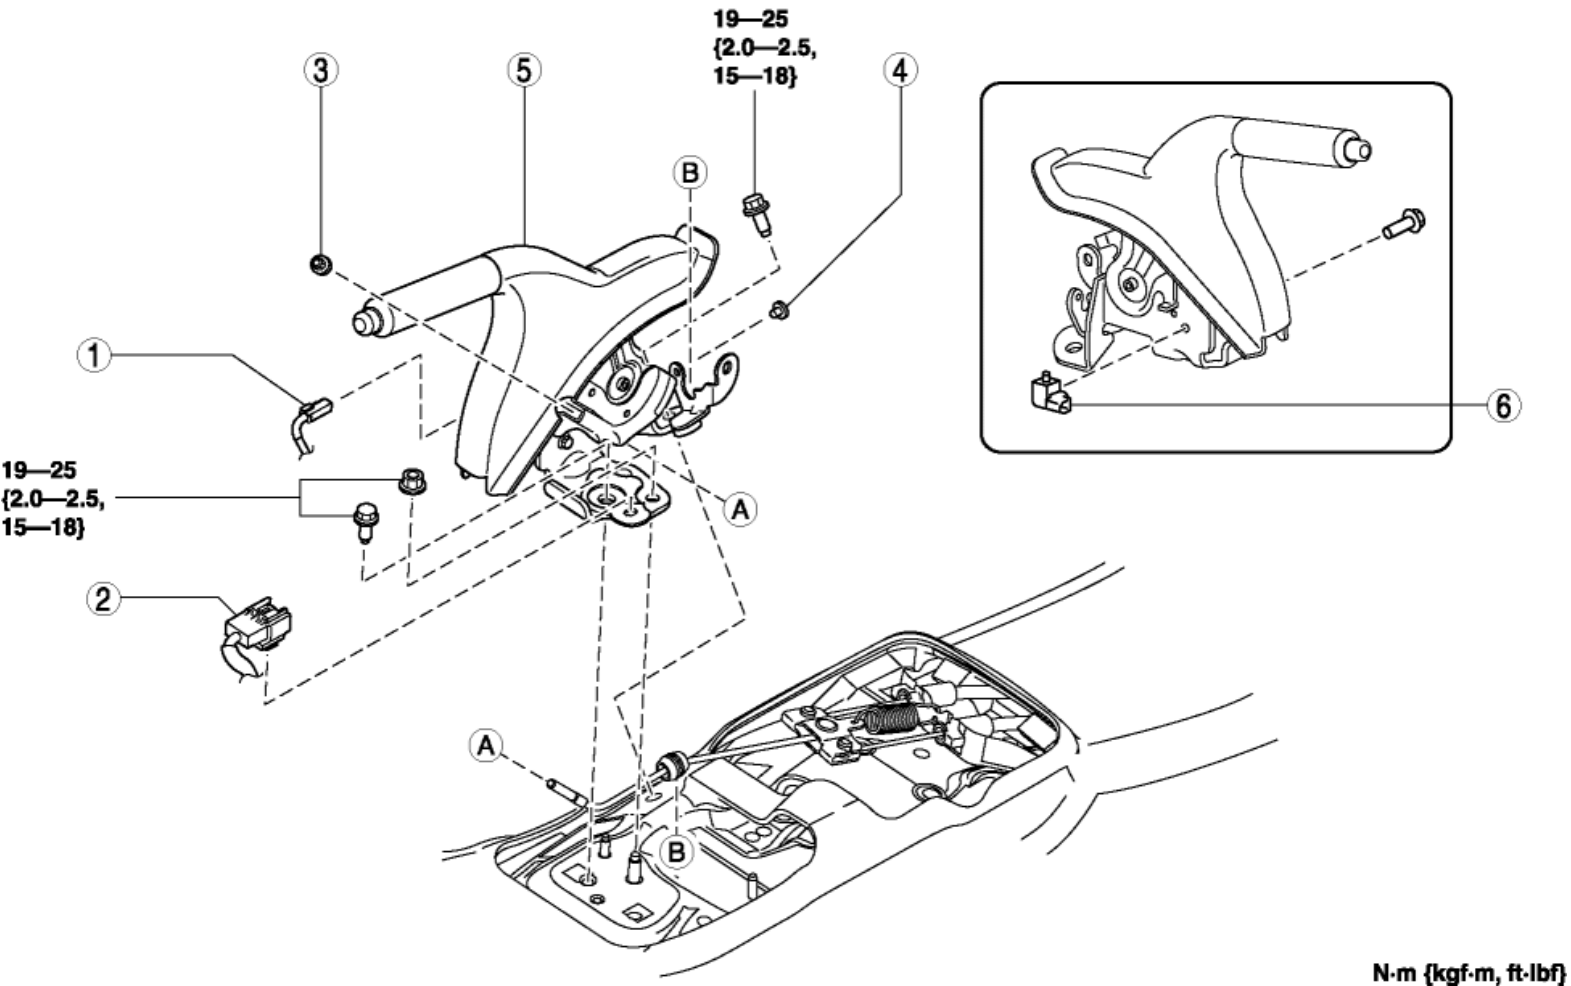

N·m {kgf·m, ft·lbf}

|   |                                |
|---|--------------------------------|
| 1 | Parking brake switch connector |
| 2 | Wiring harness                 |

|   |                      |
|---|----------------------|
| 3 | Adjusting nut        |
| 4 | Clip                 |
| 5 | Parking brake lever  |
| 6 | Parking brake switch |