


2012 - Mazda6 - Brakes

PARKING BRAKE SWITCH INSPECTION

- 1. Disconnect the parking brake switch connector.
- 2. Verify that the continuity is as indicated in the table.

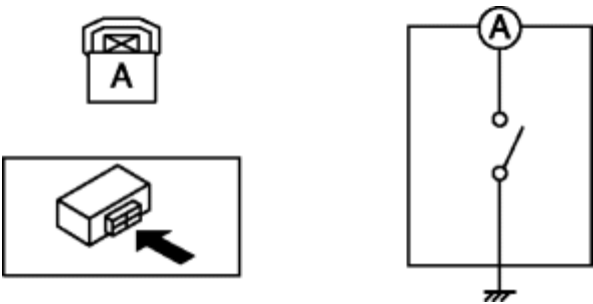

- If not as indicated in the table, replace the parking brake lever.


○—○ : Continuity

Condition	Terminal	
	A	Body ground
Parking brake lever pulled	○—○	○—○
Parking brake lever released		

2012 - Mazda6 - Brakes

PARKING BRAKE SWITCH INSPECTION

- 1. Disconnect the parking brake switch connector.
- 2. Verify that the continuity is as indicated in the table.

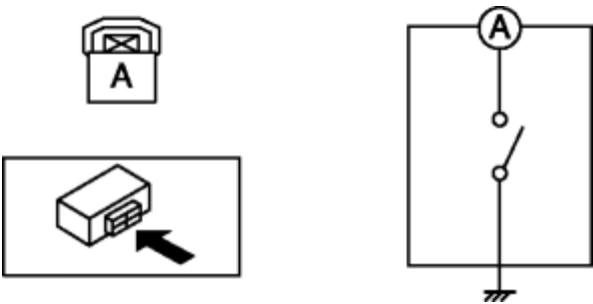

- If not as indicated in the table, replace the parking brake lever.

○—○ : Continuity

Condition	Terminal	
	A	Body ground
Parking brake lever pulled	○—○	○—○
Parking brake lever released		