

2012 - Mazda6 - Brakes

FRONT PARKING BRAKE CABLE REMOVAL/ INSTALLATION

1. Remove the following parts:
- a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))


b. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

c. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))

d. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))

e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))

f. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.
4. After installation, inspect the parking brake stroke and adjust if necessary. (See [PARKING BRAKE LEVER INSPECTION.](#))

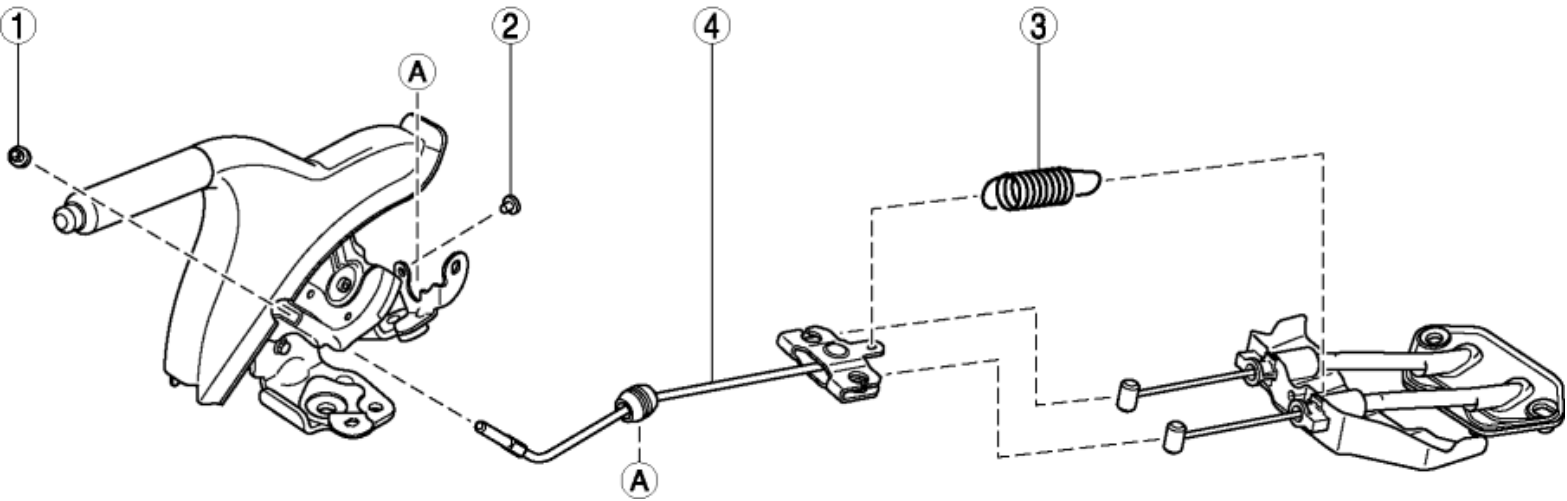


1	Adjusting nut
2	Clip
3	Spring
4	Front parking brake cable

2012 - Mazda6 - Brakes

FRONT PARKING BRAKE CABLE REMOVAL/ INSTALLATION

- 1. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - c. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - d. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - f. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
- 2. Remove in the order indicated in the table.
- 3. Install in the reverse order of removal.
- 4. After installation, inspect the parking brake stroke and adjust if necessary. (See [PARKING BRAKE LEVER INSPECTION.](#))

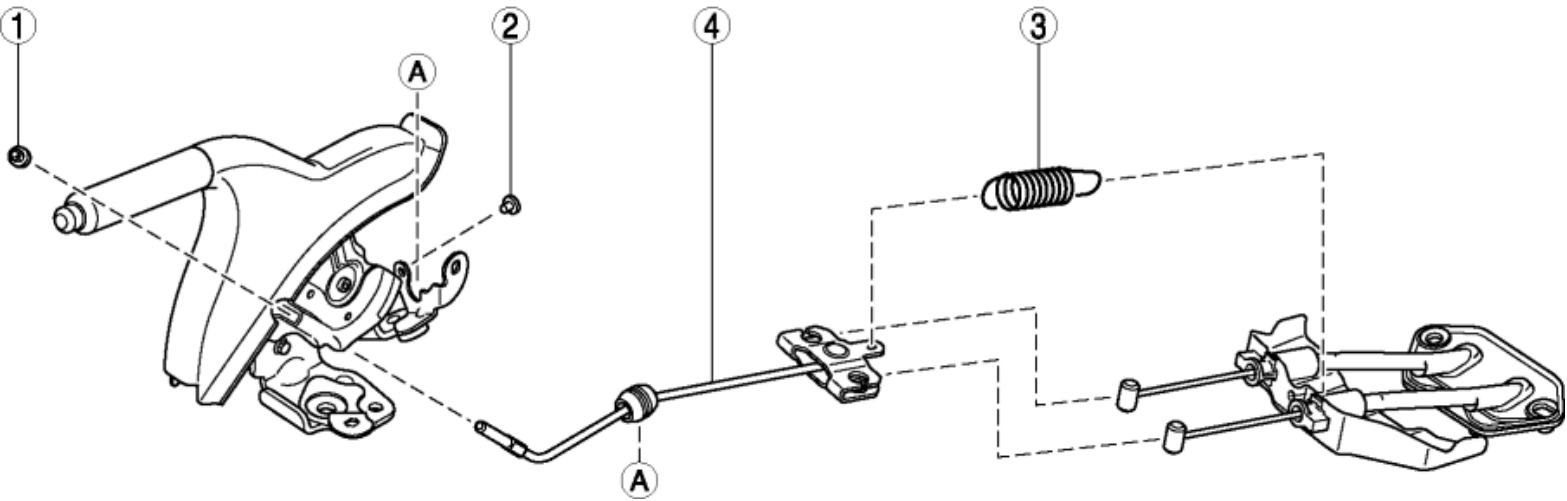

1	Adjusting nut
2	Clip
3	Spring
4	Front parking brake cable