



2012 - Mazda6 - Brakes

REAR ABS WHEEL-SPEED SENSOR REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
2. Remove the rear side seat back. (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
3. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the trunk side trim. (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
5. Disconnect the rear ABS wheel-speed sensor connector.

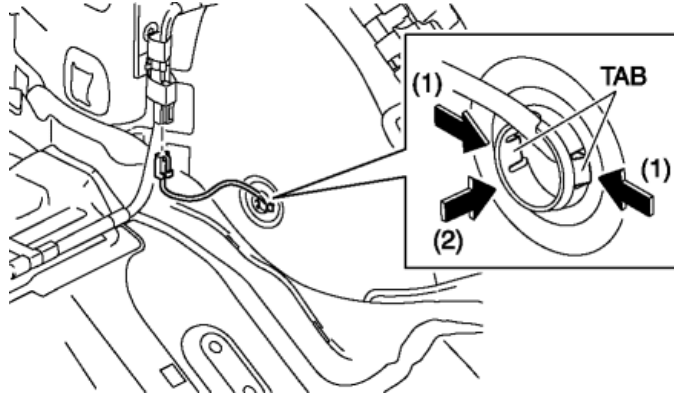

6. Press the rear ABS wheel-speed sensor tabs and press out the sensor toward the outside of the vehicle.
7. Remove in the order indicated in the table.
8. Install in the reverse order of removal.

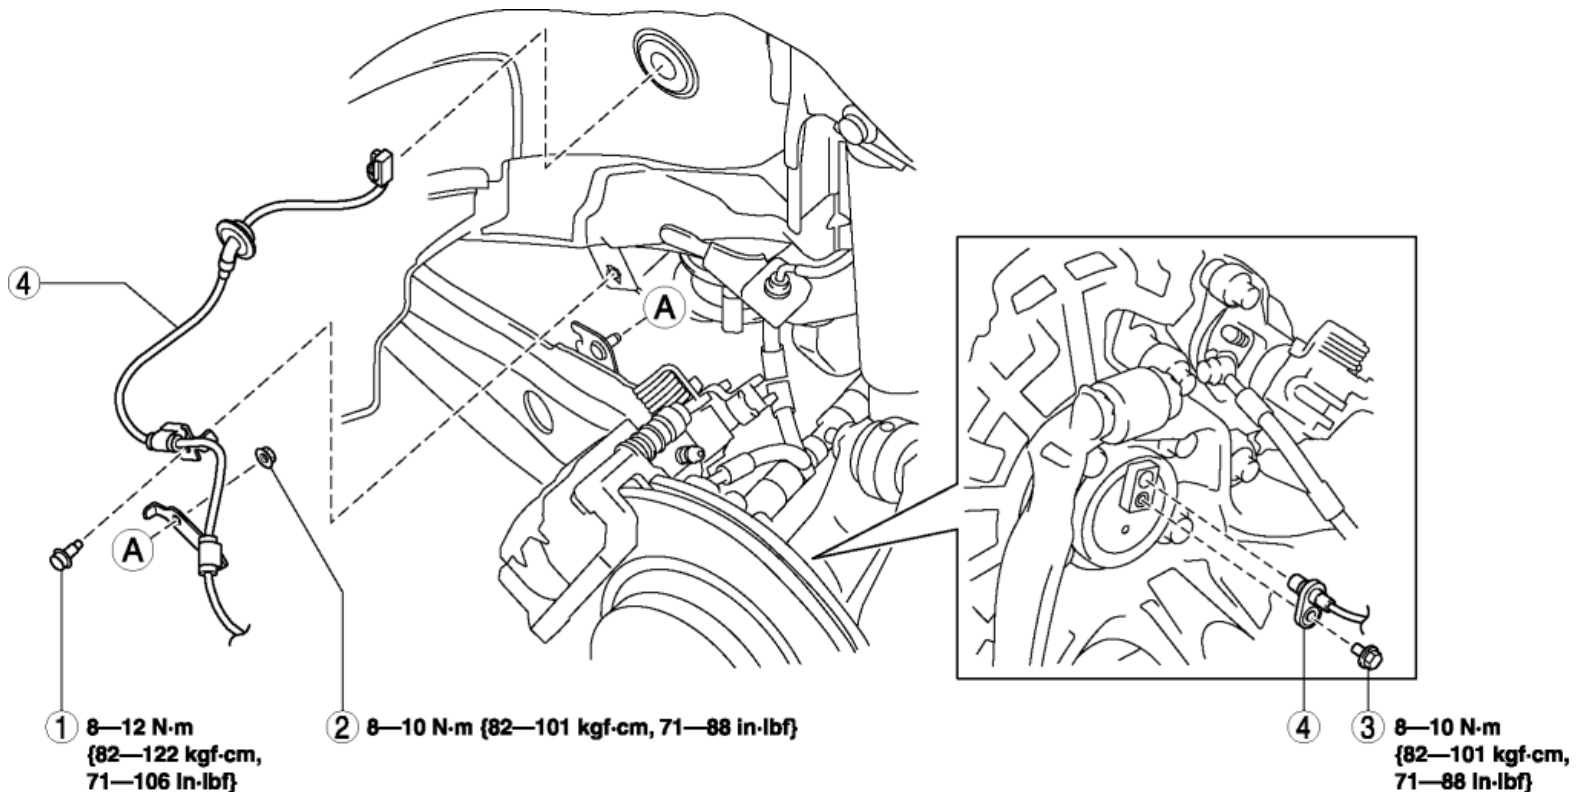


2	Nut
3	Bolt
4	Rear ABS wheel-speed sensor


2012 - Mazda6 - Brakes

REAR ABS WHEEL-SPEED SENSOR REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
2. Remove the rear side seat back. (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
3. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
4. Remove the trunk side trim. (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
5. Disconnect the rear ABS wheel-speed sensor connector.

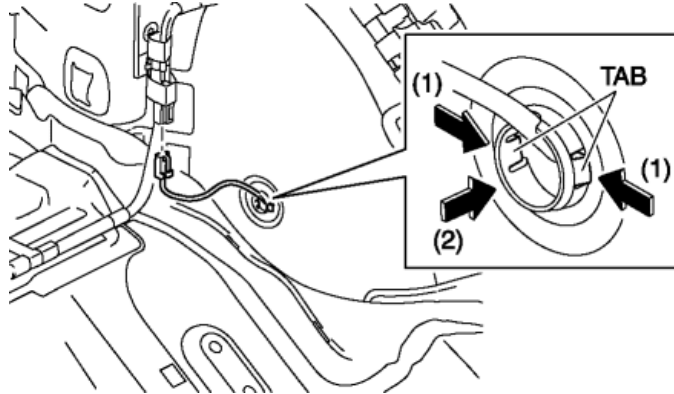

6. Press the rear ABS wheel-speed sensor tabs and press out the sensor toward the outside of the vehicle.
7. Remove in the order indicated in the table.
8. Install in the reverse order of removal.

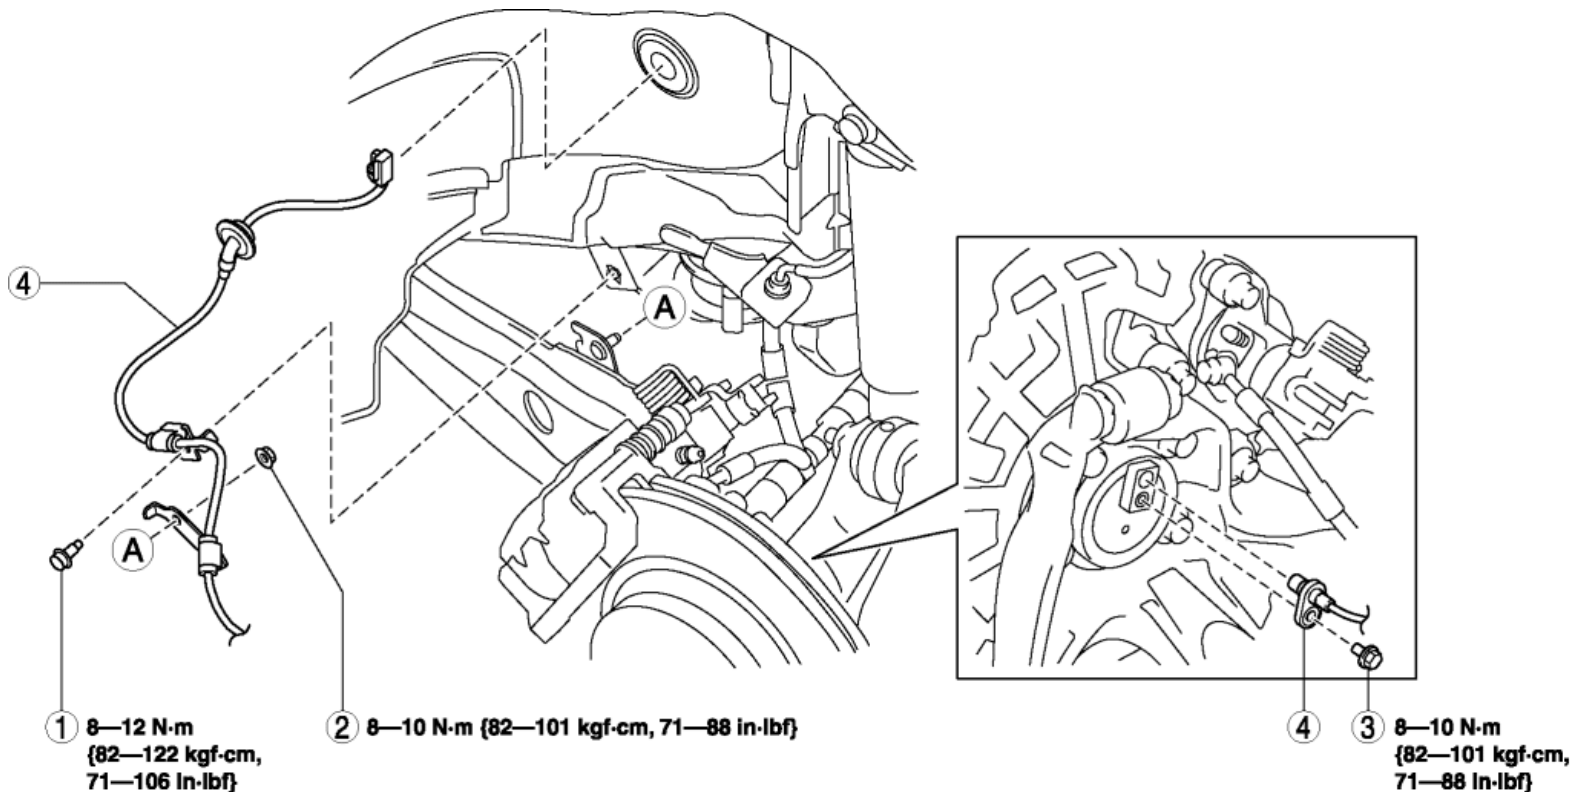

2	Nut
3	Bolt
4	Rear ABS wheel-speed sensor