


2012 - Mazda6 - Engine

PURGE SOLENOID VALVE INSPECTION [MZR 2.5]

Airflow Inspection

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Remove the purge solenoid valve. (See [PURGE SOLENOID VALVE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 3. Inspect airflow between the ports under the following conditions.

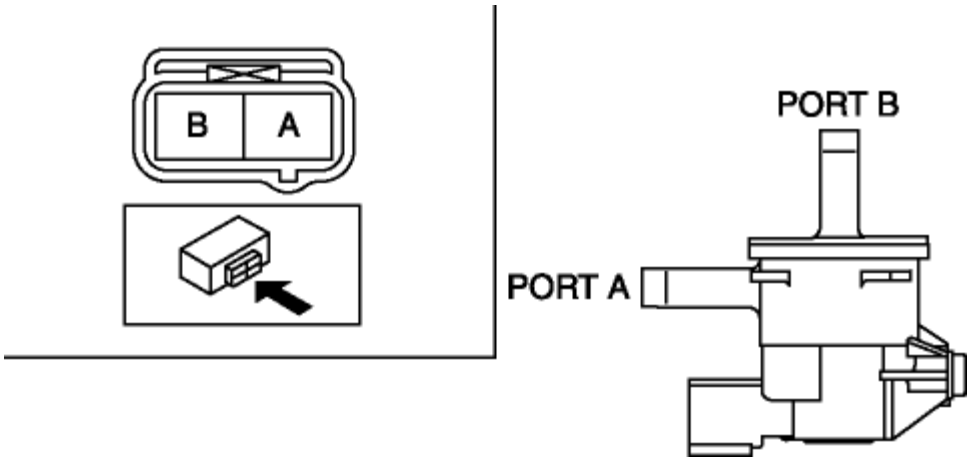

Measured condition	Continuity between A—B
When voltage is not applied between terminals A and B	No airflow
When voltage is applied between terminals A and B	Airflow detected


- If not as specified, replace the purge solenoid valve. (See [PURGE SOLENOID VALVE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

2012 - Mazda6 - Engine

PURGE SOLENOID VALVE INSPECTION [MZR 2.5]

Airflow Inspection

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Remove the purge solenoid valve. (See [PURGE SOLENOID VALVE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 3. Inspect airflow between the ports under the following conditions.

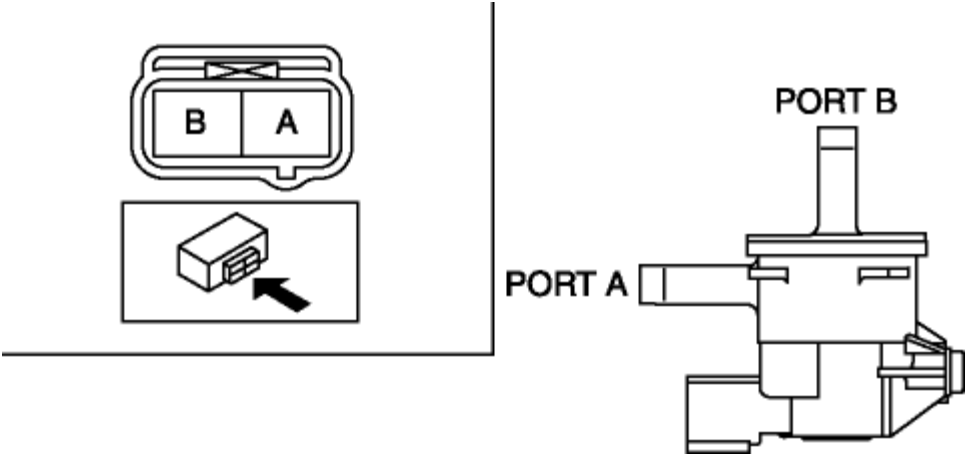

Measured condition	Continuity between A—B
When voltage is not applied between terminals A and B	No airflow
When voltage is applied between terminals A and B	Airflow detected

- If not as specified, replace the purge solenoid valve. (See [PURGE SOLENOID VALVE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)