


2012 - Mazda6 - Engine

EGR VALVE INSPECTION [MZR 2.5]

Resistance Inspection

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Disconnect the EGR valve connector.
- 3. Measure the resistance between the EGR valve terminals.

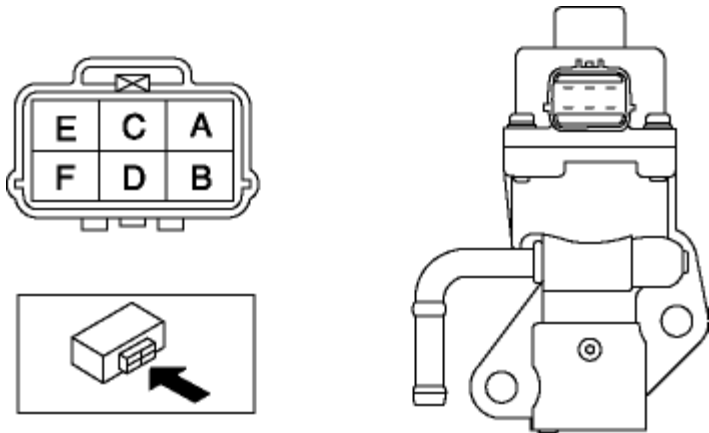

EGR valve terminal	Resistance inspection (ohm)
C—A	12—16 (At room temperature)
D—B	
C—E	
D—F	


- If not within the specification, replace the EGR valve. (See [EGR VALVE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

2012 - Mazda6 - Engine

EGR VALVE INSPECTION [MZR 2.5]

Resistance Inspection

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Disconnect the EGR valve connector.
- 3. Measure the resistance between the EGR valve terminals.

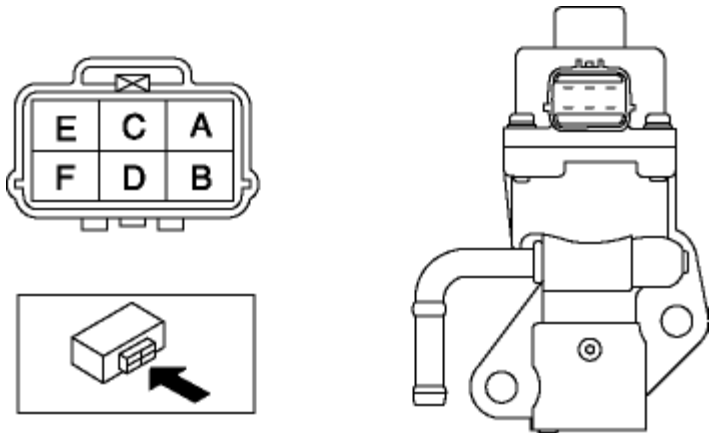

EGR valve terminal	Resistance inspection (ohm)
C—A	12—16 (At room temperature)
D—B	
C—E	
D—F	

- If not within the specification, replace the EGR valve. (See [EGR VALVE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)