


2012 - Mazda6 - Body and Accessories

ACTIVE COMMAND MODES INSPECTION [BLIND SPOT MONITORING (BSM)]

1. Connect the M-MDS (IDS) to the DLC-2.

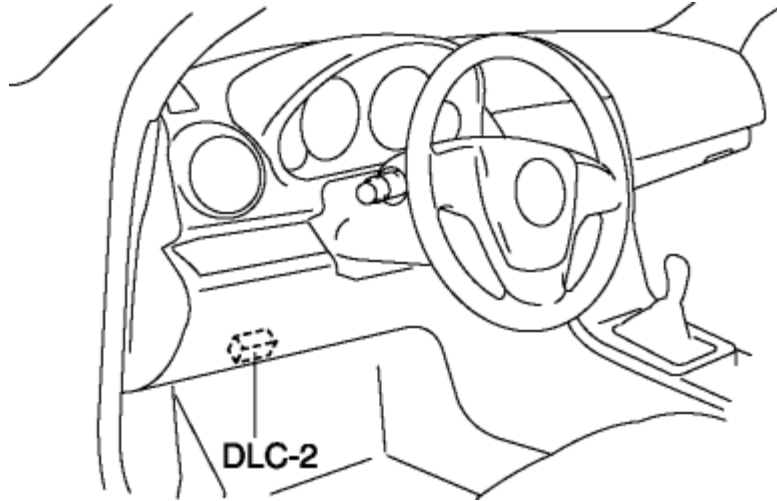


2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
 - Select "DataLogger".
 - Select "Modules".
 - Select "BSML" or "BSMR".
3. Select the active command modes from the PID table.
4. Perform the active command modes, inspect the operations for each parts.
 - If the operation of output parts cannot be verified after the active command mode inspection is performed, this could indicate the possibility of an open or short circuit, sticking, or operation malfunction in the output parts.

2012 - Mazda6 - Body and Accessories

ACTIVE COMMAND MODES INSPECTION [BLIND SPOT MONITORING (BSM)]

1. Connect the M-MDS (IDS) to the DLC-2.

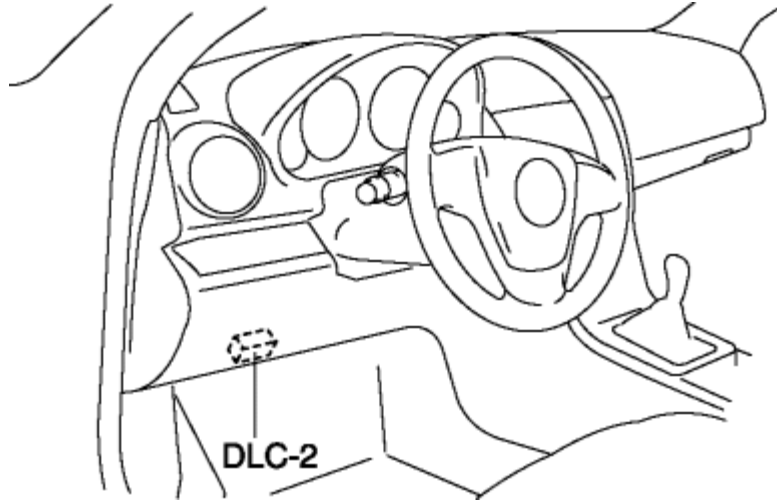

2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
 - Select "DataLogger".
 - Select "Modules".
 - Select "BSML" or "BSMR".
3. Select the active command modes from the PID table.
4. Perform the active command modes, inspect the operations for each parts.
 - If the operation of output parts cannot be verified after the active command mode inspection is performed, this could indicate the possibility of an open or short circuit, sticking, or operation malfunction in the output parts.