



NOTE:

-
- Diagram illustrating the fuel pump unit with labeled components:
- PLUG PLUG
 - PLUG
 - PORT C
 - PORT B
 - PORT A
 - FUEL PUMP UNIT

- b. Apply a pressure to port A and wait for a while.
 - c. Verify that there is no air flow leakage from the fuel tank.
 - If there is air flow, replace the fuel tank. (See **FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6]**.)
4. Plug the fuel pump unit pipe and port B.

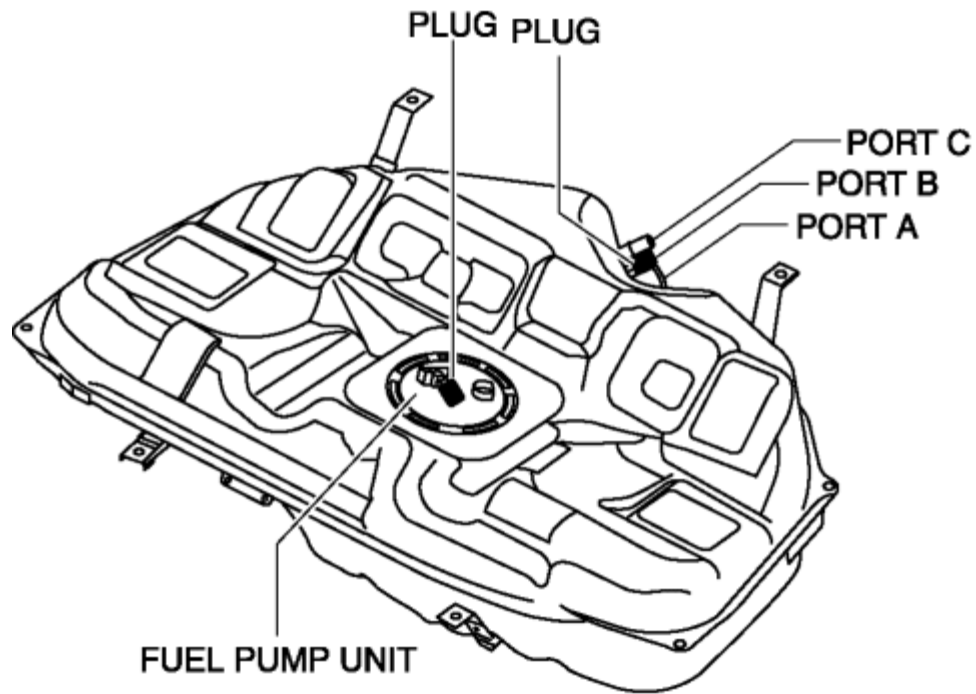

5. Level the fuel tank.
6. Apply a pressure to port A and wait for a while.
7. With the pressure still applied, verify that there is air flow port C and the pressure.
 - If there is no air flow, replace the fuel tank. (See [FUEL TANK REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
 - If there is air flow, place the fuel tank upside down.
8. Apply a pressure to port A and wait for a while.

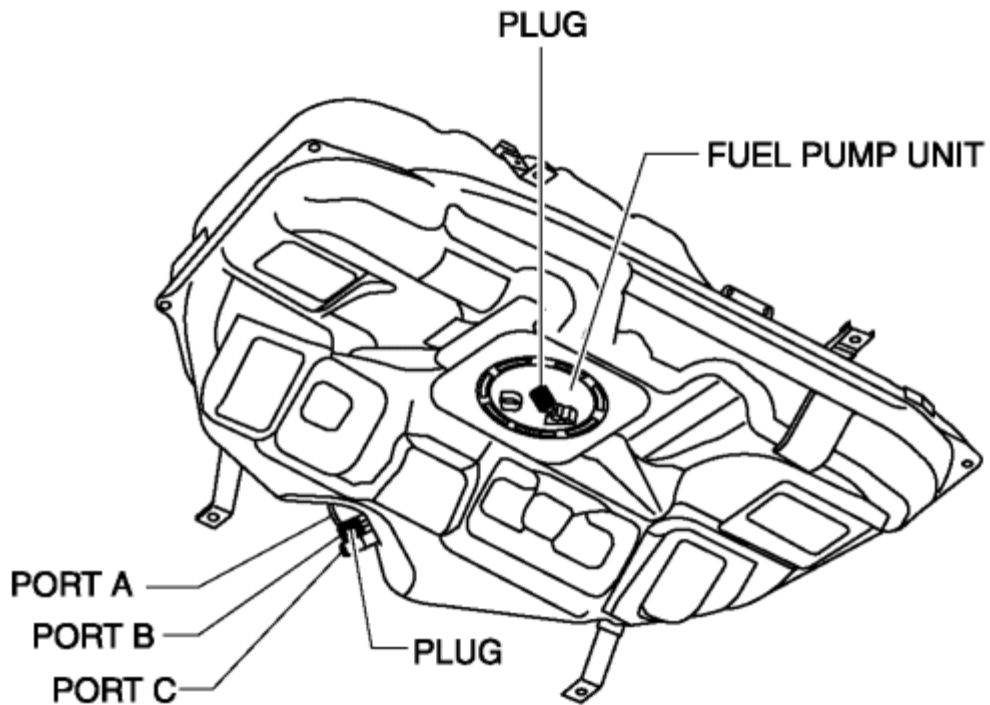

9. With the pressure still applied, verify that there is no air flow from port C.

If there is air flow, replace the fuel tank. (See **FUEL TANK
REMOVAL/ INSTALLATION [MZI 3.7 V6]** .)

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.


NOTE:

-
- Diagram illustrating the fuel pump unit with labeled components:
- PLUG PLUG
 - PLUG
 - PORT C
 - PORT B
 - PORT A
 - FUEL PUMP UNIT

- b. Apply a pressure to port A and wait for a while.
 - c. Verify that there is no air flow leakage from the fuel tank.
 - If there is air flow, replace the fuel tank. (See **FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6]**.)
4. Plug the fuel pump unit pipe and port B.

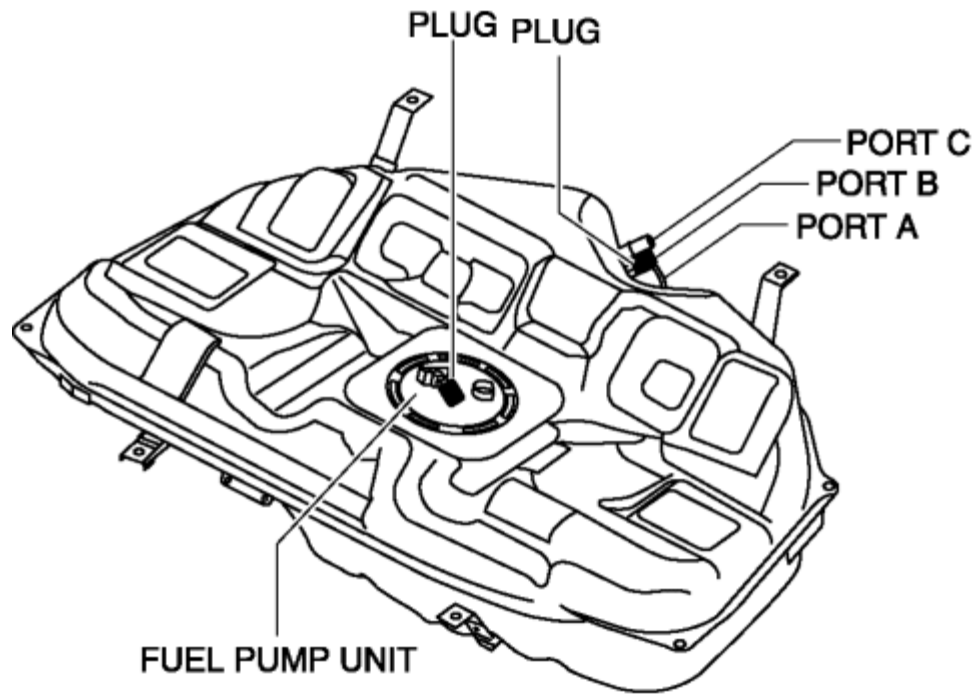

5. Level the fuel tank.
6. Apply a pressure to port A and wait for a while.
7. With the pressure still applied, verify that there is air flow port C and the pressure.
 - If there is no air flow, replace the fuel tank. (See [FUEL TANK REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
 - If there is air flow, place the fuel tank upside down.
8. Apply a pressure to port A and wait for a while.

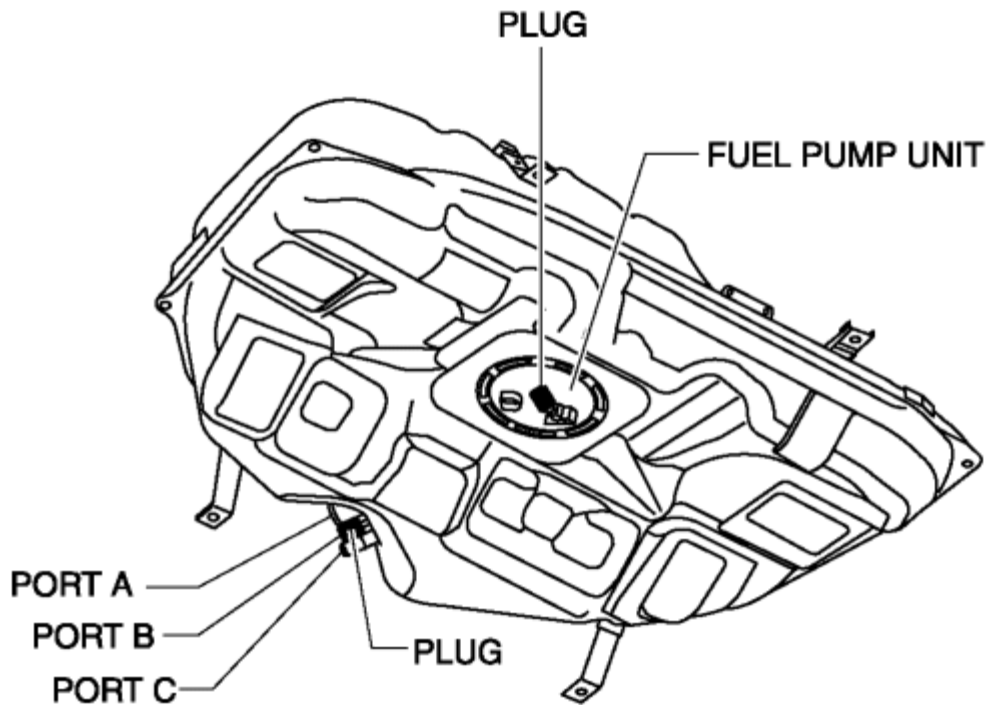

9. With the pressure still applied, verify that there is no air flow from port C.

If there is air flow, replace the fuel tank. (See **FUEL TANK
REMOVAL/ INSTALLATION [MZI 3.7 V6]** .)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.