


2012 - Mazda6 - HVAC

REFRIGERANT SYSTEM GENERAL PROCEDURES

1. Fully close the valves of the manifold gauge.
2. Connect the charging hoses to the high- and low- pressure side joints of the manifold gauge.

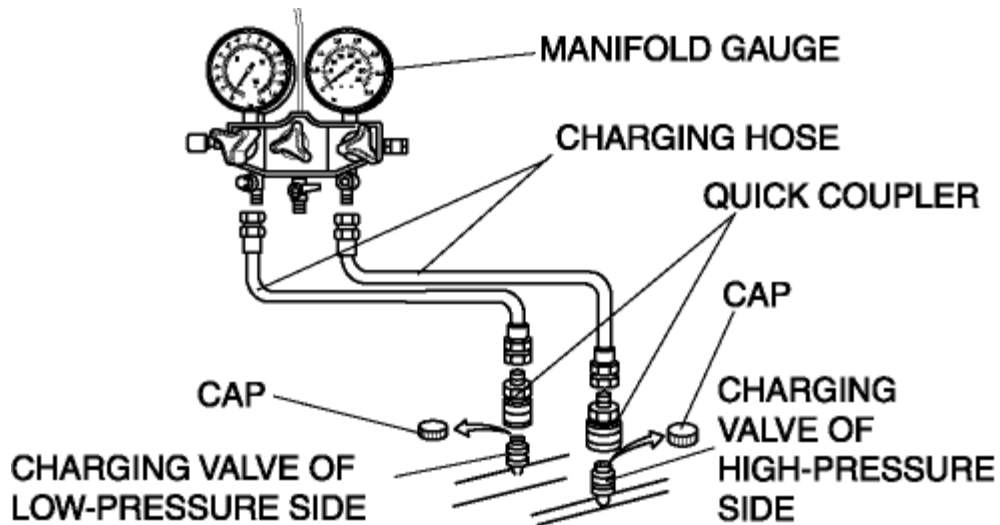


3. Connect the quick couplers to the ends of the charging hoses.
4. Connect the quick couplers to the charging valves.

2012 - Mazda6 - HVAC

REFRIGERANT SYSTEM GENERAL PROCEDURES

1. Fully close the valves of the manifold gauge.
2. Connect the charging hoses to the high- and low- pressure side joints of the manifold gauge.

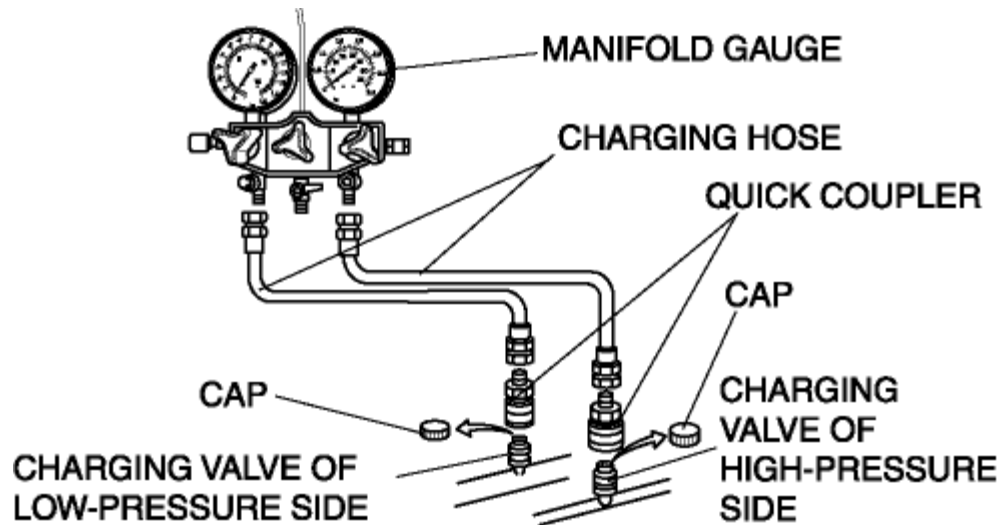

3. Connect the quick couplers to the ends of the charging hoses.
4. Connect the quick couplers to the charging valves.