


2012 - Mazda6 - Body and Accessories

ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION

Front

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION](#))
3. Remove the fasteners.

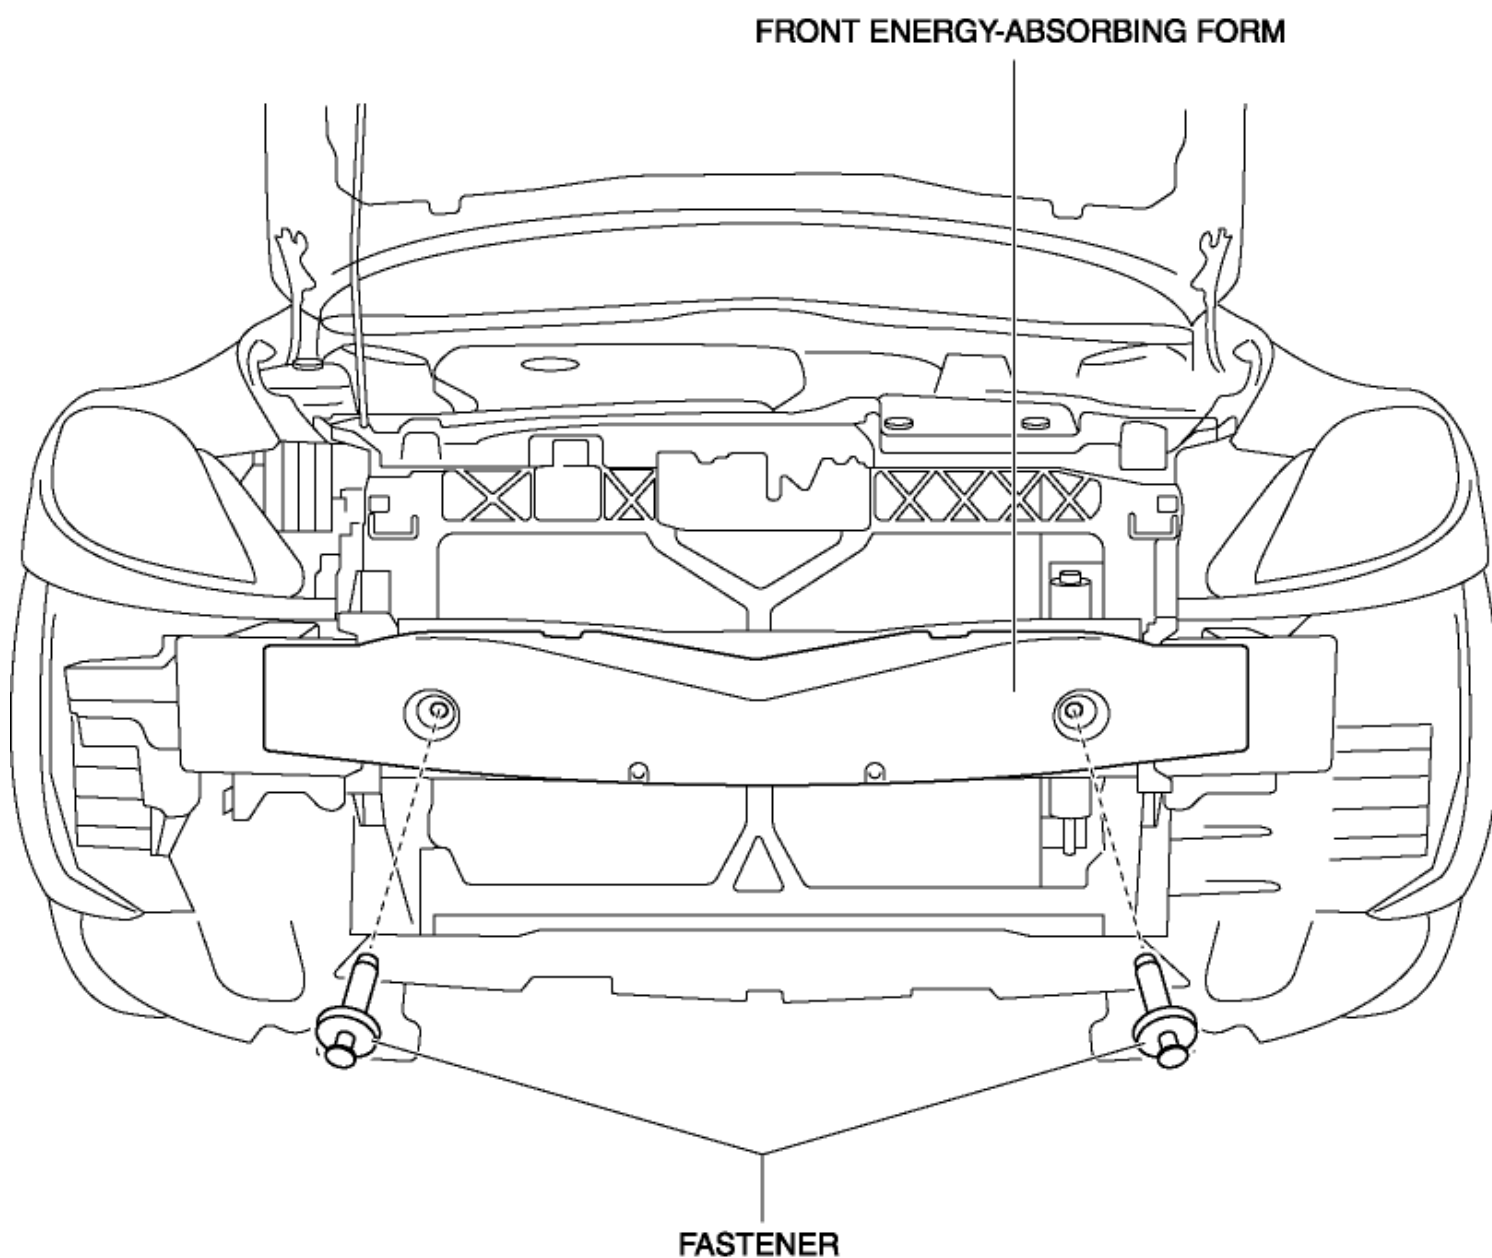


4. Remove the front energy-absorbing form.

5. Install in the reverse order of removal.

Rear

1. Remove the rear splash shield. (See [SPLASH SHIELD REMOVAL/ INSTALLATION.](#))
2. Remove the rear combination light. (See [REAR COMBINATION LIGHT REMOVAL/ INSTALLATION.](#))
3. Remove the rear bumper. (See [REAR BUMPER REMOVAL/ INSTALLATION.](#))
4. Remove the fasteners.

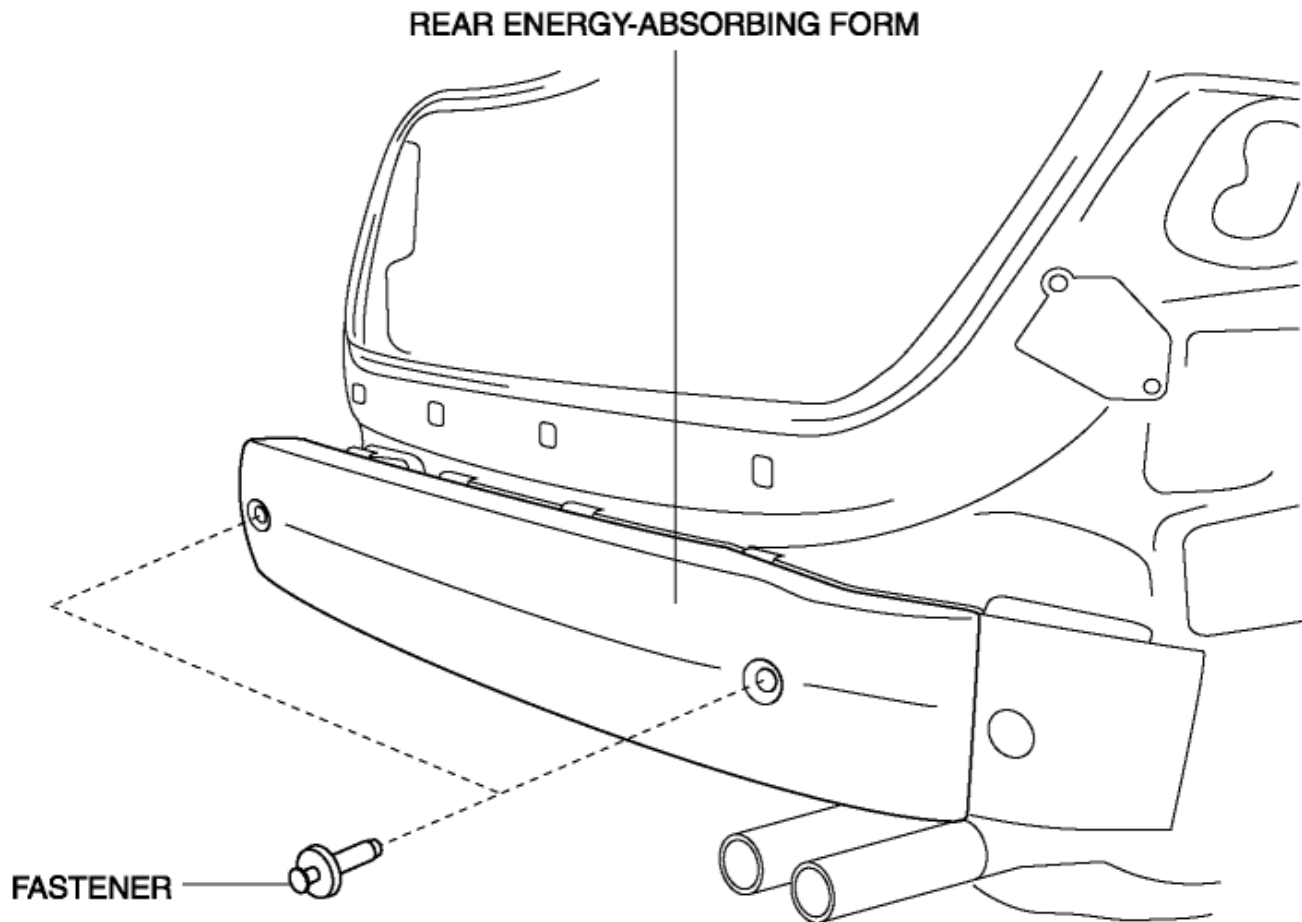


5. Remove the rear energy-absorbing form.
6. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

ENERGY-ABSORBING FORM REMOVAL/ INSTALLATION

Front

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION](#))
3. Remove the fasteners.

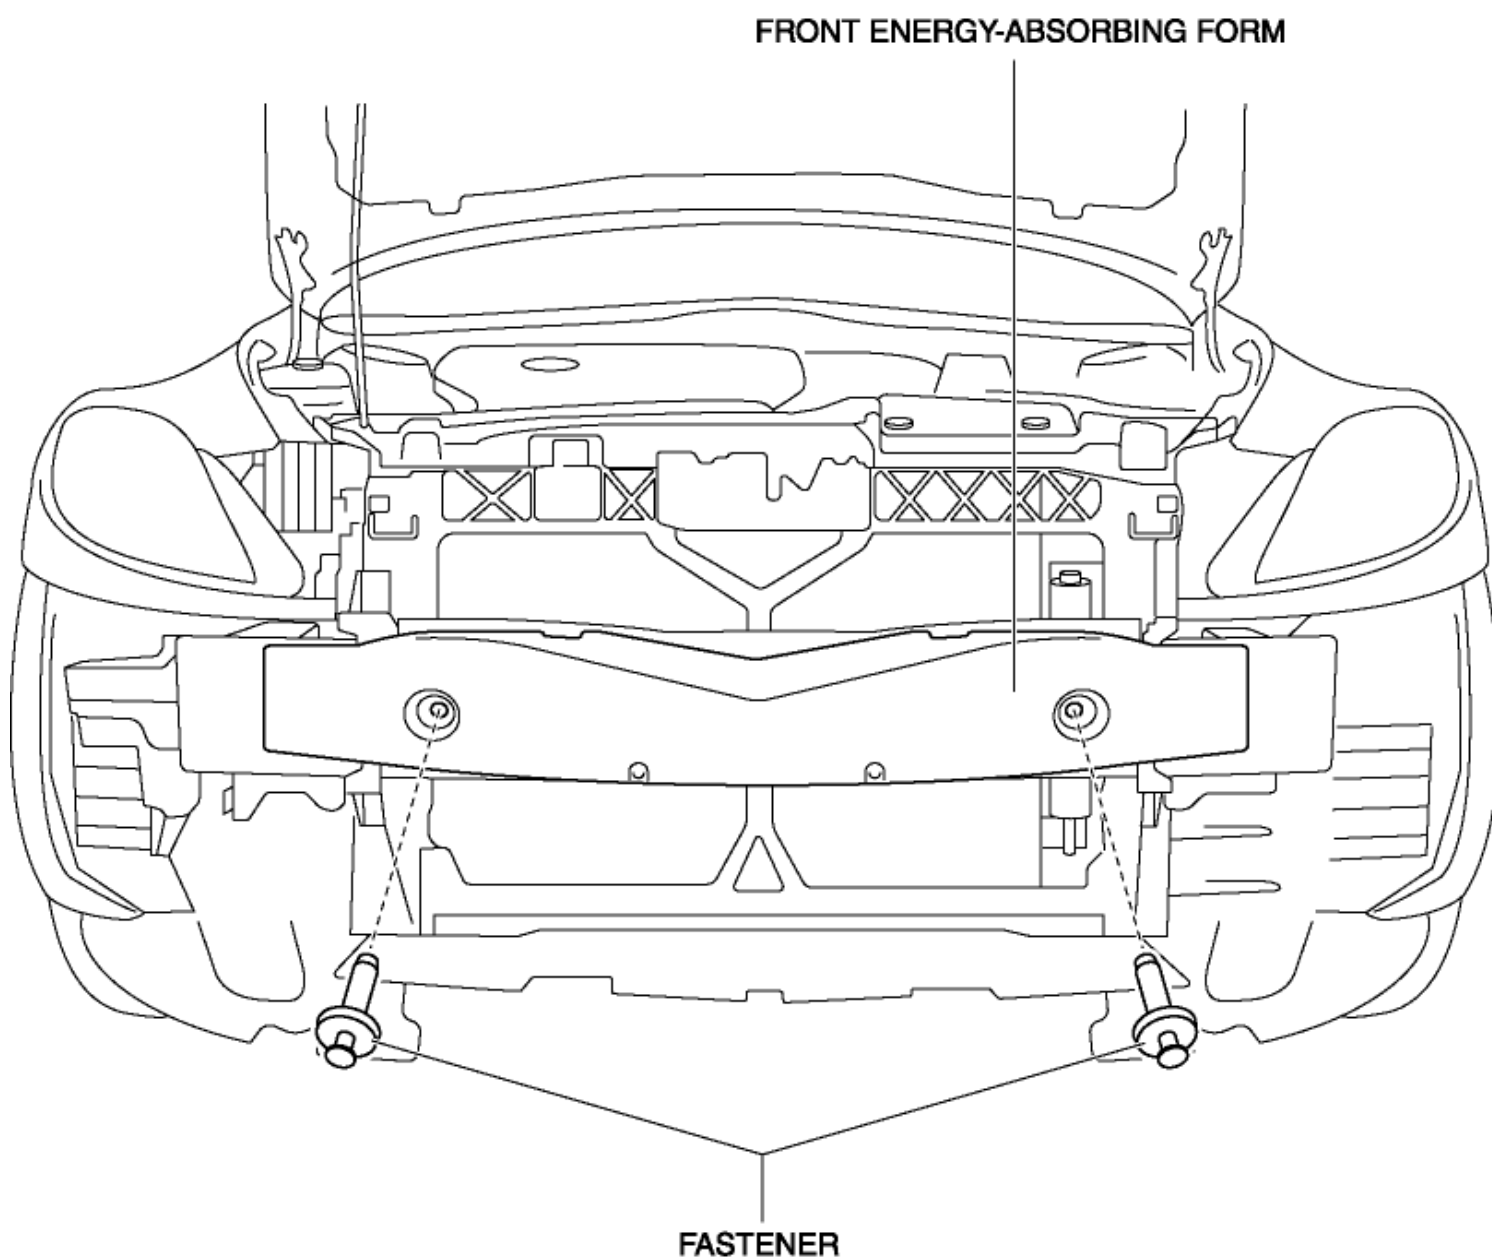


4. Remove the front energy-absorbing form.

5. Install in the reverse order of removal.

Rear

1. Remove the rear splash shield. (See [SPLASH SHIELD REMOVAL/ INSTALLATION.](#))
2. Remove the rear combination light. (See [REAR COMBINATION LIGHT REMOVAL/ INSTALLATION.](#))
3. Remove the rear bumper. (See [REAR BUMPER REMOVAL/ INSTALLATION.](#))
4. Remove the fasteners.

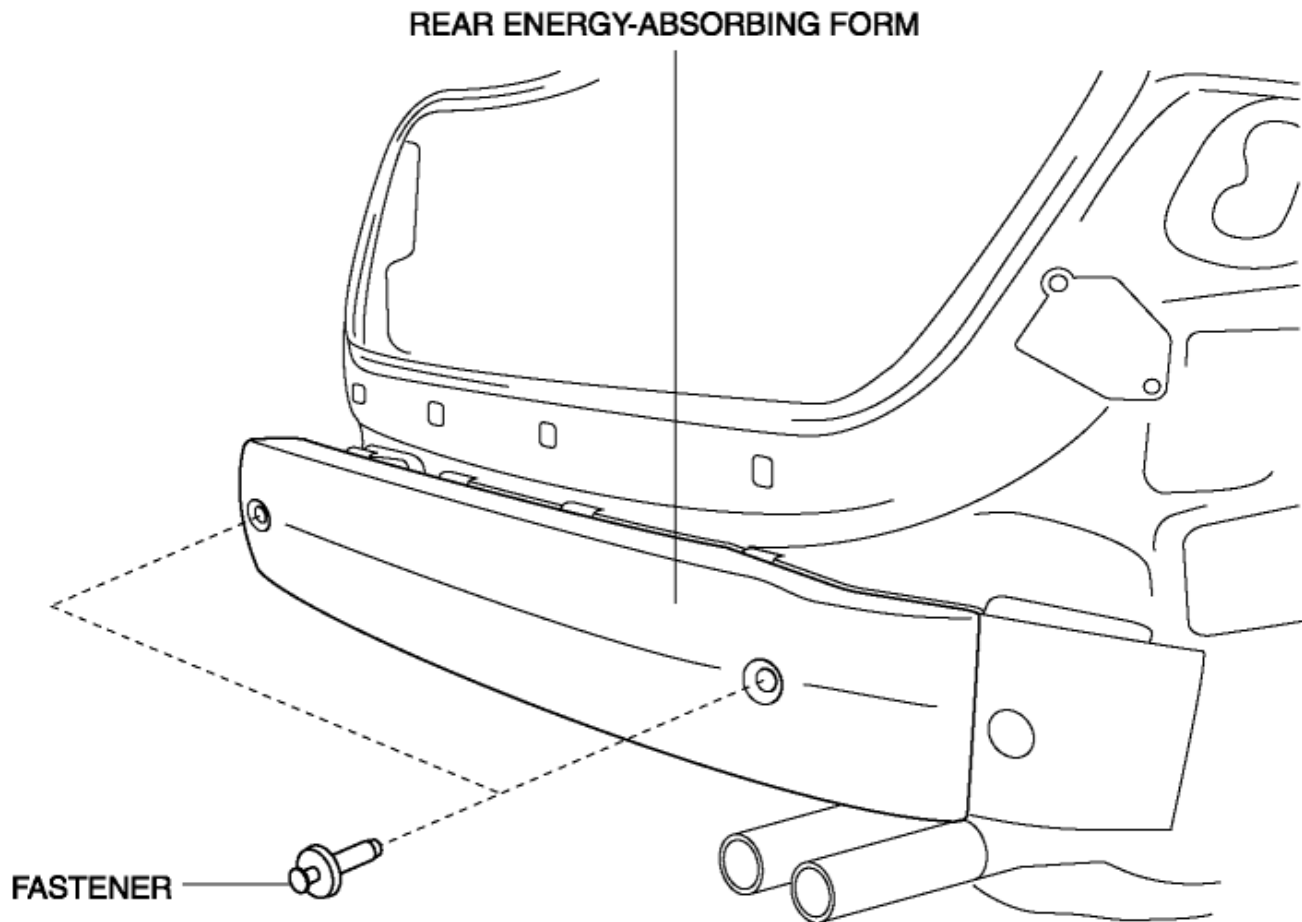

5. Remove the rear energy-absorbing form.
6. Install in the reverse order of removal.