


2012 - Mazda6 - Body and Accessories

FRONT BELTLINE MOLDING REMOVAL/ INSTALLATION

1. Fully open the front door glass.
2. Disconnect the negative battery cable.
3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#))
4. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION](#))
5. Remove the power outer mirror. (See [POWER OUTER MIRROR REMOVAL/ INSTALLATION](#))
6. Remove clip C using a fastener remover and pull the front beltline molding in the direction of the arrow (1) shown in the figure.

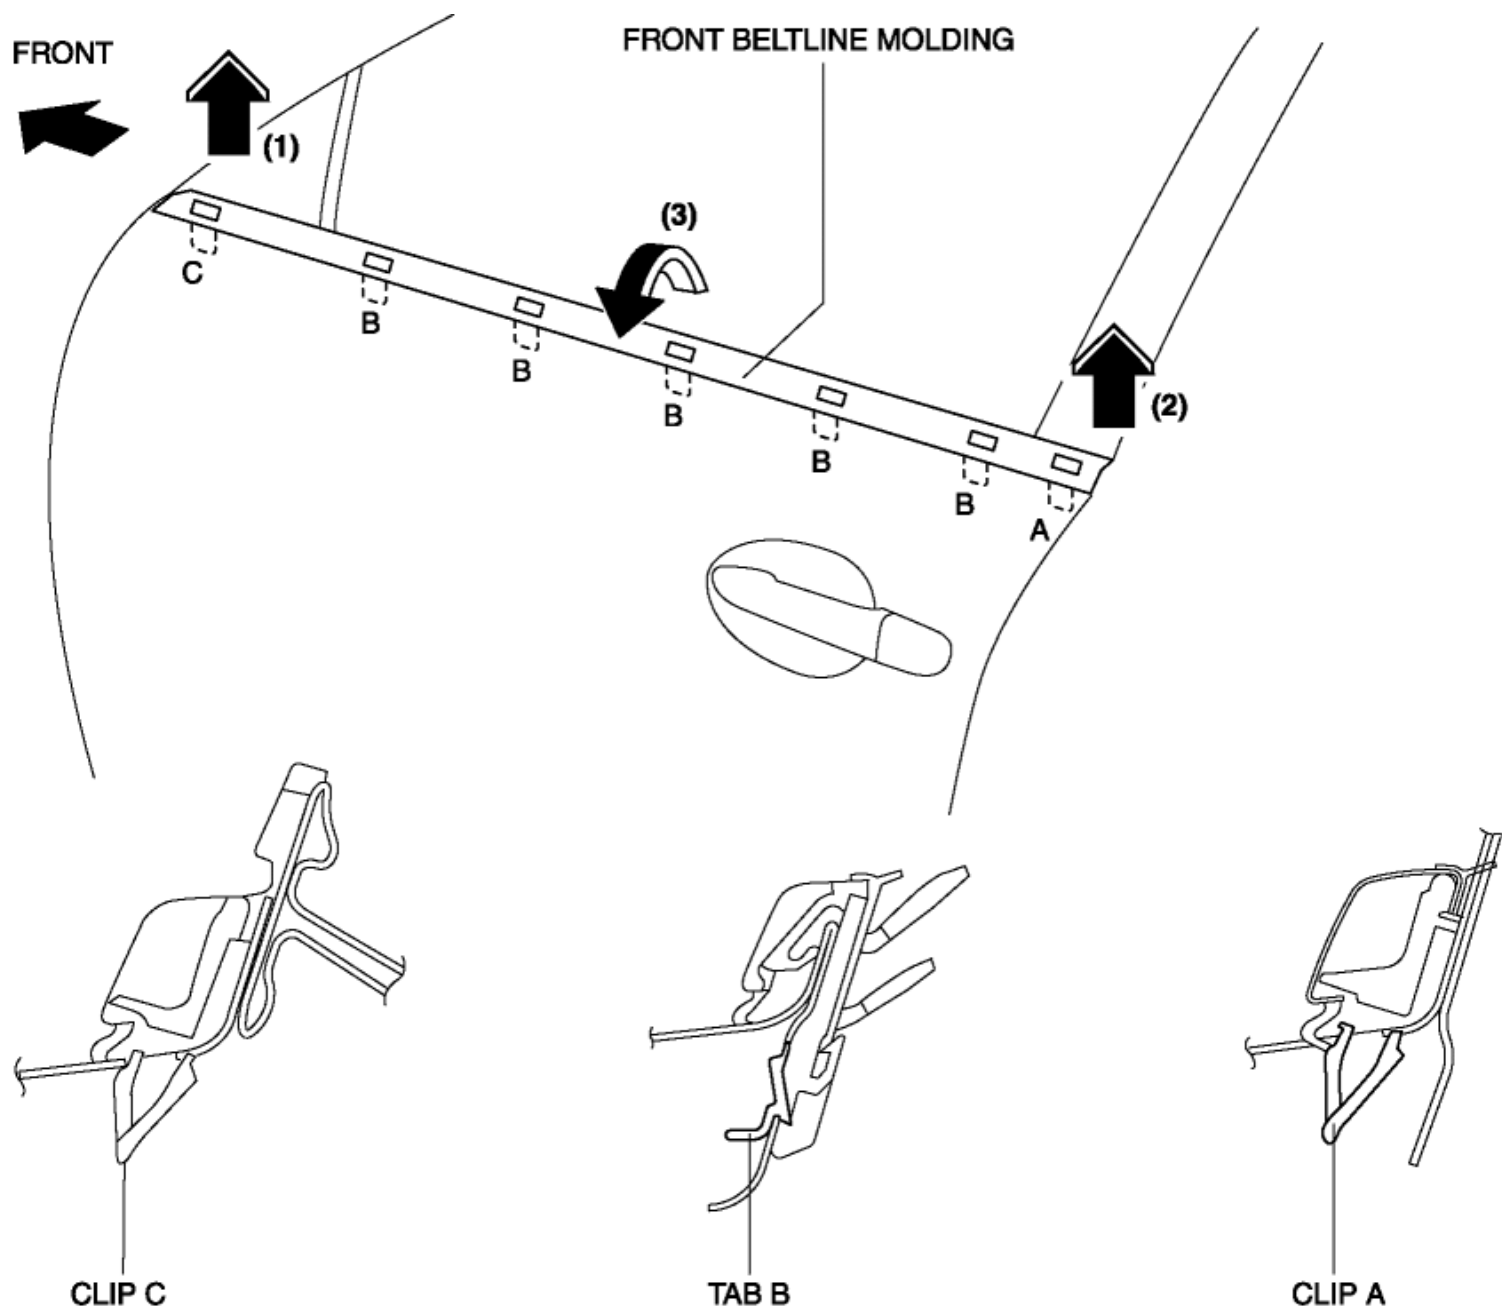

7. Remove clip A using a fastener remover and pull the front beltline molding in the direction of the arrow (2) shown in the figure.


8. Rotate the front beltline molding in the direction of the arrow (3) shown in the figure and remove it while detaching tab B.

9. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

FRONT BELTLINE MOLDING REMOVAL/ INSTALLATION

1. Fully open the front door glass.
2. Disconnect the negative battery cable.
3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#))
4. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION](#))
5. Remove the power outer mirror. (See [POWER OUTER MIRROR REMOVAL/ INSTALLATION](#))
6. Remove clip C using a fastener remover and pull the front beltline molding in the direction of the arrow (1) shown in the figure.

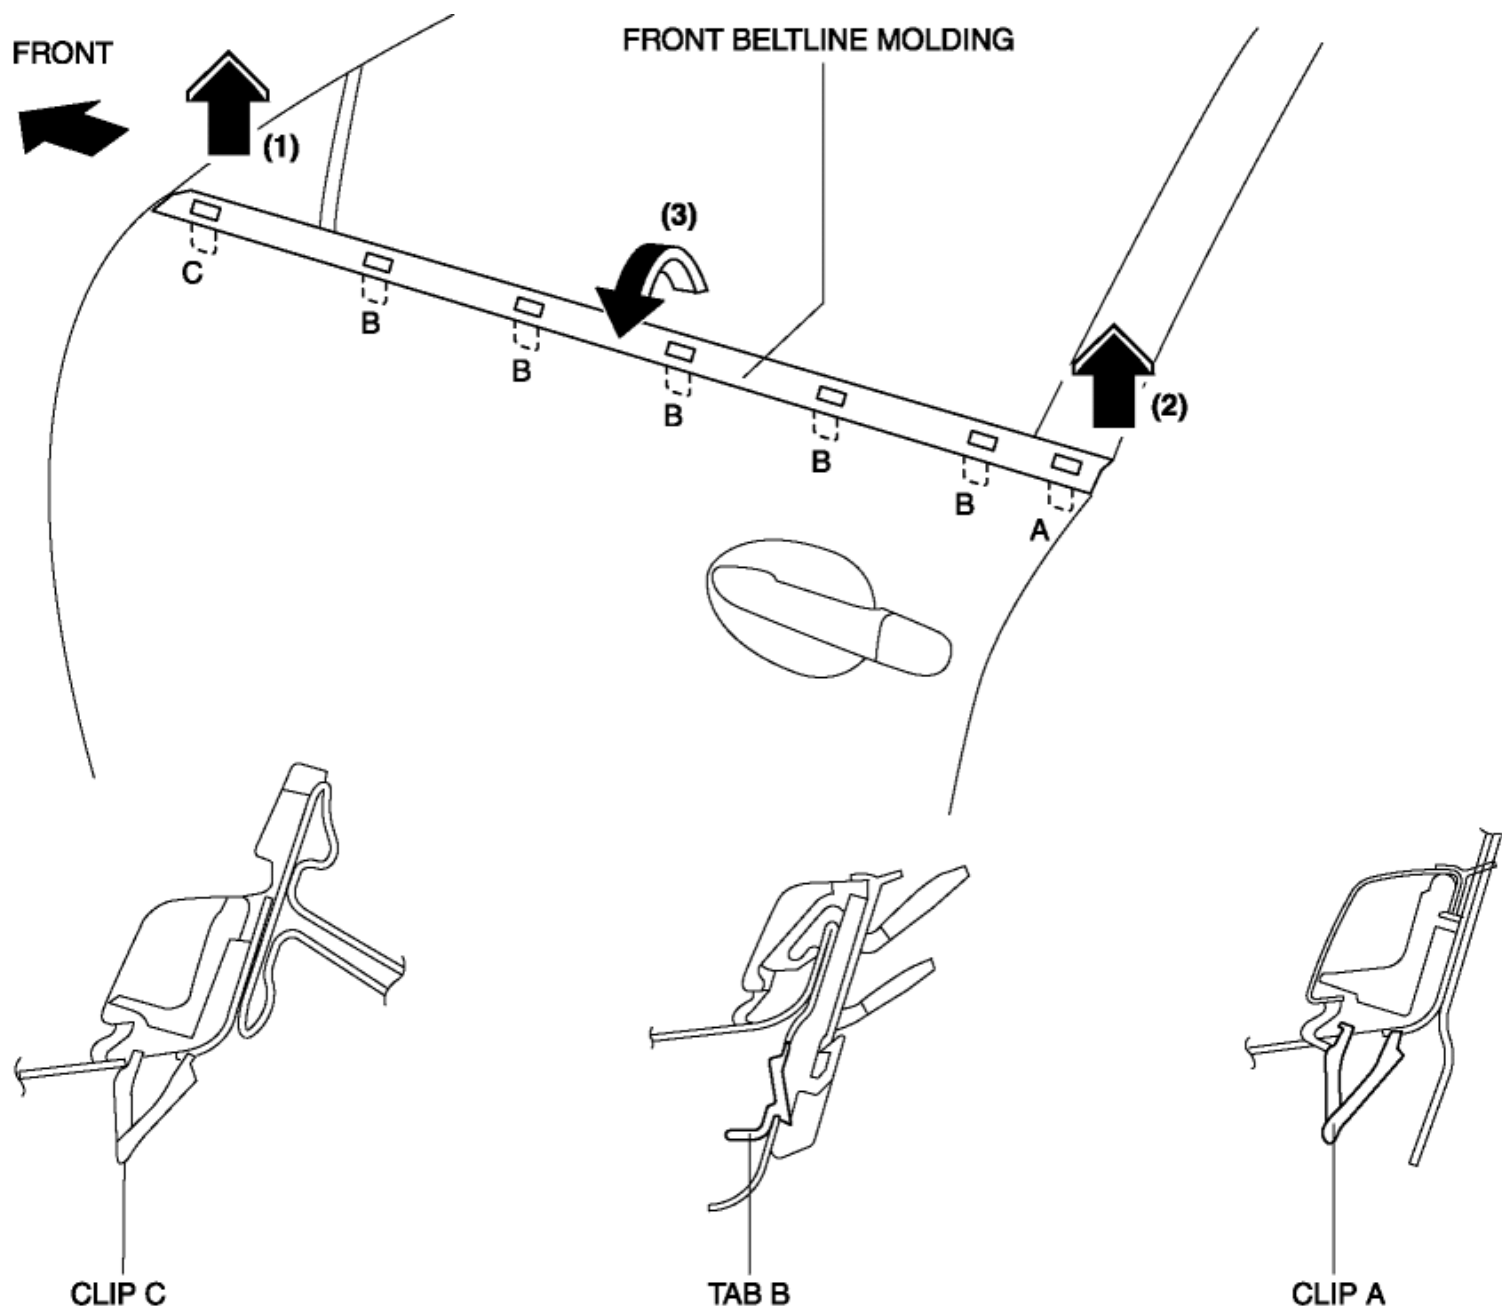

7. Remove clip A using a fastener remover and pull the front beltline molding in the direction of the arrow (2) shown in the figure.

8. Rotate the front beltline molding in the direction of the arrow (3) shown in the figure and remove it while detaching tab B.

9. Install in the reverse order of removal.