



2012 - Mazda6 - Body and Accessories

SUNVISOR REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the screw.

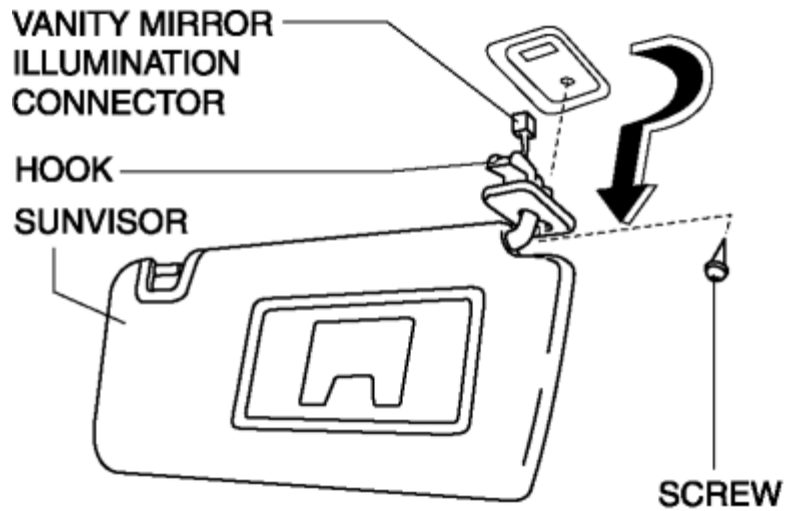

3. Rotate the sunvisor in the direction of the arrow.
4. Unhook and remove the sunvisor.
5. Disconnect the vanity mirror illumination connector.
6. Press the center adaptor tabs as shown in the figure using two tape-wrapped flathead screwdrivers, and remove the center adaptor.

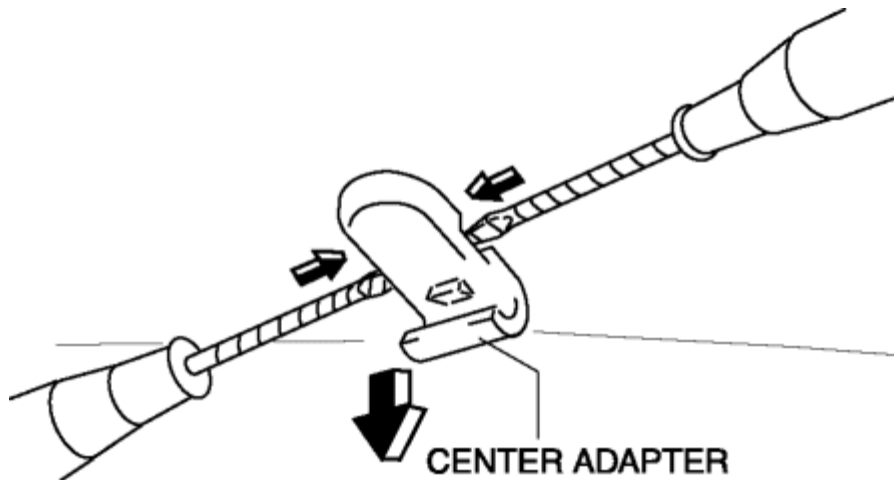


7. Install in the reverse order of removal.


2012 - Mazda6 - Body and Accessories

SUNVISOR REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the screw.

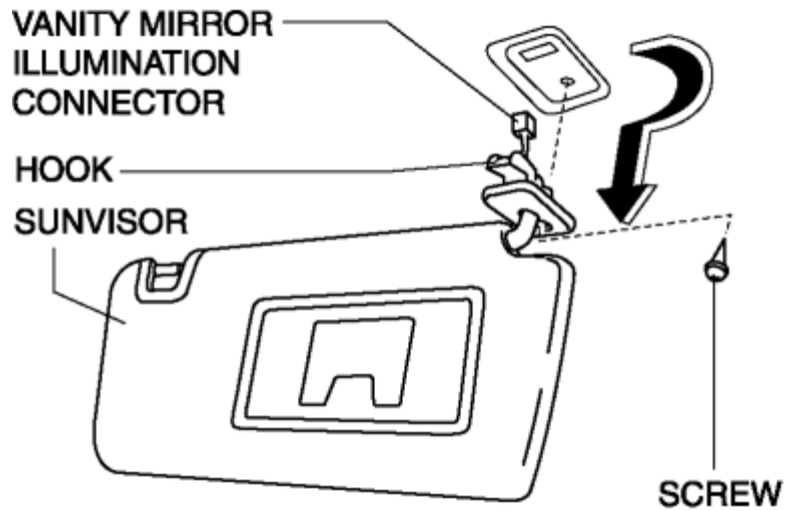

3. Rotate the sunvisor in the direction of the arrow.
4. Unhook and remove the sunvisor.
5. Disconnect the vanity mirror illumination connector.
6. Press the center adaptor tabs as shown in the figure using two tape-wrapped flathead screwdrivers, and remove the center adaptor.

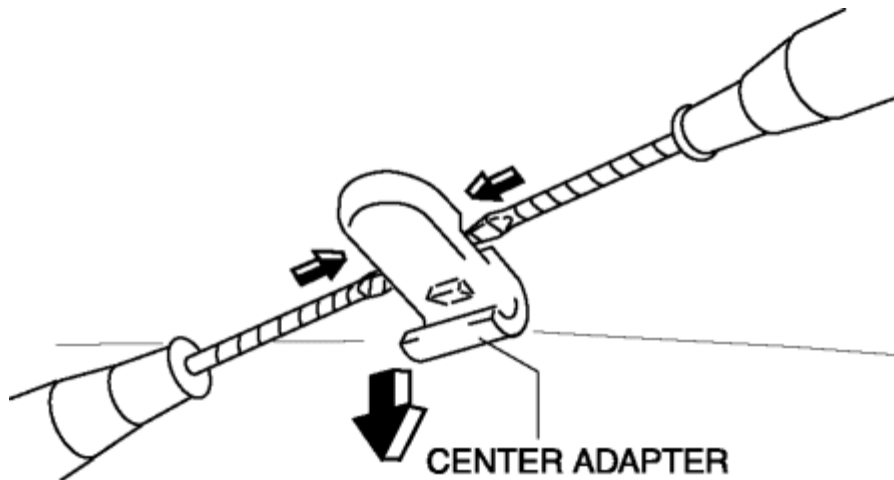

7. Install in the reverse order of removal.

