


2012 - Mazda6 - Body and Accessories

A-PILLAR TRIM REMOVAL/ INSTALLATION

1. Partially peel back the seaming welt.
2. Pull the upper end of the A-pillar trim in the direction of the arrow (1), (2) shown in the figure and remove clip A, B and tab C.

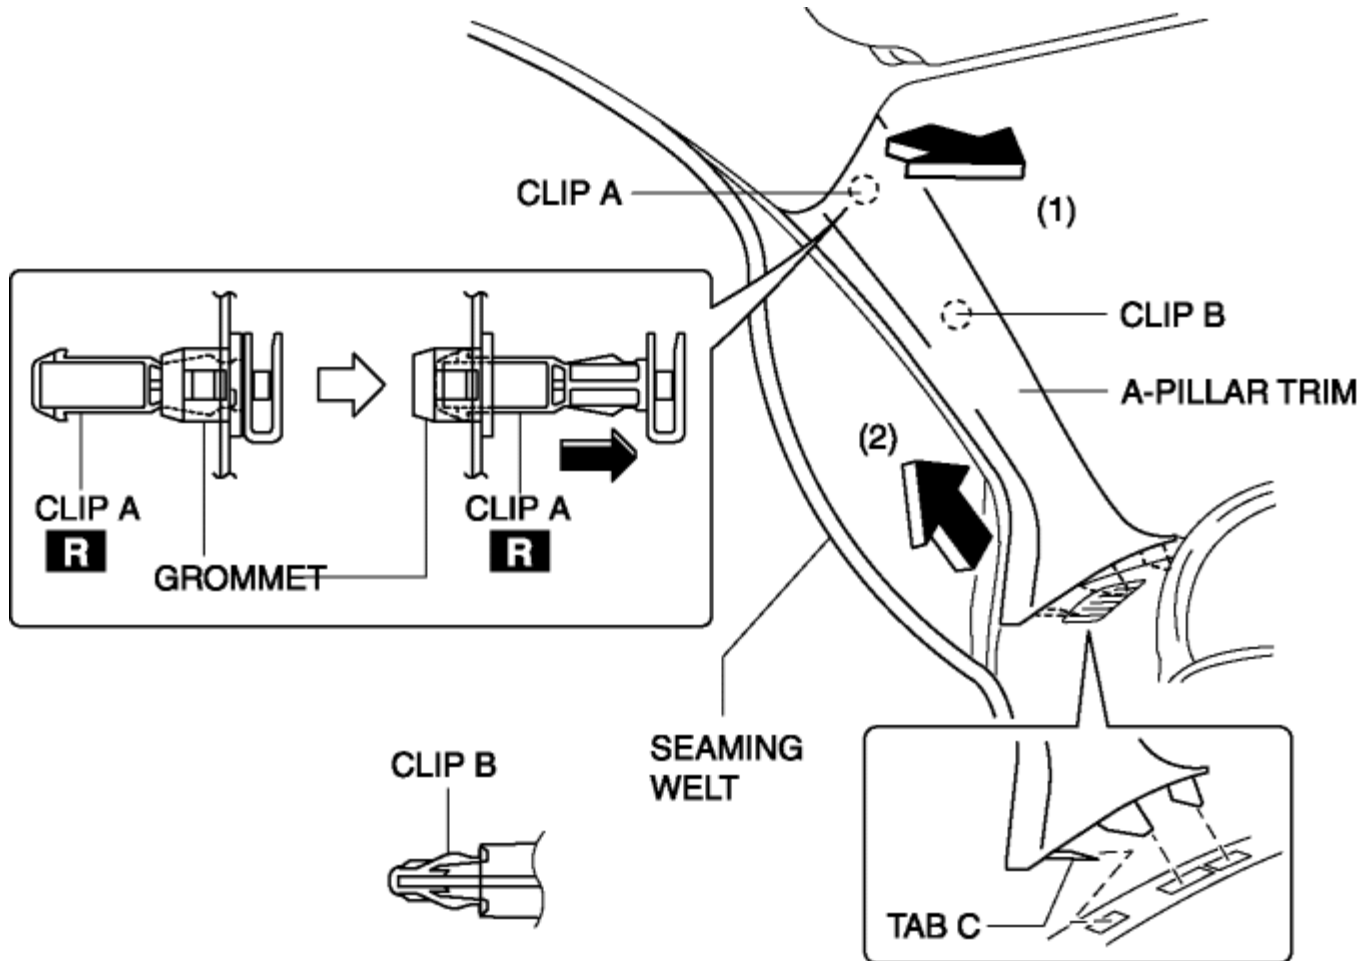


CAUTION:

- When pulling out the A-pillar trim, be careful not to damage the tabs.
3. When installing the A-pillar, Install the new clip A to the A-pillar trim in advance.
 4. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

A-PILLAR TRIM REMOVAL/ INSTALLATION

1. Partially peel back the seaming welt.
2. Pull the upper end of the A-pillar trim in the direction of the arrow (1), (2) shown in the figure and remove clip A, B and tab C.

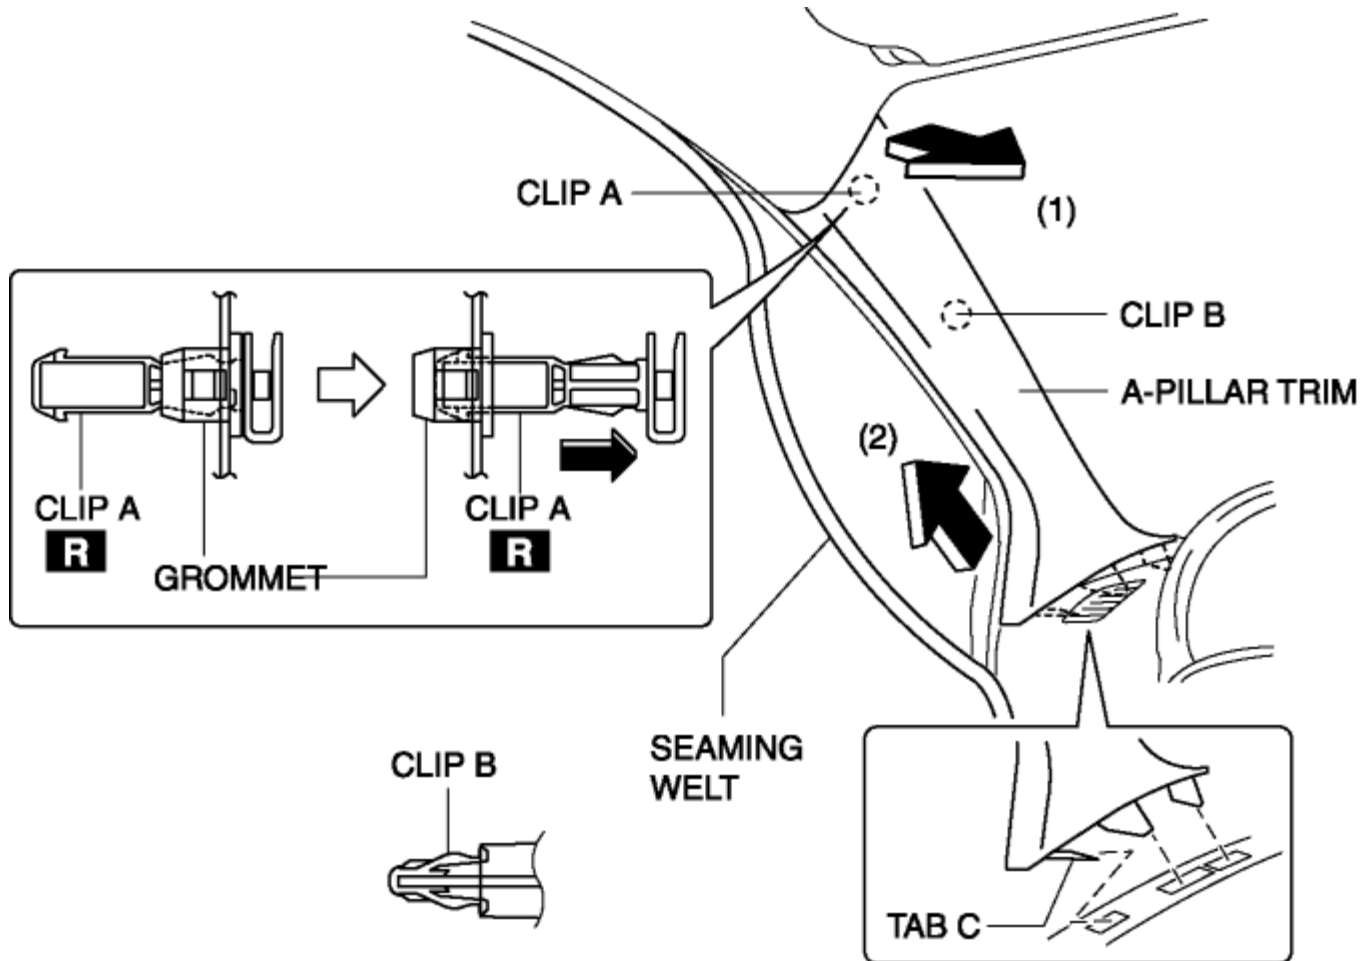

CAUTION:

- When pulling out the A-pillar trim, be careful not to damage the tabs.
3. When installing the A-pillar, Install the new clip A to the A-pillar trim in advance.
 4. Install in the reverse order of removal.