


2012 - Mazda6 - Body and Accessories

FRONT SIDE MARKER LIGHT BULB REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION](#))
3. Rotate the front side marker light socket in the direction of the arrow shown in the figure and remove it.

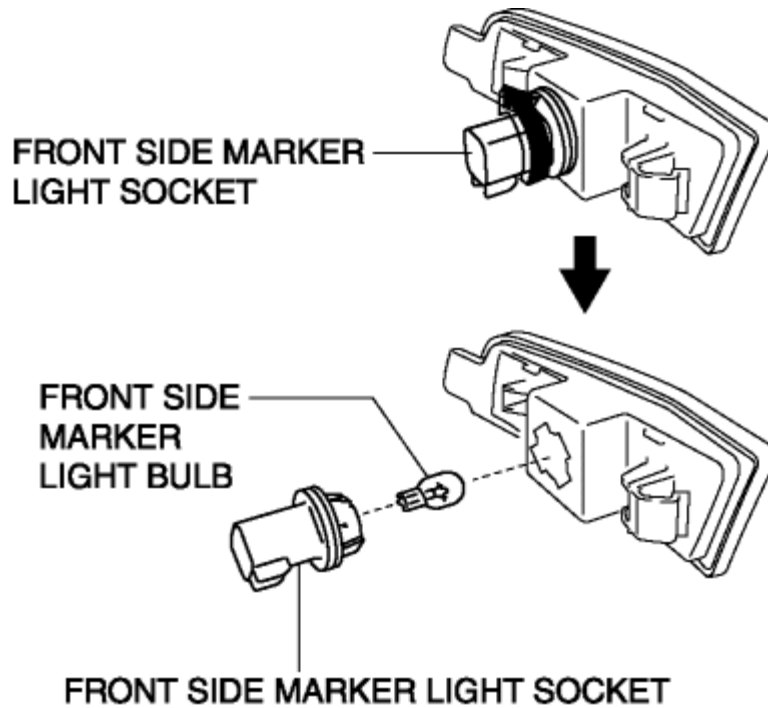


4. Remove the front side marker light bulb.
5. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

FRONT SIDE MARKER LIGHT BULB REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION](#))
3. Rotate the front side marker light socket in the direction of the arrow shown in the figure and remove it.

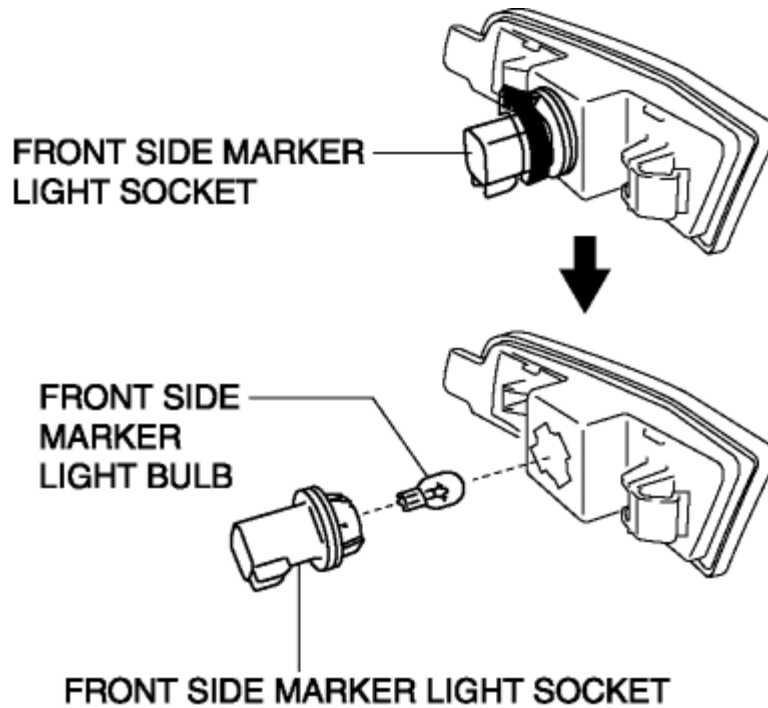

4. Remove the front side marker light bulb.
5. Install in the reverse order of removal.