



2012 - Mazda6 - Body and Accessories

RELAY BLOCK REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]


1. Disconnect the negative battery cable.
2. Remove the lower panel. (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
3. Remove the knee bolster. (See [KNEE BOLSTER REMOVAL/ INSTALLATION.](#))
4. Remove the wiring harness clip.

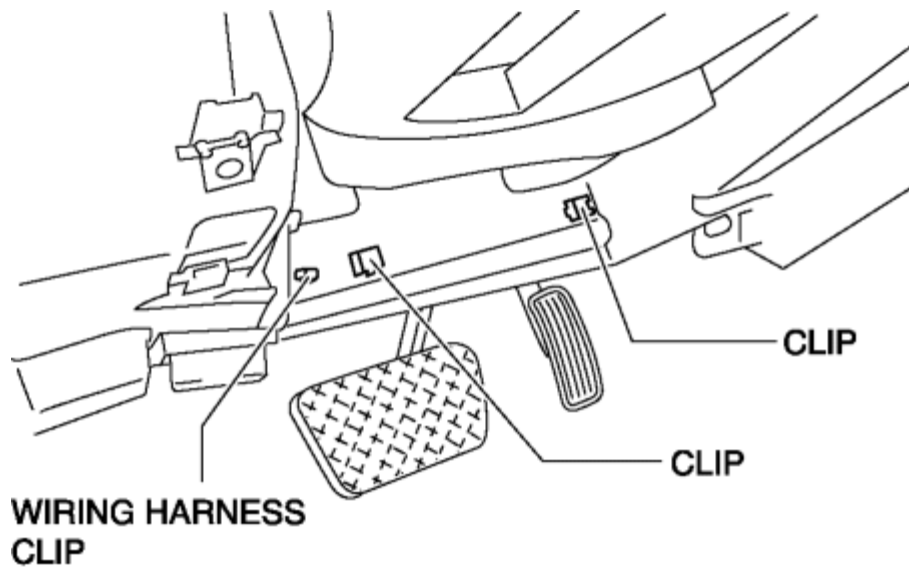

5. Remove the clips.
6. Remove the relay block.

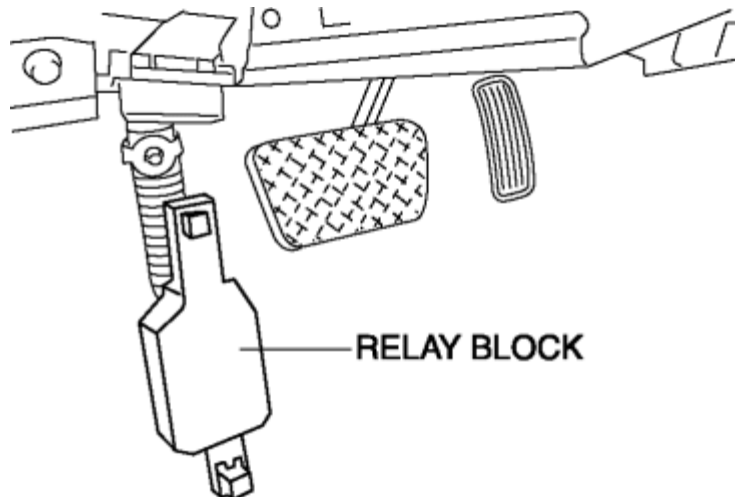

7. Disconnect the connectors.

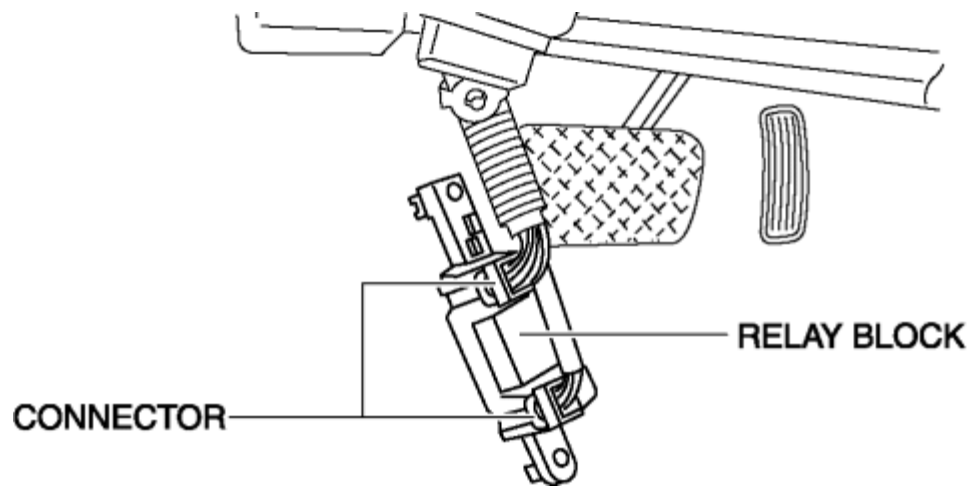

8. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

RELAY BLOCK REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]


1. Disconnect the negative battery cable.
2. Remove the lower panel. (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
3. Remove the knee bolster. (See [KNEE BOLSTER REMOVAL/ INSTALLATION.](#))
4. Remove the wiring harness clip.

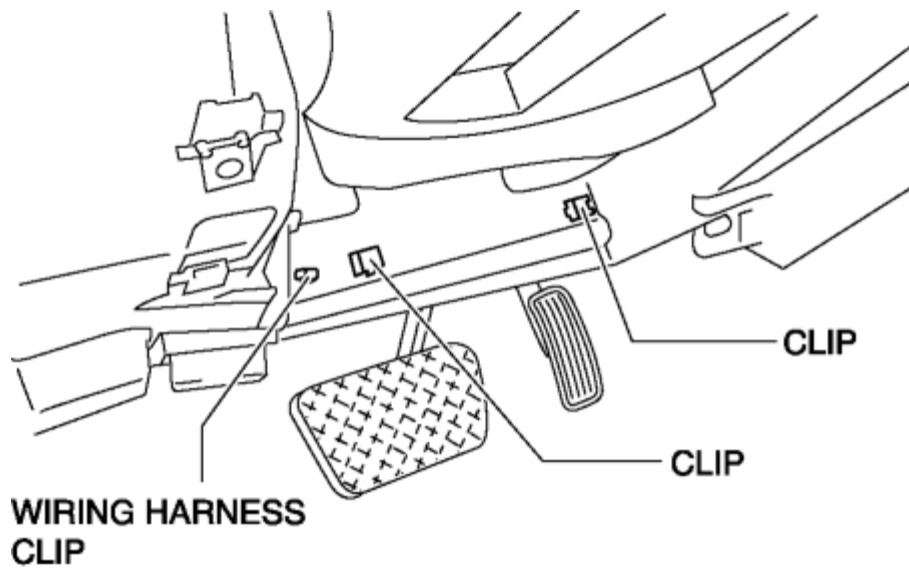

5. Remove the clips.
6. Remove the relay block.

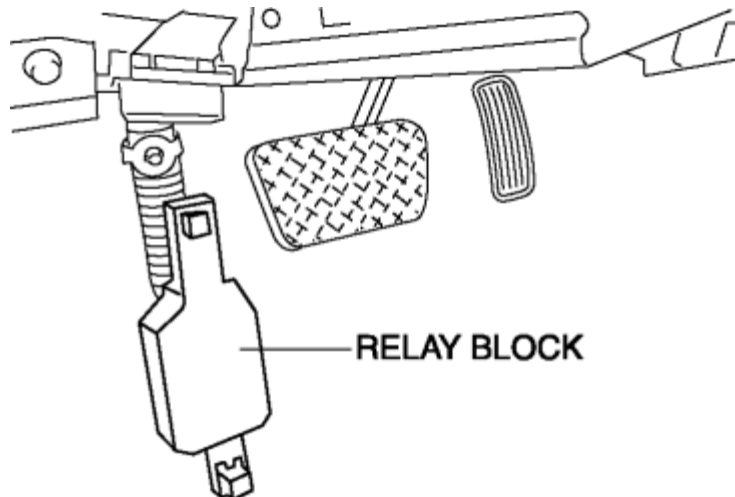

7. Disconnect the connectors.

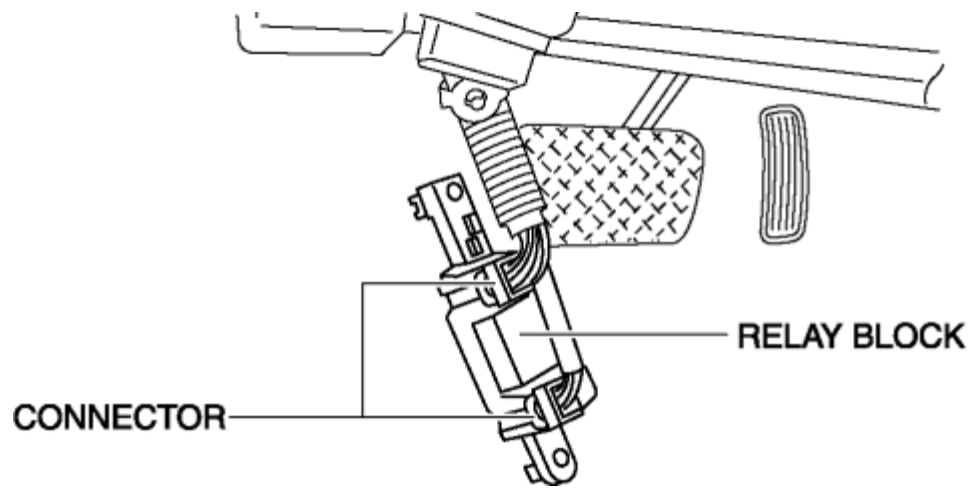

8. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.