



2012 - Mazda6 - Body and Accessories

FRONT DOOR TRIM REMOVAL/ INSTALLATION


1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#))
3. Pull the cover of inner handle and remove it while detaching tabs.

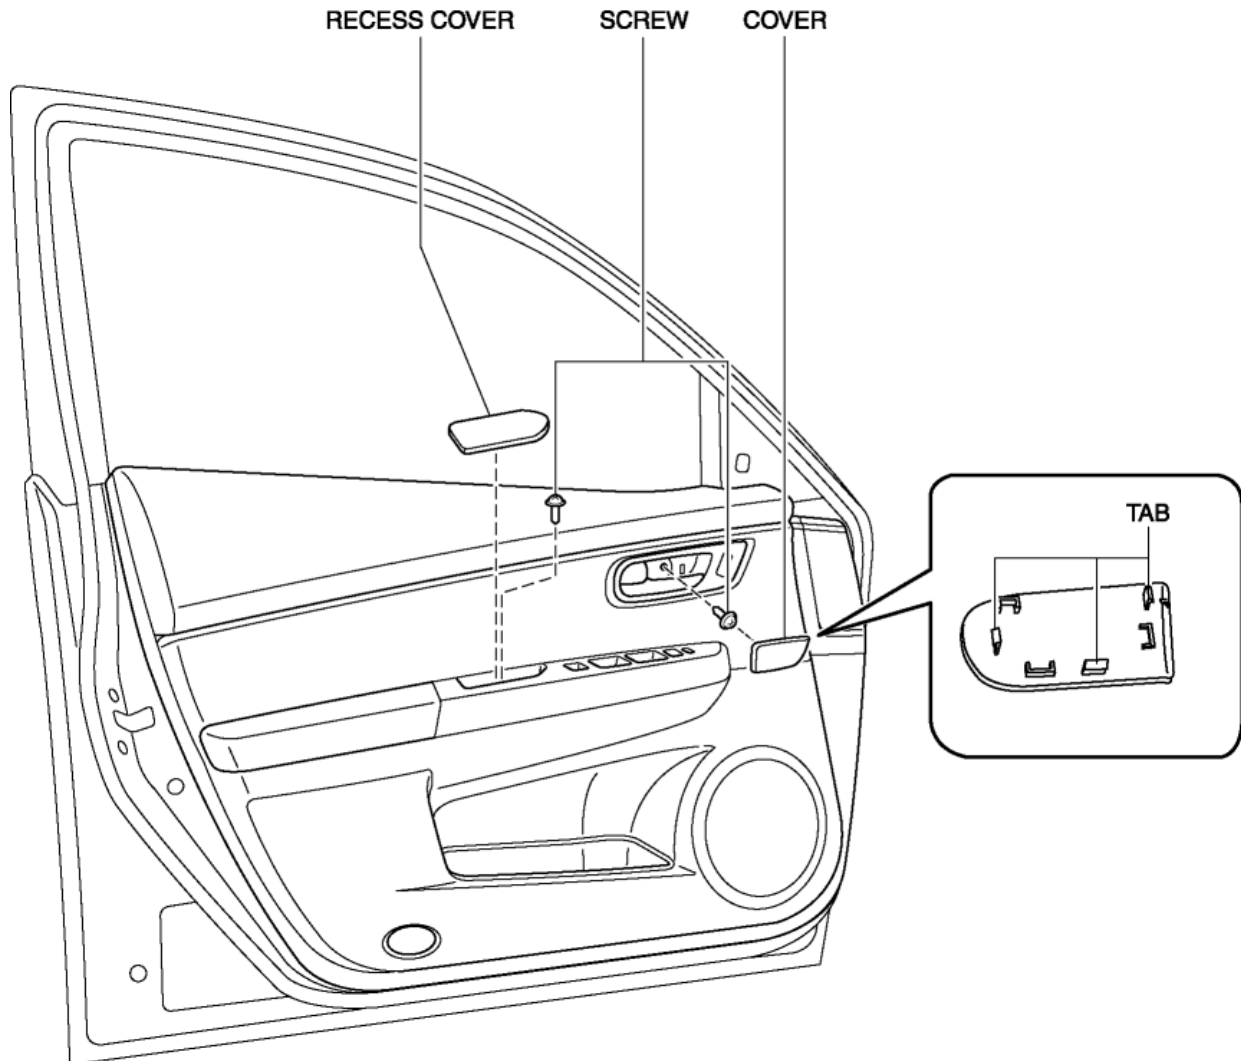

4. Remove the recess cover.
5. Remove the screws.
6. Pull in the direction of the arrow shown in the figure and remove clips from the door inner panel using a fastener remover.

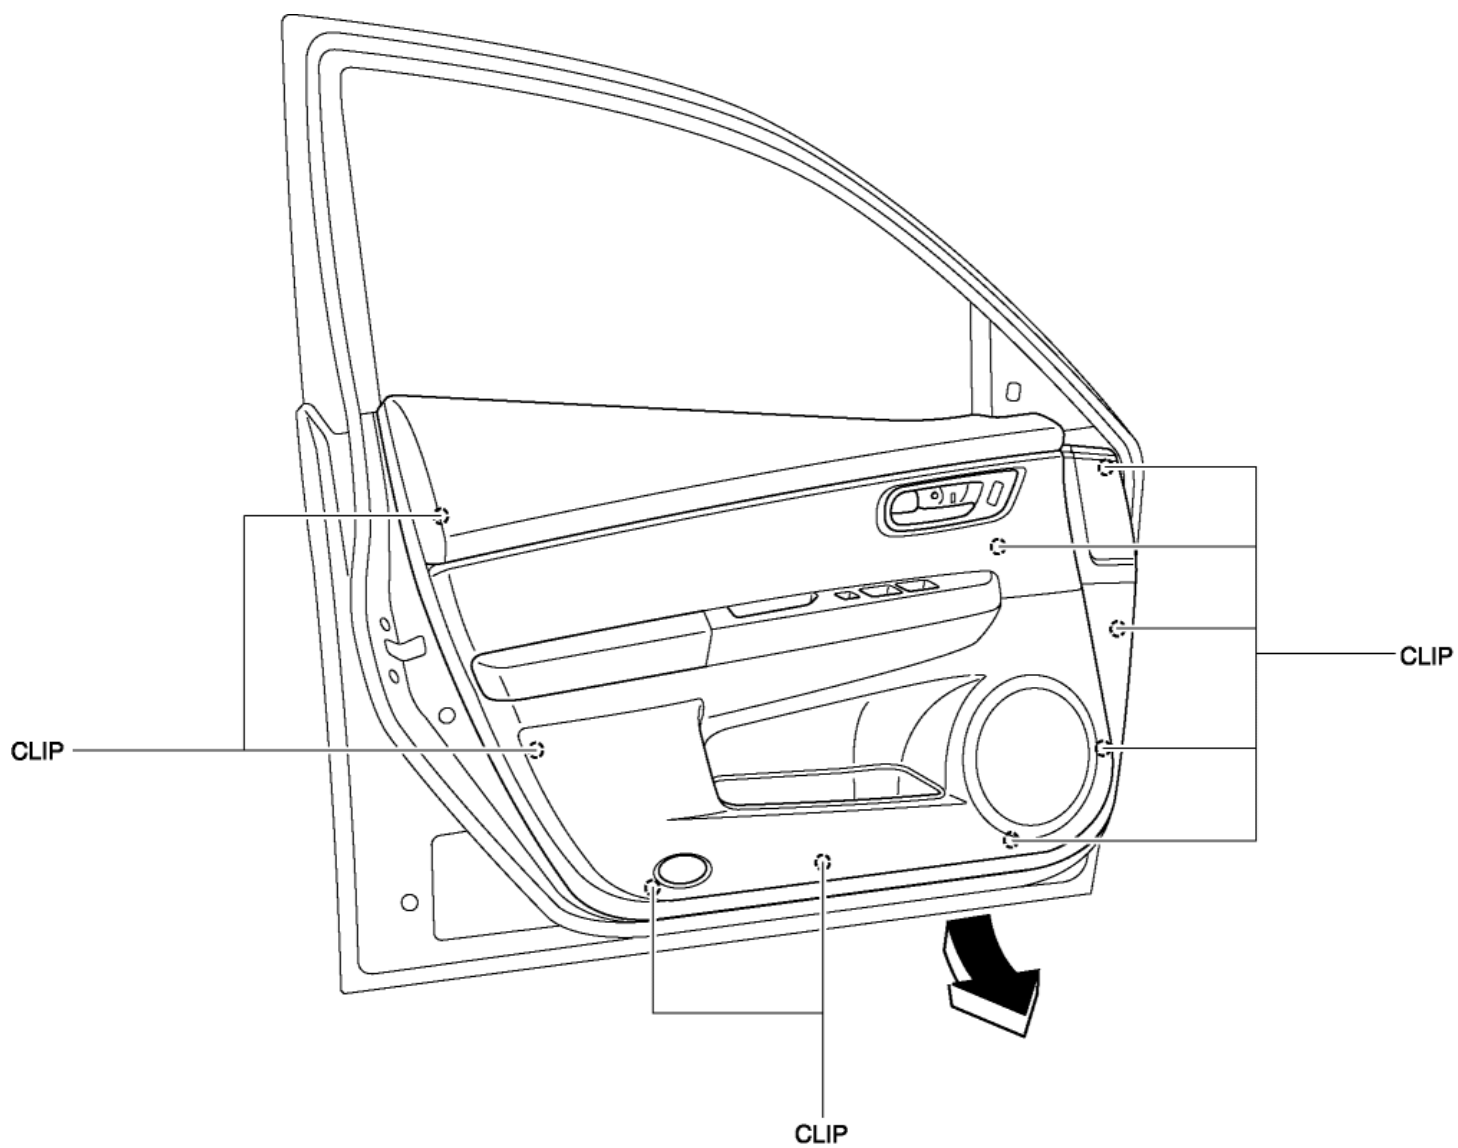


7. Remove the front door trim in the direction of the arrow shown in the figure.

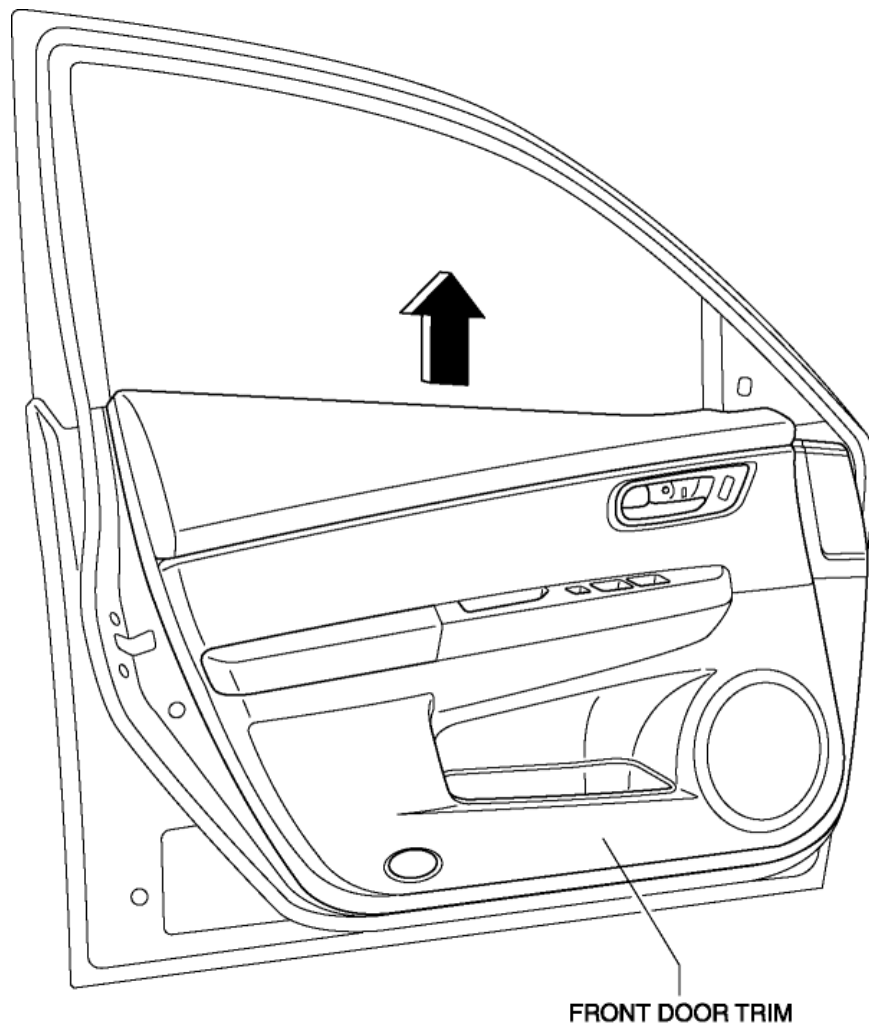


FRONT DOOR TRIM

8. Remove the inner handle and move the front door trim in the direction of the arrow shown in the figure.

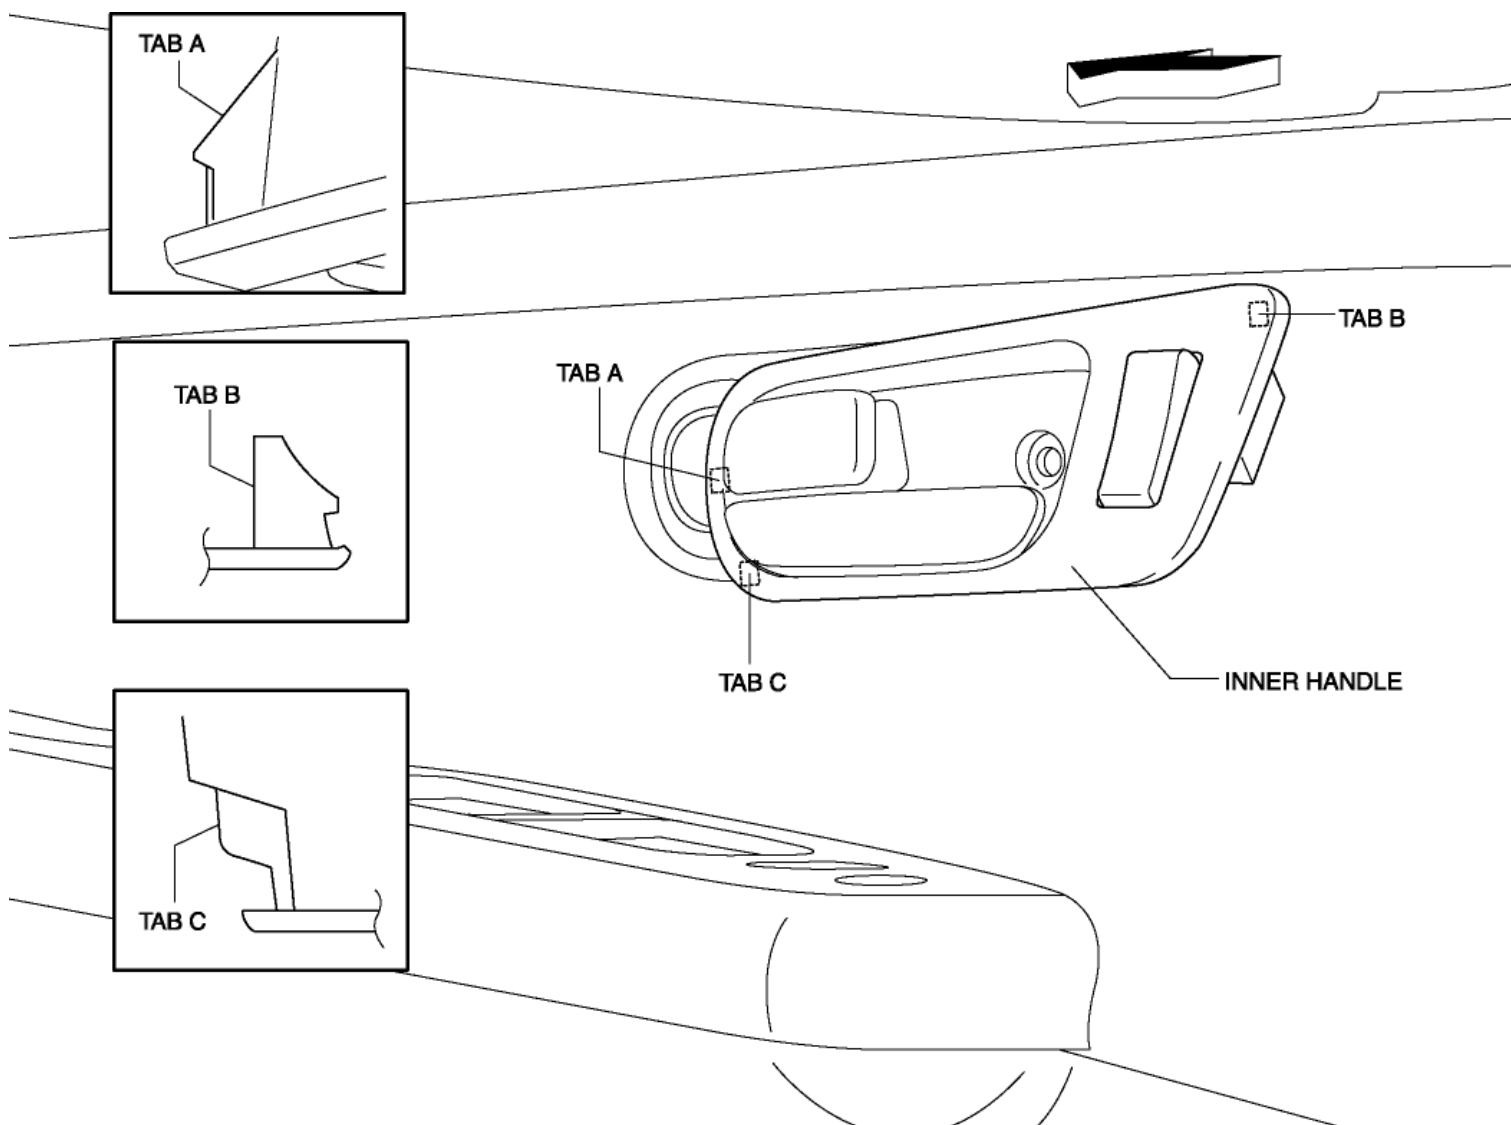

9. Turn the inner handle 90° in the direction of the arrow and remove it from the front door trim.

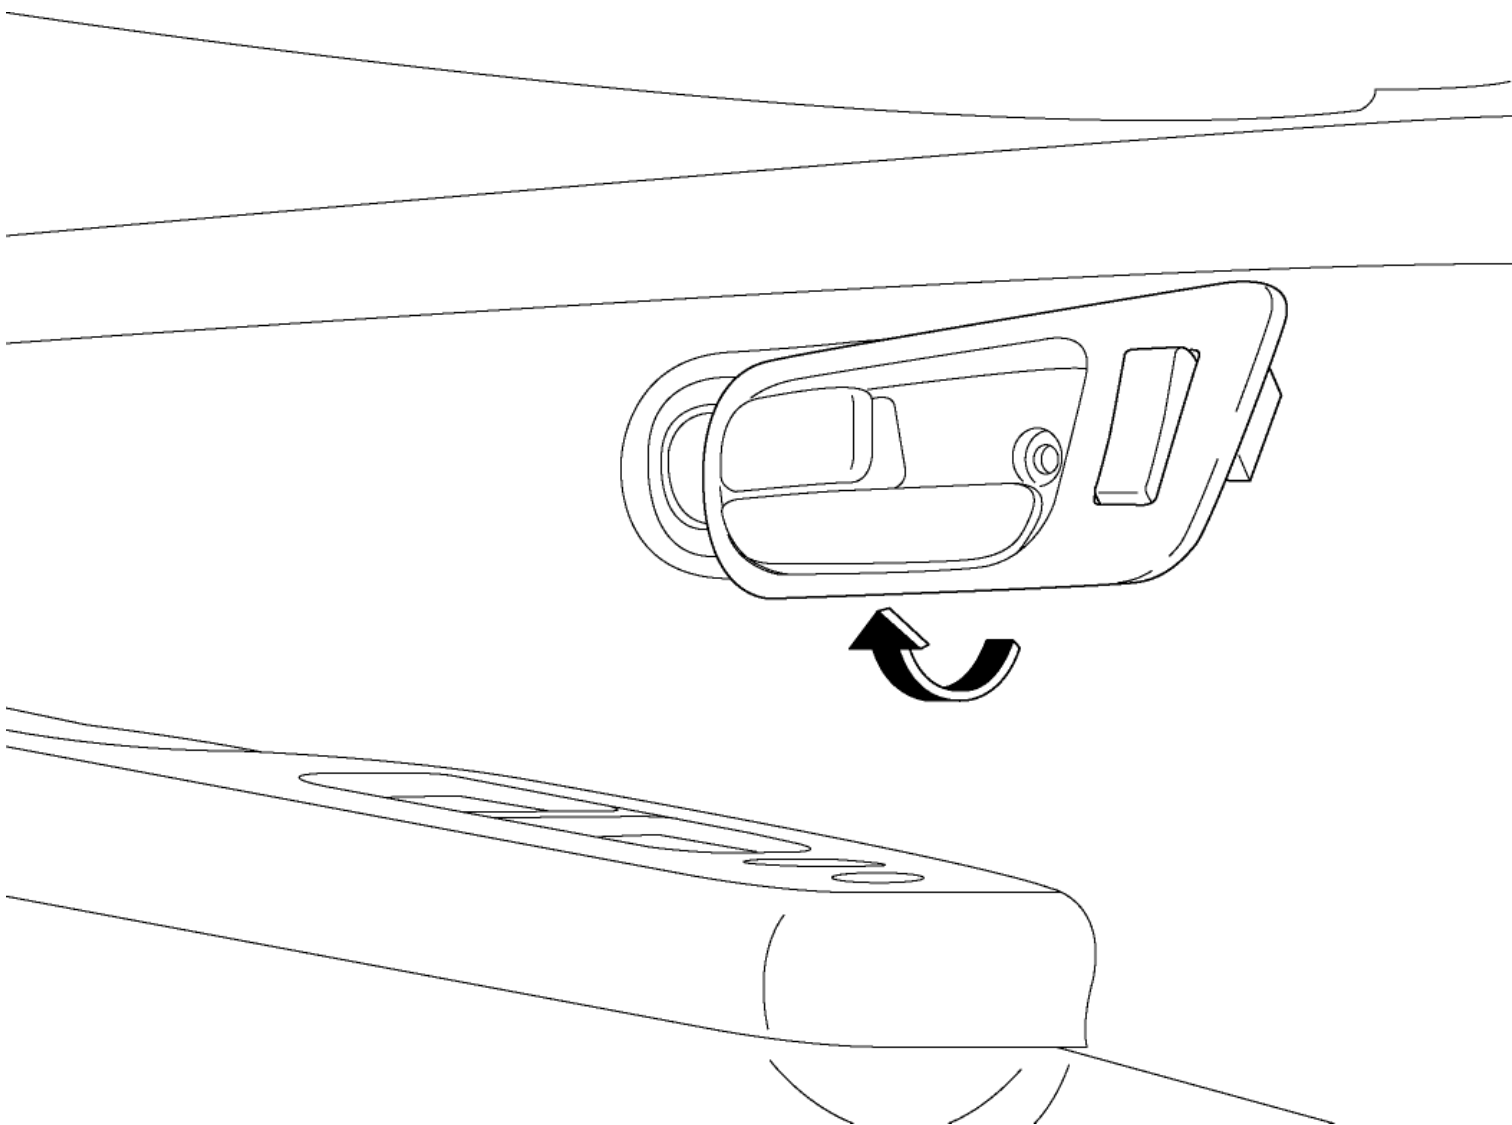


10. Disconnect the power outer mirror switch connector and power window main switch connector. (driver-side)
11. Disconnect the power window subswitch connector. (passenger-side)
12. Remove the door courtesy illumination bulb socket. (See [COURTESY LIGHT BULB REMOVAL/ INSTALLATION.](#))
13. Install in the reverse order of removal.


2012 - Mazda6 - Body and Accessories

FRONT DOOR TRIM REMOVAL/ INSTALLATION


1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#))
3. Pull the cover of inner handle and remove it while detaching tabs.

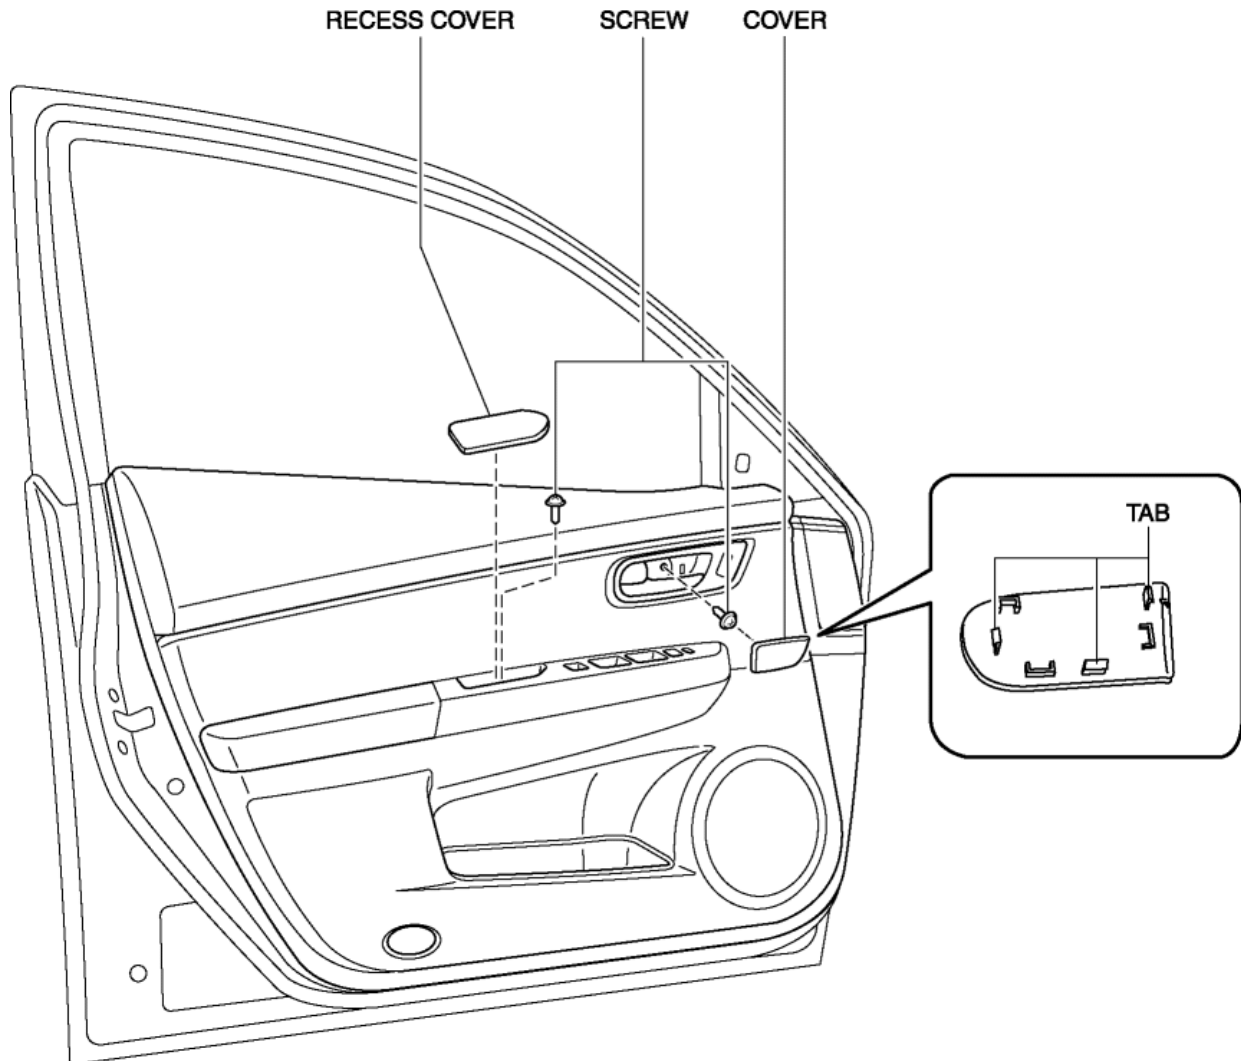

4. Remove the recess cover.
5. Remove the screws.
6. Pull in the direction of the arrow shown in the figure and remove clips from the door inner panel using a fastener remover.

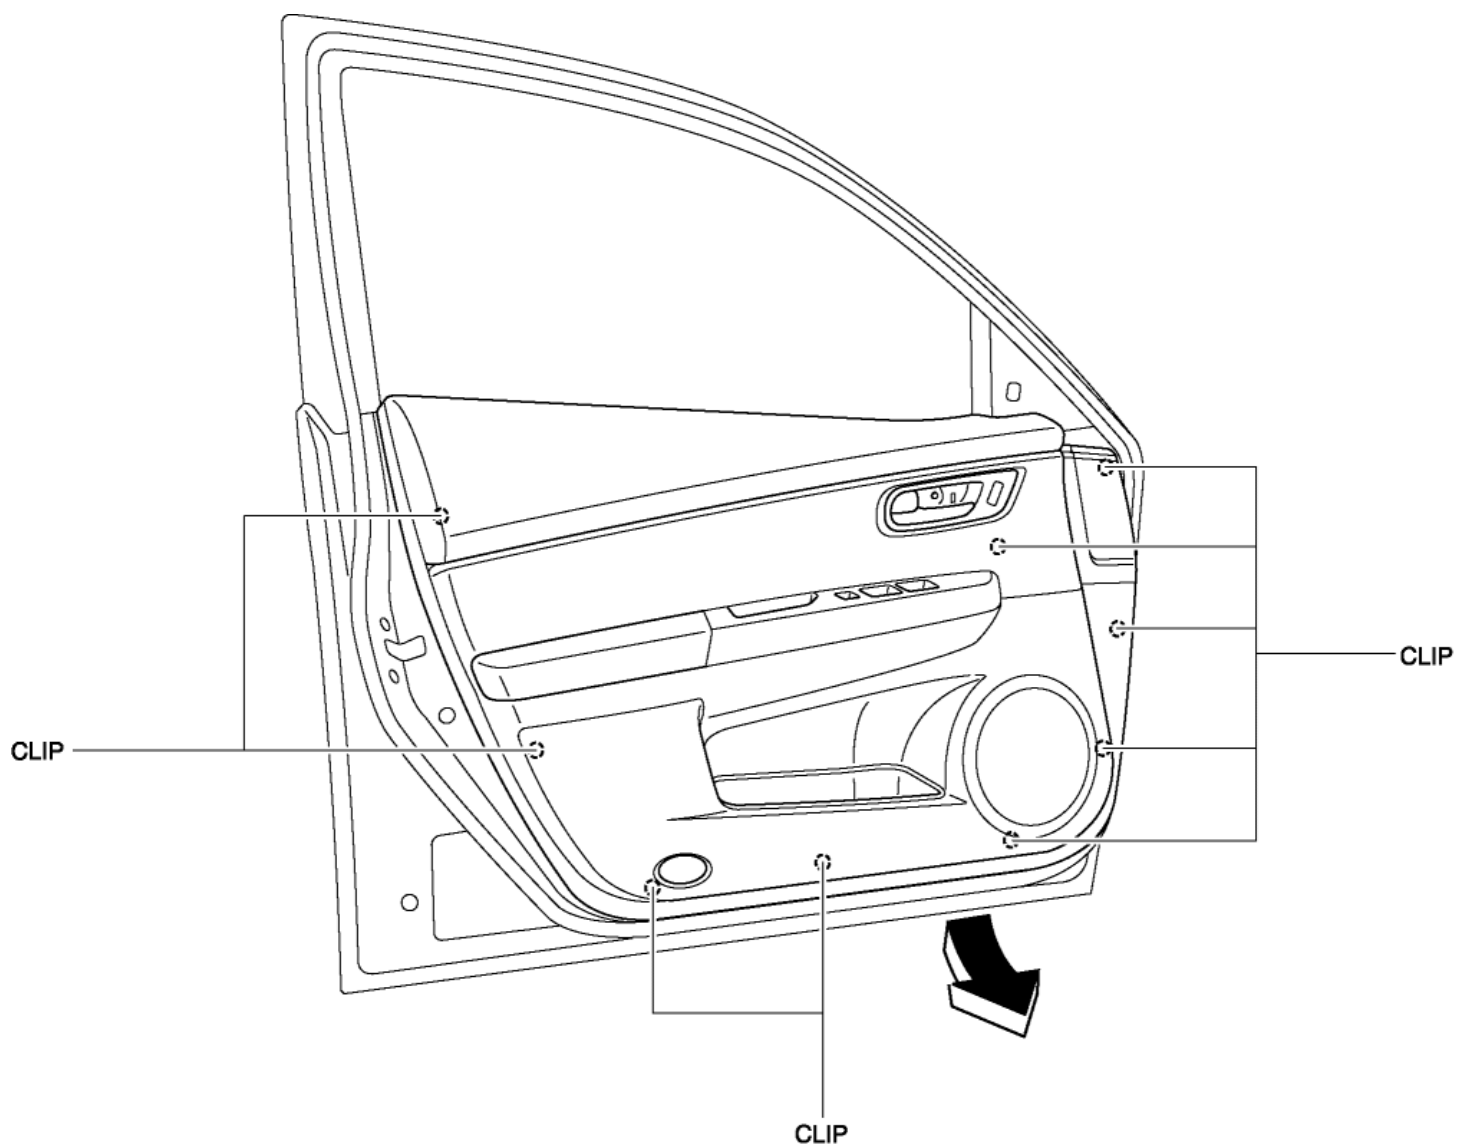


7. Remove the front door trim in the direction of the arrow shown in the figure.

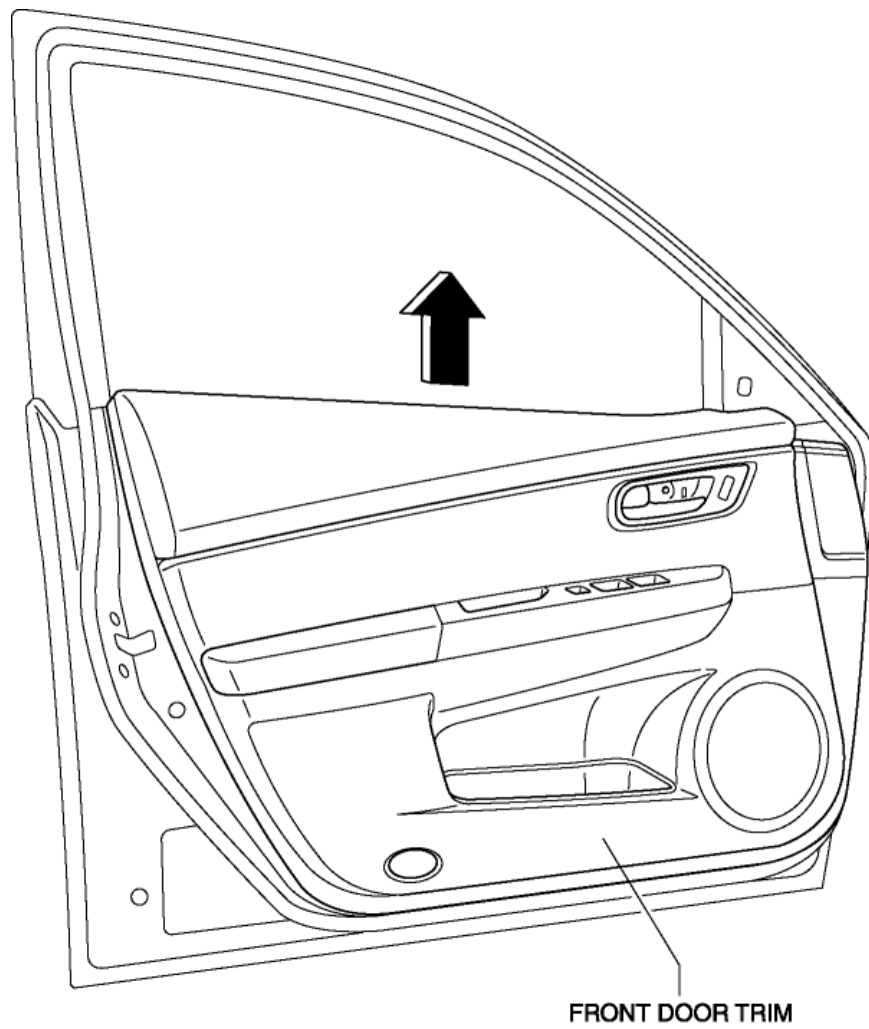


FRONT DOOR TRIM

8. Remove the inner handle and move the front door trim in the direction of the arrow shown in the figure.

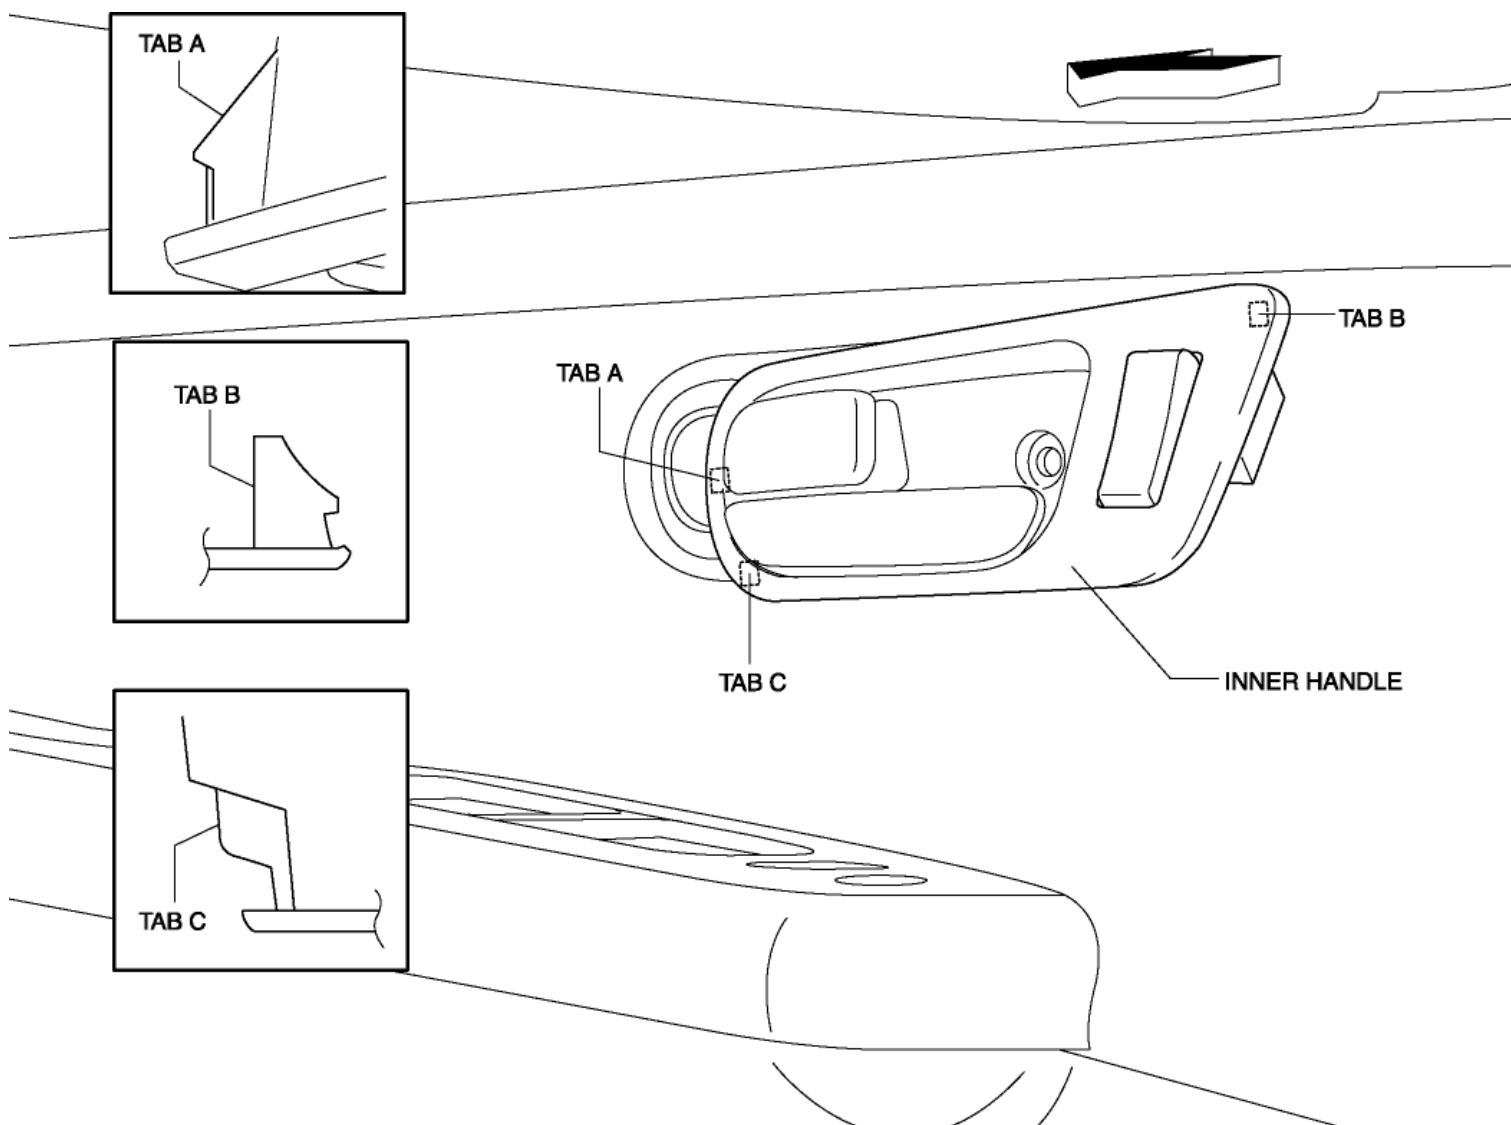

9. Turn the inner handle 90° in the direction of the arrow and remove it from the front door trim.

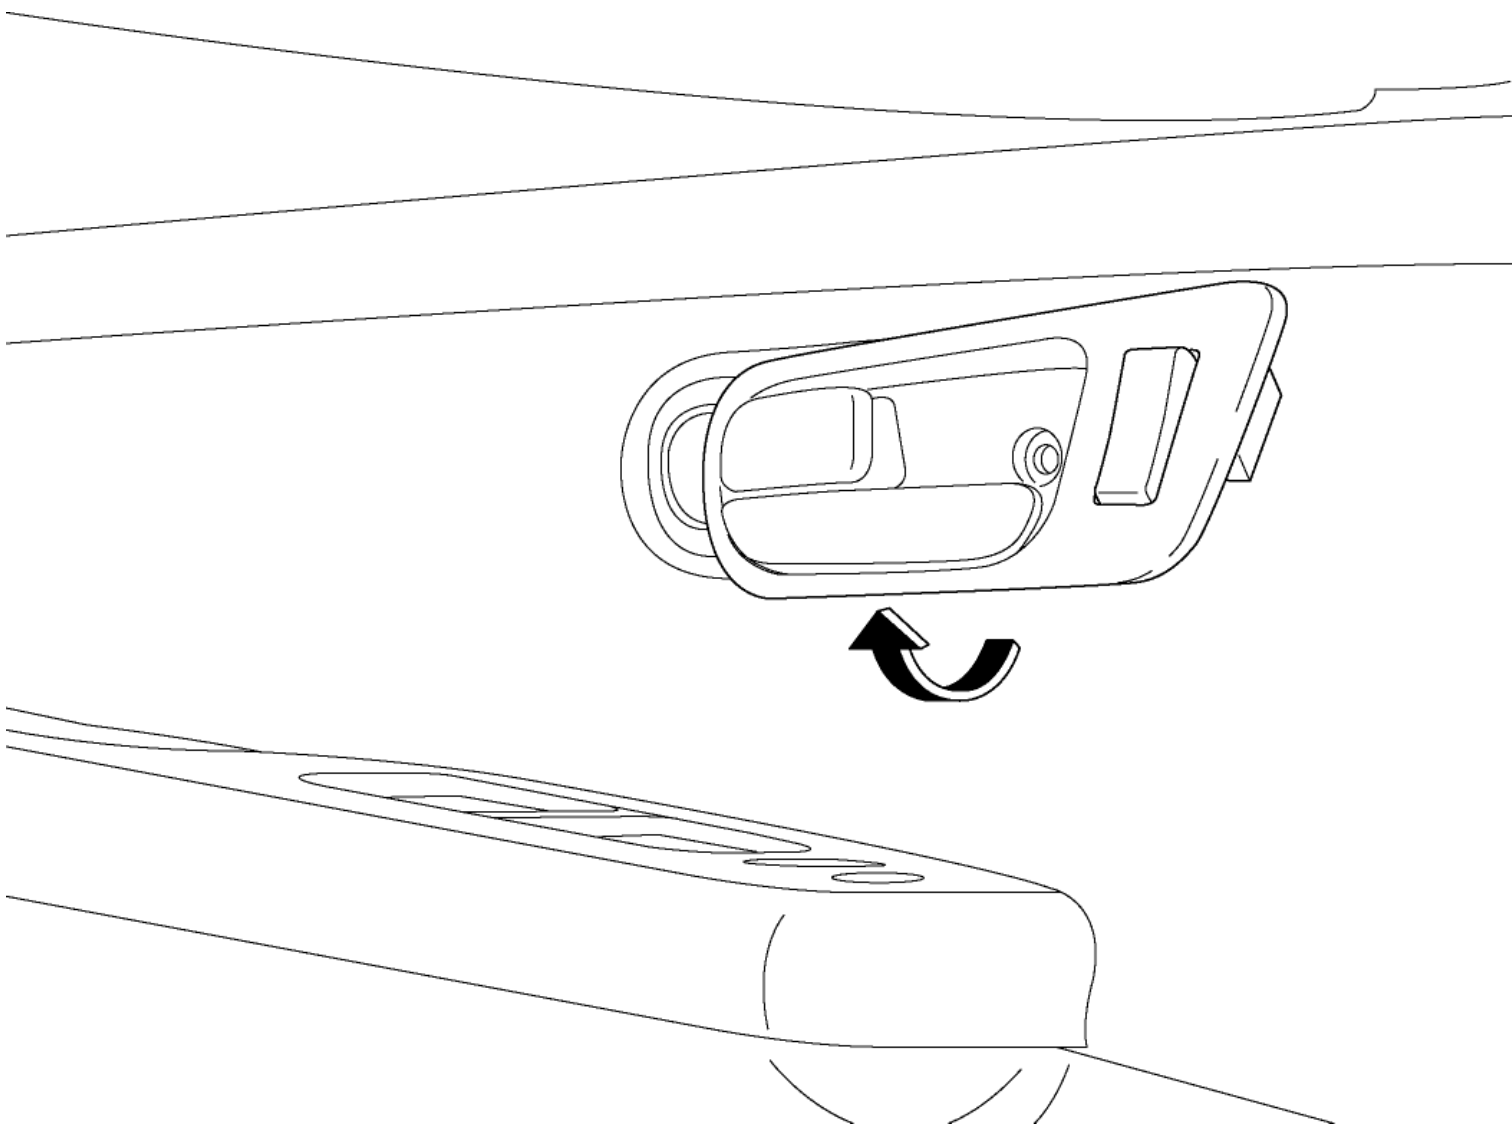

10. Disconnect the power outer mirror switch connector and power window main switch connector. (driver-side)
11. Disconnect the power window subswitch connector. (passenger-side)
12. Remove the door courtesy illumination bulb socket. (See [COURTESY LIGHT BULB REMOVAL/ INSTALLATION.](#))
13. Install in the reverse order of removal.