


2012 - Mazda6 - Brakes

REAR BRAKE (DISC) REMOVAL/ INSTALLATION


1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.
3. Add brake fluid, bleed the brakes, and inspect for leakage after the installation has been completed. (See [BRAKE FLUID AIR BLEEDING.](#))
4. After installation, depress the pedal several times, rotate the wheel by hand, and verify that the brake does not drag.

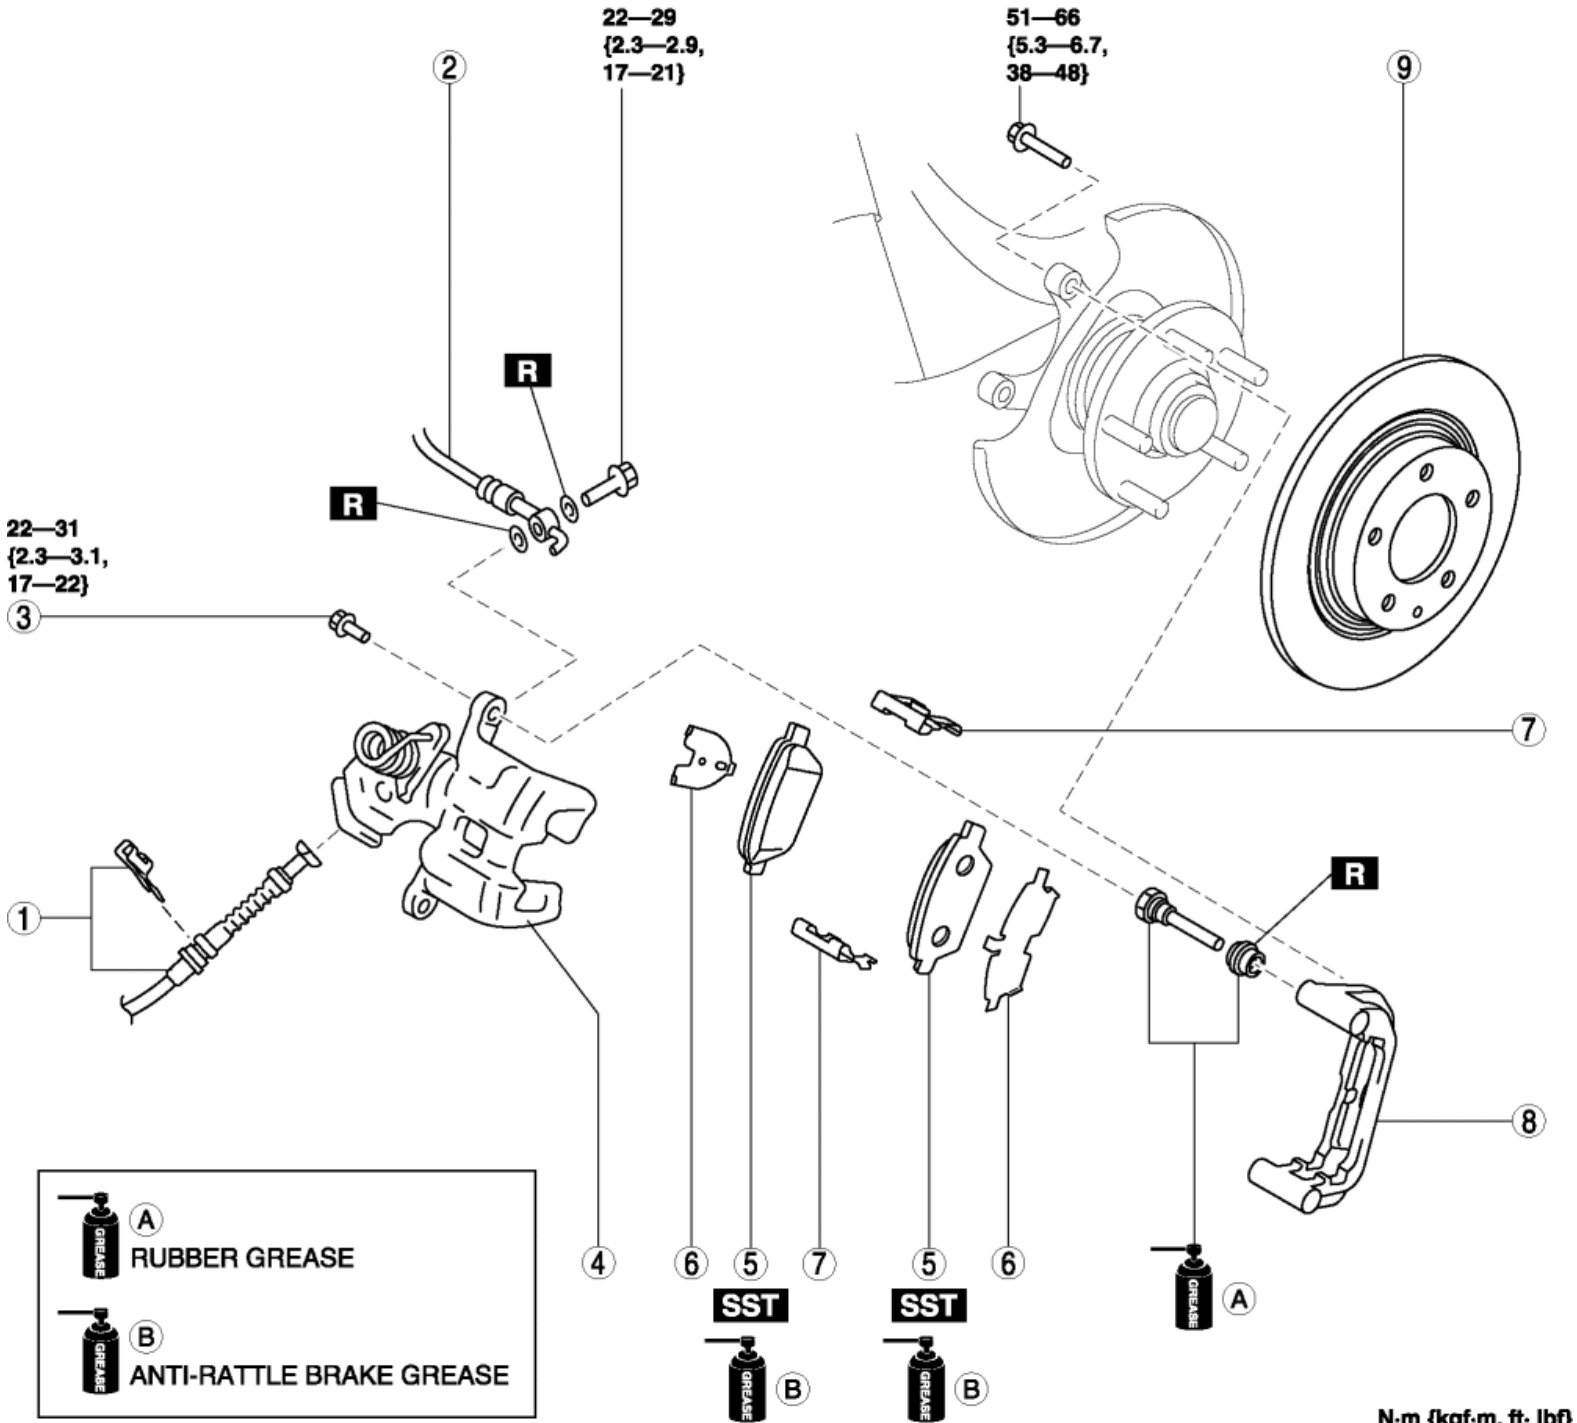


1	Parking brake cable, clip
2	Brake hose
3	Bolt
4	Caliper
5	Disc pad (See Disc Pad Installation Note .)
6	Shim
7	Guide plate
8	Mounting support
9	Disc plate

Disc Pad Installation Note

1. Push and turn clockwise the piston fully inward using the **SST**.

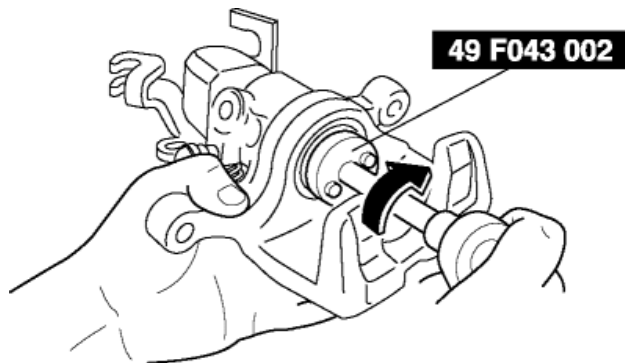

2. Apply the grease to the contact area of the disc pad guide plate.

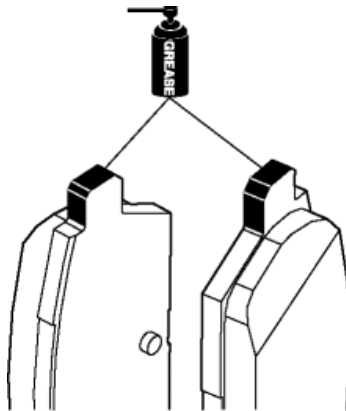


3. Install the disc pads.

2012 - Mazda6 - Brakes

REAR BRAKE (DISC) REMOVAL/ INSTALLATION

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.
3. Add brake fluid, bleed the brakes, and inspect for leakage after the installation has been completed. (See [BRAKE FLUID AIR BLEEDING.](#))
4. After installation, depress the pedal several times, rotate the wheel by hand, and verify that the brake does not drag.

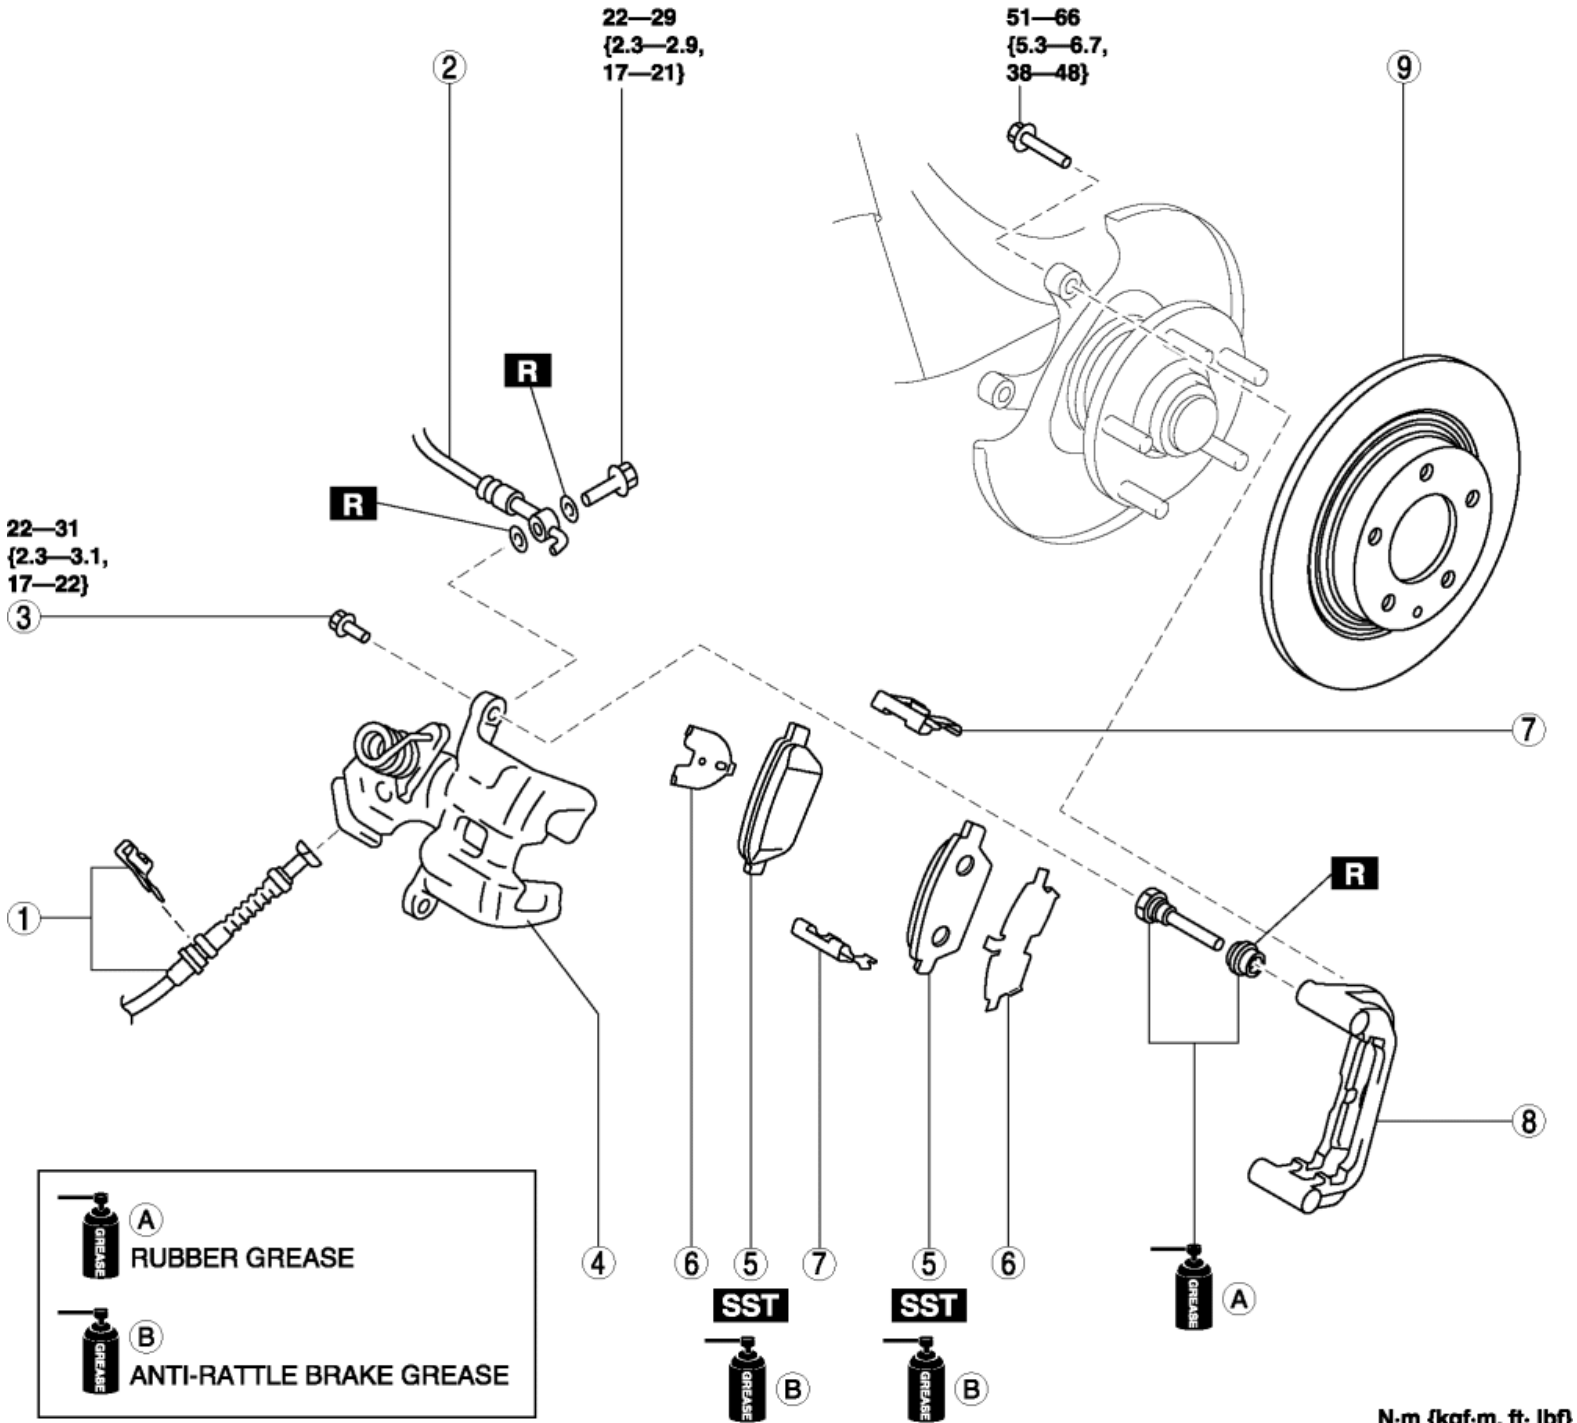


N·m {kgf·m, ft·lbf}


1	Parking brake cable, clip
2	Brake hose
3	Bolt
4	Caliper
5	Disc pad (See Disc Pad Installation Note .)
6	Shim
7	Guide plate
8	Mounting support
9	Disc plate

Disc Pad Installation Note

1. Push and turn clockwise the piston fully inward using the **SST**.

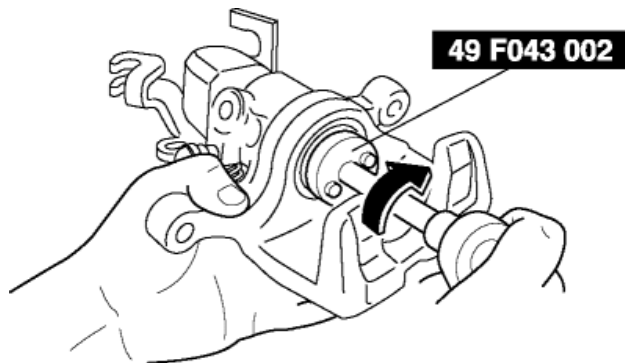

2. Apply the grease to the contact area of the disc pad guide plate.

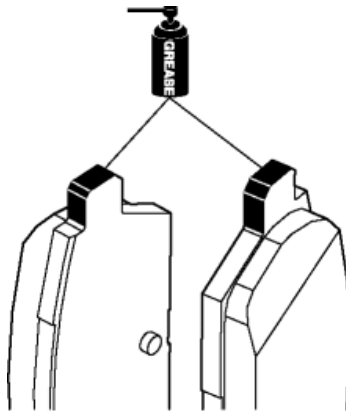

3. Install the disc pads.