


2012 - Mazda6 - Brakes

PARKING BRAKE LEVER INSPECTION

Stroke Inspection

1. Pull the parking brake lever two to three times.
2. Inspect the parking brake stroke by slowly pulling at point A **50 mm { 2.0 in }** from the end of the parking brake lever with a force of **98 N { 10 kgf, 22 lbf }** and counting the number of notches (clicking sound).

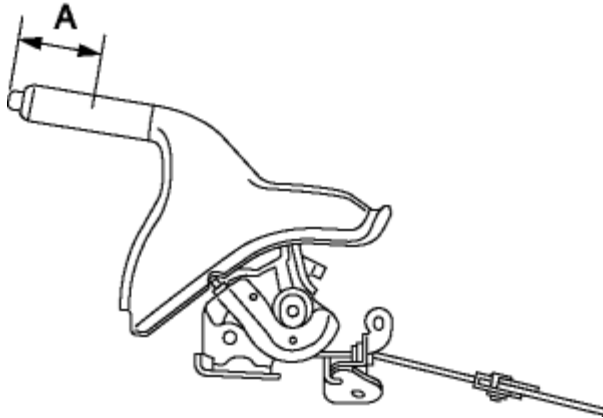

- If not within the specification, adjust the parking brake lever.

Parking brake lever stroke when pulled at 98 N { 10 kgf, 22 lbf }


- 2—4 notches

2012 - Mazda6 - Brakes

PARKING BRAKE LEVER INSPECTION

Stroke Inspection

1. Pull the parking brake lever two to three times.
2. Inspect the parking brake stroke by slowly pulling at point A **50 mm { 2.0 in }** from the end of the parking brake lever with a force of **98 N { 10 kgf, 22 lbf }** and counting the number of notches (clicking sound).

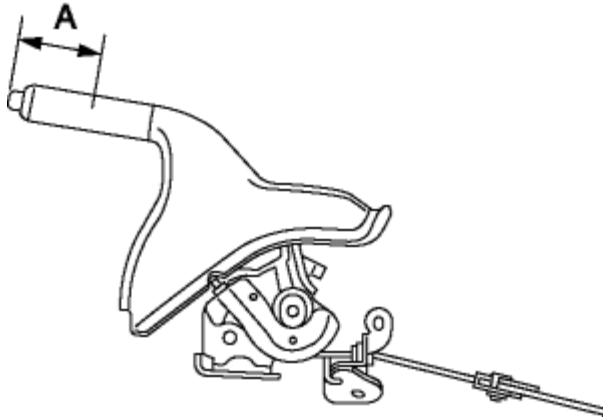

- If not within the specification, adjust the parking brake lever.

Parking brake lever stroke when pulled at 98 N { 10 kgf, 22 lbf }

- 2—4 notches