


2012 - Mazda6 - Transmission/ Transaxle

CLUTCH DISC INSPECTION [G66M-R]

1. Refer to CLUTCH UNIT REMOVAL/INSTALLATION to remove the clutch disc. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)
2. Using vernier calipers, measure the thickness of the lining at a rivet head on both sides.

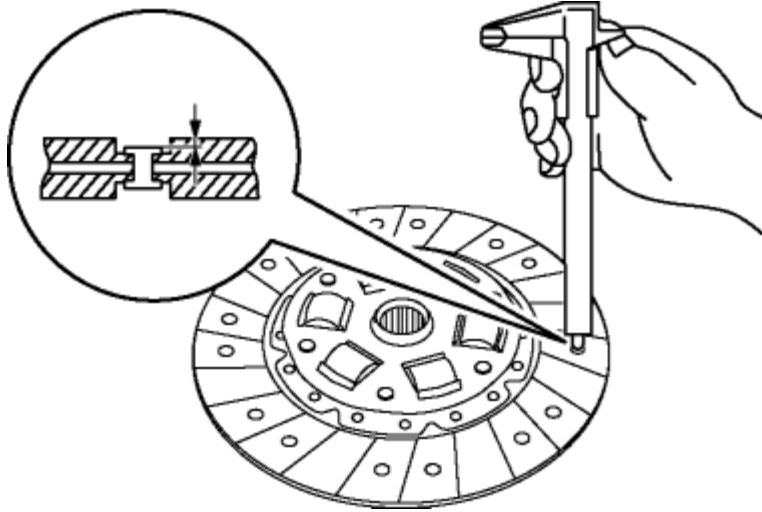


- If it is less than the minimum specification, replace the clutch disc. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)

Minimum clutch disc thickness

- 0.3 mm {0.01 in}

3. Measure the clutch disc runout using a dial indicator.

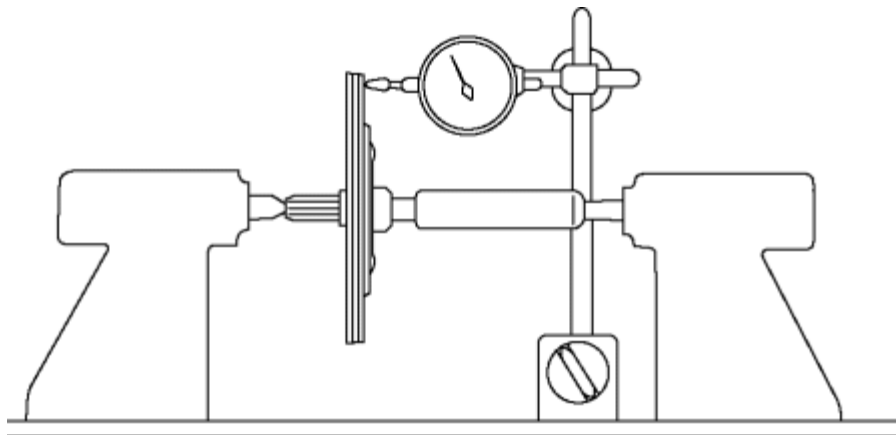

- If it exceeds the maximum specification, replace the clutch disc. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)


Maximum clutch disc runout

- 0.7 mm {0.03 in}

2012 - Mazda6 - Transmission/ Transaxle

CLUTCH DISC INSPECTION [G66M-R]

1. Refer to CLUTCH UNIT REMOVAL/INSTALLATION to remove the clutch disc. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)
2. Using vernier calipers, measure the thickness of the lining at a rivet head on both sides.

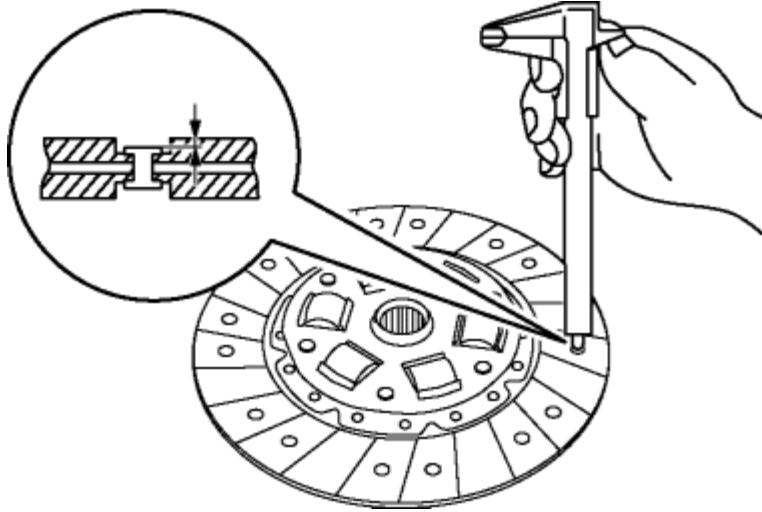


- If it is less than the minimum specification, replace the clutch disc. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)

Minimum clutch disc thickness

- 0.3 mm {0.01 in}

3. Measure the clutch disc runout using a dial indicator.

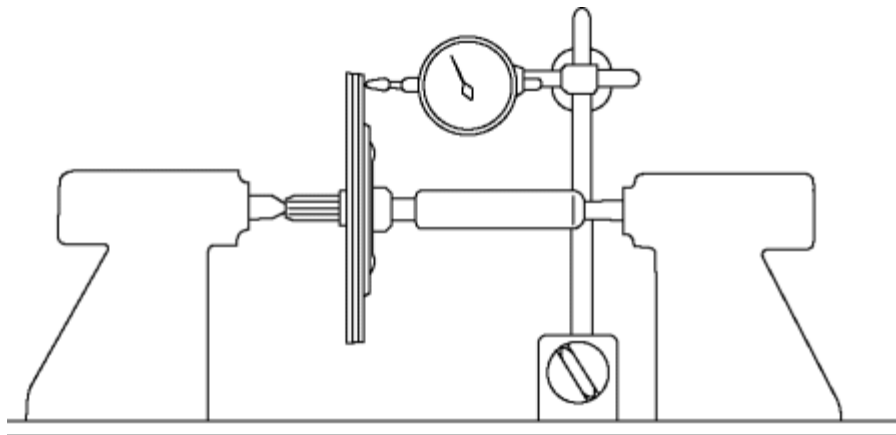

- If it exceeds the maximum specification, replace the clutch disc. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)

Maximum clutch disc runout

- 0.7 mm {0.03 in}

